For Diagrams:
Parts Souq - interactive searchable caytalog
mitsubishi edc- easy to save and print pages (links to amayama)

Buying Parts
Most off parts souq or amayama
yokohoma motors can source anything
Fesbest has some bushings

Machine Translated by Google

Thank you for purchasing the Pajero Mini.

JA12ACUa

This instruction manual explains how to properly handle your vehicle so that you can always drive it safely and comfortably. It also describes how to maintain your vehicle and what to do in case of an emergency, so please be sure to read it before use.

"For a safe drive" is important, so please read it carefully.

Safety Information

• The following indicates that the driver or other people may be injured and how to avoid this. These are important matters so please be sure to read and follow them.

caveat	Please be sure to observe these safety precautions. Failure to do so may result in death or serious injury.
Note	Please be sure to follow these safety precautions. Failure to do so may result in injury or accidents.
	Actions that must not be done for safety reasons (shown in the illustration)

Other display

• Information about your vehicle and other advice is listed under the following symbols.

advice	Things you should observe for your car. Useful things to know.

• Equipment and optional equipment that differ depending on the grade are listed by type. It displays:

• Please keep this instruction manual in your vehicle. •
For details on the warranty, inspection, and maintenance, please refer to the separate Maintenance Note.
• For instructions on how to use the Mitsubishi Multi Entertainment System, please refer to the separate Instruction Manual. • If
you give your vehicle to someone else, please keep the Instruction Manual and Maintenance Note in the vehicle. please.

• Please note that the contents of this manual may not fit your vehicle due to changes in equipment specifications, etc. • If you have
any questions, please contact a sales staff member in charge.

Machine Translated by Google

1. Pictorial Table of Contents

Instrument panel area ..... 1- 1 Interior 1- 2
Exterior.....1- 3
Engine Room.....1- 4

2. For a safe drive

Before you leave..... 2-2
When driving..... 2-5
Handling automatic vehicles..... 2-10
When parking and stopping.....
2-12 When carrying children..... 2-13
Handling 4WD vehicles 2-16
Be careful of the following 2-17
When using a self-service gas
station 2-21

3. Opening and closing of each part

Keys 3-2
Doors 3-2
Keyless Entry 3-4
Center Door Lock 3-5
Power Windows 3-6
Engine hood 3-8
Fuel lid (fuel filler
port) .....3-10 Back
door 3-11

4. Seats, seat belts, child seats, SRS Airbags

Front seats ..... 4- 2 Rear
seats ..... 4- 5 Head
restraints 4- 7
seat belts .....4-9 Child
seats .....4-14 SRS
airbags 4-18

5. Meter Switch

Meter 5- 2
Indicator and warning lights 5- 5
Indicator lights 5- 6
Warning lights ..... 5- 6 Light
switch ..... 5- 9 Headlight
leveling dial 5-11
Turn signal lever 5-12
Front wiper and washer switch 5-12
Rear wiper/
washer switch.....5-13
Emergency flasher
switch.....5-15
Rear window defogger
switch.....5-15 Front fog
lamp switch.....5-16 Horn switch.....

Machine Translated by Google

6. Driving device

Engine switch 6-
2 Before starting the engine 6-
3 How to start the engine 6-
4 Handling turbocharged
vehicles .....6- 6 Manual
transmission 6- 6
Automatic transmission (with shift lock device) 6- 7
Parking brake 6-15
Room mirror 6-16
Door mirrors 6-16
Side under mirrors 6-18
Anti-lock brake system
(ABS) 6-19

7. 4WD Car handling

Transfer shift lever 7- 2 4WD
operation indicator light ..... 7- 4 Good
driving of 4WD vehicles 7- 4
Precautions for handling 4WD vehicles .....
7- 7 After off-road driving 7- 8

8. Interior equipment

Sun visor 8- 2
Vanity mirror 8-
2 Ashtray 8-
3 Cigarette lighter 8-
4 Room lamp 8- 5
Clock.....8-
5 Glove box.....8-
6 Cup holders.....8-
6 Luggage floor box.....8- 7
Luggage hooks.....8- 7

9. Air conditioning

Air Outlet 9-2
Manual Air Conditioner 9-4
Clean Air Filter 9-8
Bio Clear Filter .....9- 8 How to Use Air
Conditioners Effectively 9- 9

10. audio

AM/FM Electronically Tuned
Radio & CD Player (with Clock) .....10-2 Error
Codes 10-11
Effective use of audio 10-12
Antennas 10-13

Machine Translated by Google

11. Simple maintenance and car care

Adding engine oil 11-2
Cleaning the fuel injection system 11-2
Checking and adding windshield washer fluid 11-3
Tire wear 11-3
Tire rotation 11-4
Interior care 11-5
Exterior care 11-6

12. Handling in cold weather

Pre-winter inspection and preparation.....
12- 2 Pre-driving inspection..... 12-
2 Driving on snowy or icy roads..... 12- 3
Parking in cold climates.....12- 4
Tire chains.....12- 4

13. What to do in case of an emergency

When the warning light comes on while driving!
..... 13- 2 If you hear
these sounds! ..... 13- 4 If you need help
with these problems! .....
13- 5 If something breaks down! 13- 7
When to use flares! ..... 13- 7 If the engine
stalls! ..... 13- 8 Tools and
jacks..... 13- 8 How to jack up the
vehicle..... 13- 9 Spare
tire..... 13-11
How to change tires .....13-13 Center
caps .....13-16 What to do if the
battery is dead! .....13-17 What to do if the vehicle
overheats! .....13-19 Towing 13-21
What to do if you hear a metallic rubbing noise from
the brakes! .....13-23 What to do if
the engine speed becomes unstable after replacing
the battery! .....13-24 What to do if the
fuse is blown! 13-24

14. Service Data

Service data..... 14-1 Tire and
wheel sizes..... 14-7
Tire Pressure.....14- 8

15. Index

Machine Translated by Google

MEMO

Machine Translated by Google

Pictorial Table of Contents

Instrument panel area

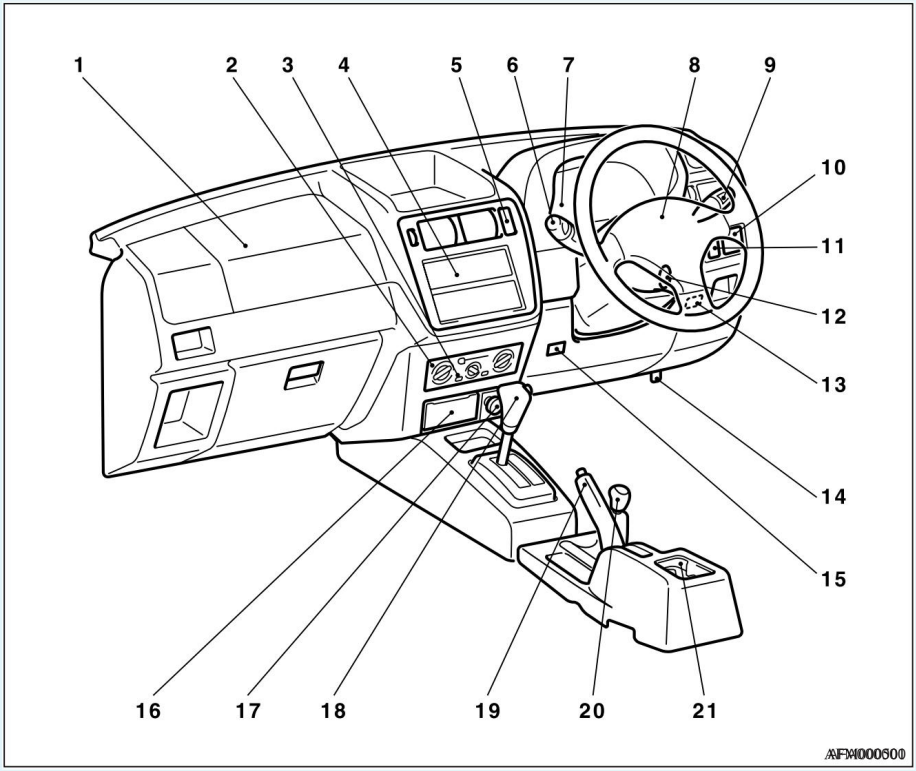

1 - Passenger SRS Airbag P.4-20 2 - Air Conditioner P.9-4 3 - Rear Window Defogger Switch P.5-15 4 - Audio P.10-1 Clock P.8-5 5 - Emergency Flasher Switch P.5-15 6 - Front Wiper/Washer Switch P.5-12 Rear Wiper/Washer Switch P.5-13

7 - Meter, indicator lamp, warning lamp P.5-2, 5-5 8 - Driver's SRS airbag P.4-19 Horn switch P.5-16 9 - Light switch P.5-9 Turn signal lever P.5-12 10 - Door mirror adjustment switch P.6-16

11 - Front fog lamp switch P.5-16 12 - Engine switch P.6-2 13 - Headlight leveling dial P.5-11

14 - Engine hood lever P.3-8 15 - Seat heater switch P.4-4 16 - Ashtray P.8-3 17 - Cigarette lighter P.8-4 18 - Shift lever (Manual car) P.6-6 Selector lever (automatic vehicles) P.6-7

19 - Parking brake P.6-15 20 - Transfer shift lever (4WD) P.7-2

21 - Cup holder (for front seats) P.8-6 • Includes differences in equipment specifications and options.

Machine Translated by Google

1 Indoor

JB21BCUc

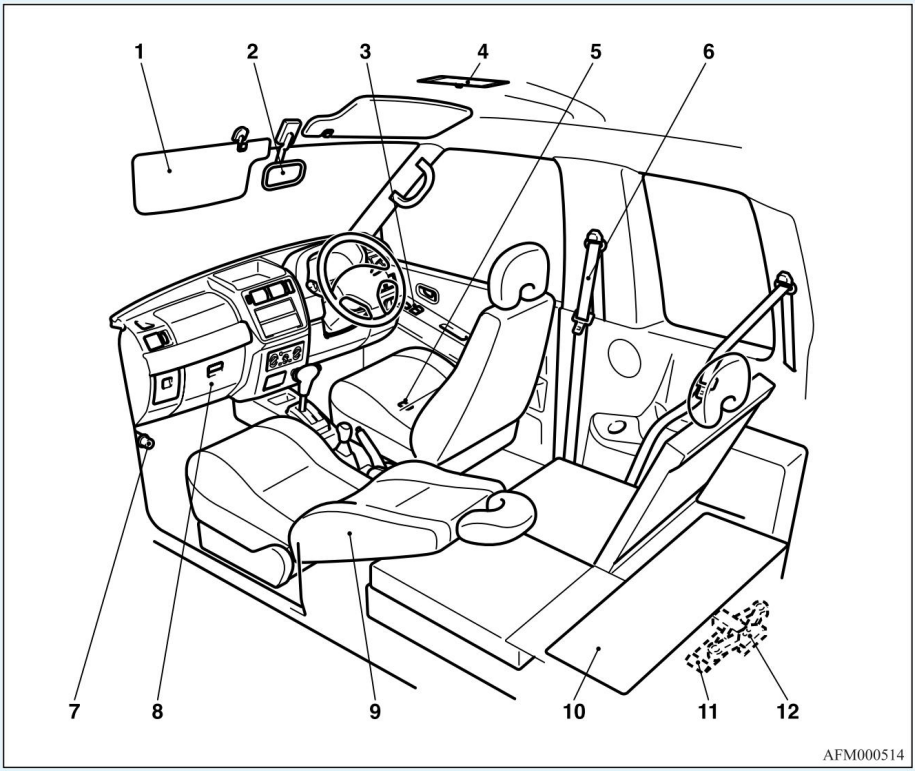

1 - Sun visor P.8-2 2 - Rearview mirror P.6-16 3 - Power window switch P.3-6 4 - Interior lamp P.8-5 5 - Fuel lid opener P.3-10 6 - Seat belt P.4-9 7 - Flares P.13-7 8 - Glove Box P.8-6 9 - Seats P.4-2 10 - Luggage Floor Box P.8-7 11 - Tools P.13-8 12 - Jack P.13-8

• Includes differences in equipment specifications and options.

Machine Translated by Google

Exterior

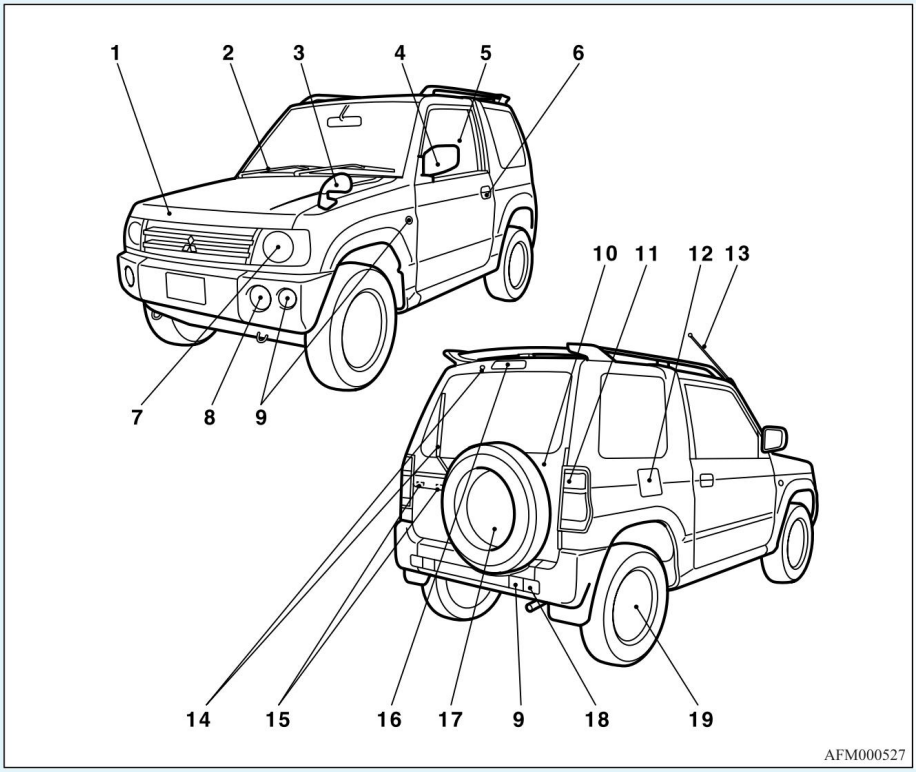

1 - Engine hood P.3-8
Engine compartment
P.1-4 2 - Front wiper/washer
P.5-12
3 - Side Under Mirror P.6-18 4 - Door
Mirror P.6-16 5 - Power
Window P.3-6 6 - Door Locking/
Unlocking P.3-3
Keyless Entry P.3-4 7 -
Headlights/Sidelights P.5-11, 14-5 8 - Fog
Lamps P.5-16, 14-5 9 - Turn
Signals/Emergency Flashers
P.5-12, 5-15, 14-5
10 - Back door P.3-11 11
- Reverse light
P.14-5 12 - Fuel lid P.3-10
13 - Antennas P.10-13
14 - Rear wiper/washer P.5-13 15 - Number
plate light P.5-9, 14-5 16 -
High mounted stop lamp P.14-5 17 - Spare tire
P.13-11 18 - Brake light/tail
light P.5-9, 14-5 19 - Tire and
wheel size P.14-7 Tire pressure P.14-8 Tire
change P.13-13 Tire
rotation P.11-4 Tire
chains P.12-4

• Includes differences in equipment specifications and options.

Machine Translated by Google

Engine Room

JB21FCUb

Excluding turbo cars

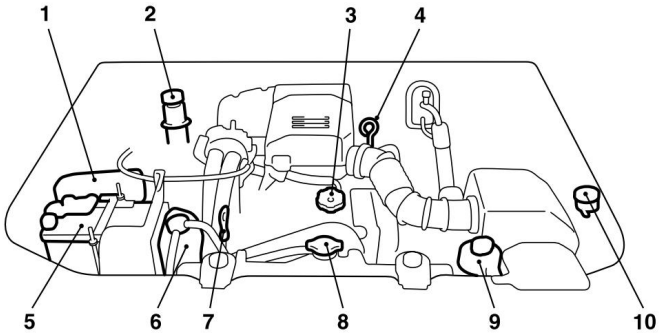

Turbo car

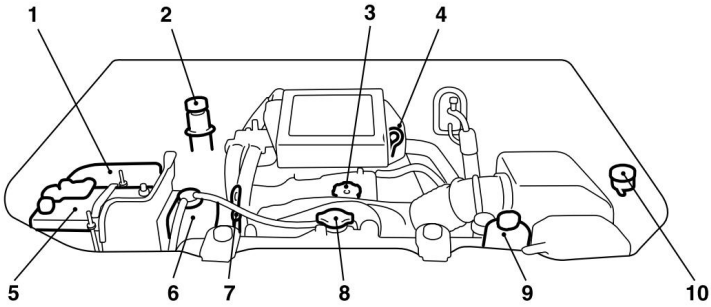

Q02A449N

1 - Fuse box P.13-24 2 - Brake fluid tank 3 - Engine oil filler cap 4 - Automatic transmission oil level gauge (automatic vehicles)

5 - Battery P.13-17 6 - Condensate Tank 7 - Engine Oil Level Gauge 8 - Radiator Cap P.13-20 9 - Power Steering Fluid Tank 10 - Front and Rear Washer Tanks P.11-3

Machine Translated by Google

MEMO

Machine Translated by Google

MEMO

Machine Translated by Google

For a safe drive

Before you leave 2- 2

When driving.....2- 5

Handling of Automatic Vehicles.....2-10

When parking/stopping.....2-12

When carrying children 2-13

Handling 4WD vehicles 2-16

Also pay attention to the following 2-17

When using a self-service gas station.....2-21

Machine Translated by Google

For a safe drive

Before departure

JC31AAEd

Daily inspections should be carried out at appropriate times.

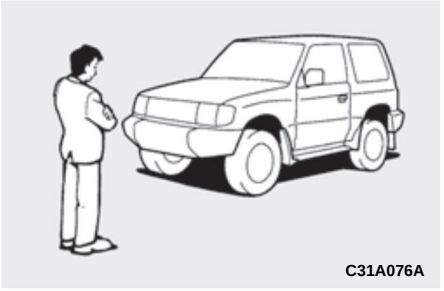

C31A076A

Advice : • Daily inspections are carried out by the customer when driving long distances, washing the vehicle, refueling, etc. Be sure to carry out these inspections to prevent accidents and breakdowns. • The items and procedures for daily inspections are described in the separate "Maintenance Notes", so be sure to read them.

When inspecting the engine compartment

WARNING • Do not put your hands in the engine compartment while the engine is running. Your hands or clothing may get caught in the drive belt, etc. • Some parts in the engine compartment can become very hot. To avoid the risk of burns, wait until all parts have cooled down sufficiently before inspecting them.

advice

• Exhaust gas emissions and other factors have been adjusted to meet established standards, so engine adjustments such as idling speed should be done at your Mitsubishi Motors dealer.

Do not bring fuel containers or spray cans into the car.

C31A077A

caveat

• If fuel containers or spray cans are left in the car, the containers may burst or the evaporating gases may ignite and explode.

Machine Translated by Google

Always wear your seat belt

C31A078A

⚠

WARNING : Please read the "Seat Belts" section for the correct way to fasten your seat belt.

ÿ P.4-9 •

Make sure all passengers also wear seat belts.

Don't start the engine through the window

⚠ Caution :

• Make it a habit to sit in the driver's seat in the correct driving position and start the engine. For manual vehicles, put the shift lever into (N) and press the clutch pedal all the way down. For automatic vehicles, make sure the selector lever is in the (P) position. In either case, press the brake pedal with your right foot to start the engine. ÿ "Before starting the engine" P.6-3 Do not start the engine from outside the vehicle, such as through a window. This may lead to an unexpected accident.

Advice : Manual vehicles are equipped with a clutch start system.

What is a clutch start system? To prevent accidental operation, this is a device that prevents the engine from starting unless the clutch pedal is fully depressed.

Machine Translated by Google

For a safe drive

Do not leave the engine running in an enclosed area with poor ventilation.

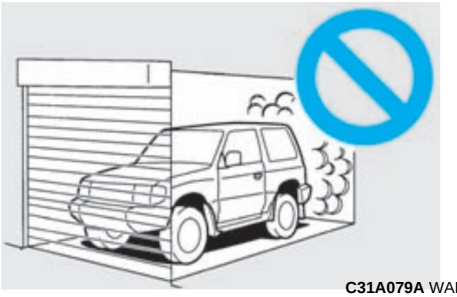

C31A079A WARNING : If an object

> WARNING : • Exhaust fumes may cause gas poisoning. • If exhaust fumes are unavoidable, ensure adequate ventilation.

Check the driver's foot area

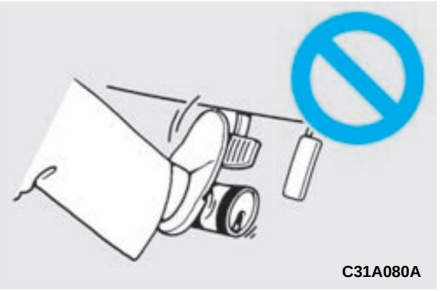

C31A080A

> rolls under the brake pedal, it may become impossible to operate the brakes.

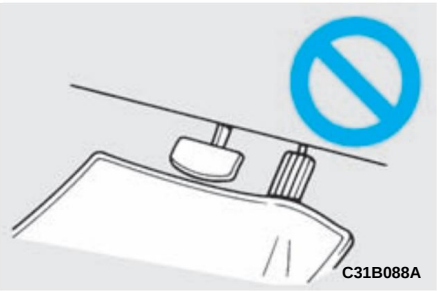

C31B088A

> WARNING : • Be sure to properly lay floor mats that fit your vehicle and do not get caught in the pedals. Also, be sure to secure the mats securely with clips attached to the carpet on the vehicle side to prevent them from slipping. Covering the pedals or laying mats on top of each other can interfere with pedal operation and may lead to a serious accident.

Machine Translated by Google

Supply specified fuel

⚠ Caution :

Always refuel with unleaded gasoline. Do not use leaded gasoline, inferior gasoline, alcohol-based fuel, or gasoline additives (including water removers) other than those provided by Mitsubishi Motors Genuine Parts. Doing so may damage the exhaust gas purification system or injection system.

ÿ "Service Data" P.14-1

When loading luggage

⚠ Caution :

• Place luggage as low as possible and do not load it higher than the seat height. This can lead to unexpected accidents, such as not being able to see behind you or luggage being thrown forward when braking suddenly and causing injury. In addition, the vehicle may shake more when cornering, which can lead to unexpected accidents. • Load heavy luggage as far forward as possible. If luggage is too heavy at the back, the steering becomes unstable. • Secure luggage securely to prevent it from falling over.

When driving, use JC31BAK

Do not shut off the engine while driving

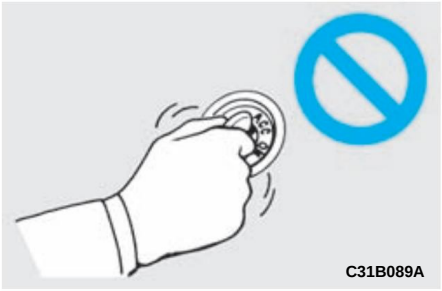

C31B089A

⚠ Caution :

If you stop the engine while driving, the braking will become less effective and the steering will become extremely heavy.

• If the key is removed, the steering wheel will be locked and you will not be able to steer it, which may lead to an accident.

Machine Translated by Google

For a safe drive

Passengers must not recline their seats and lie down while driving.

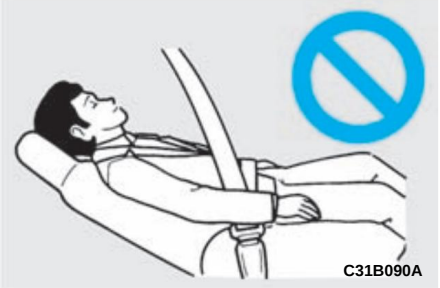

⚠
WARNING : If you lie down, in the event of sudden braking or a collision, your body may slip under the seat belt and you may be seriously injured by the seat belt.

Avoid sudden starts, sudden acceleration, sudden braking and sudden steering.

⚠ caveat

• Sudden braking or steering may result in loss of control of the vehicle and lead to an unexpected accident.

When starting out

⚠
CAUTION : After parking or waiting at a traffic light, etc., make sure to check the area around the car for children,

obstacles, etc. before driving off. When backing up,
always look behind you. There are blind spots that cannot be seen in the rearview mirror.

Caution for vehicles with power steering

Advice : Do not

keep the steering wheel turned all the way while the engine is running for a long period of time.

This may cause poor oil lubrication and damage the power steering pump.

Machine Translated by Google

Precautions when driving in the rain or through puddles

⚠

CAUTION • Drive slowly in the rain or on wet roads and avoid sudden braking and steering. Be especially careful when it starts to rain as roads can be slippery. • If water gets on the brakes after driving through a puddle or after washing the car, the brakes may temporarily become less effective. If the brakes become less effective, drive slowly, paying close attention to the vehicles in front and behind you, and lightly depress the brake pedal several times until the brakes return to their normal effectiveness to allow the wetness to dry. • Driving at high speed through ruts or other areas where water has accumulated can make hydroplaning more likely. • Worn tires or tires with incorrect air pressure can make you more susceptible to slipping or hydroplaning.

What is hydroplaning?

When driving at high speed on a flooded road, if the vehicle exceeds a certain speed, the tires are unable to remove the water from the road surface, causing the vehicle to slide on the water, resulting in loss of control of the vehicle.

Use engine brake when going downhill

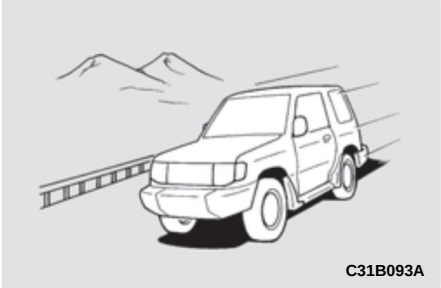

⚠

WARNING : Avoid sudden engine braking on wet or icy roads as this may cause the vehicle to slip and result in a serious accident.

⚠

Caution : Using only the foot brake too much on a long downhill slope can cause vapor lock or brake fade, resulting in poor braking performance. Be sure to also use the engine brake according to the gradient of the slope.

What is engine braking?

This is the braking force applied when you take your foot off the accelerator pedal while driving, and it is more effective in lower gears.

What is vapor lock? The brake fluid becomes overheated and boils due to the frictional heat of the brakes, generating bubbles, which causes the brakes to stop working even when the brake pedal is pressed, simply compressing the bubbles.

What is fade? Fade is a phenomenon in which the friction surface of the brake pad or brake lining becomes overheated, reducing friction and causing the brakes to become less effective.

Machine Translated by Google

For a safe drive

Do not use the brake pedal as a footrest

⚠

CAUTION : Do not constantly place your foot on the brake pedal or use it as a footrest.

This can cause the brake parts to wear out quickly and the brakes to overheat and become less effective.

When you get stuck

⚠

Caution : If the vehicle becomes stuck, do not rotate the tires at high speeds. This may cause the tires to burst or overheat, leading to an unexpected accident.

When the vehicle receives a strong impact under the floor

advice

• If the vehicle is subjected to a strong impact, immediately stop it in a safe place and check the underside.

Brake fluid or fuel leaks or damage may lead to an unexpected accident. If you find leaks or damage, do

not continue using the vehicle and contact your Mitsubishi Motors dealer.

When the warning light comes on

⚠ Caution :

If the warning light comes on, stop the vehicle in a safe place and take appropriate measures. ÿ "If the warning light comes on while driving!" P.13-2 Driving

with the light on may cause an unexpected accident or damage to the engine, etc.

When the radiator is hot

⚠ caveat

• Do not remove the radiator cap when the radiator is hot. Steam or boiling water may spray out and cause burns.

Machine Translated by Google

If a tire gets flat or bursts while driving

WARNING : If a tire bursts or punctures while driving, you may lose control of the vehicle. Hold the steering wheel firmly and apply the brakes gradually to slow down.

advice

• The following may indicate a puncture or burst:
• When the steering wheel is pulled • When there is abnormal vibration • When the vehicle is tilted abnormally

Always start the engine when moving your car

Caution :

If the engine is not running, the brakes will not work properly and the steering will be very heavy, which may lead to an unexpected accident. Always start the engine when moving the vehicle up a slope.

Do not drive with your foot on the clutch pedal

Advice : Do not drive with your foot on the clutch pedal or operate the clutch half-engaged for longer than necessary, as this can cause the clutch to wear out prematurely or overheat, leading to an unexpected accident.

Machine Translated by Google

Handling of automatic vehicles

JC31C-Ge

Before engine start

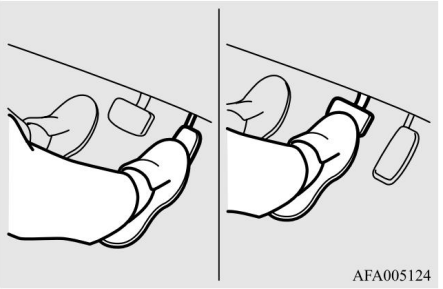

⚠ Caution :

To avoid accidentally stepping on the accelerator pedal and the brake pedal, check the position of each pedal with your right foot.

⚠ Note

• The selector lever is in the position.

• Start the engine while keeping your right foot on the brake pedal.

If the engine is difficult to start without depressing the accelerator pedal, start the engine and then move your foot to the brake pedal. ÿ "How to start the engine in extreme cold" P.6-5

After engine start

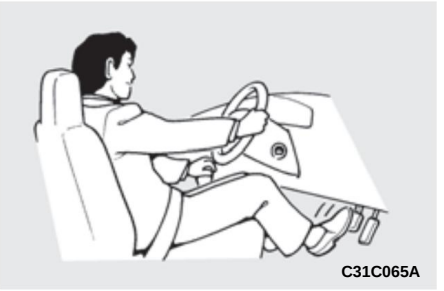

⚠ Caution :

Operate the selector lever while pressing the brake pedal with your right foot. Immediately after starting the engine or when the air conditioner is running, the engine speed increases and the creep phenomenon becomes stronger, so be sure to press the brake pedal firmly. A buzzer will sound when this is selected. Please note that the buzzer cannot be heard from outside the vehicle.

Creep is a phenomenon unique to automatic vehicles where, when the selector lever is in a position other than , the power is connected and the car starts to move slowly even without pressing the accelerator pedal.

Machine Translated by Google

Start

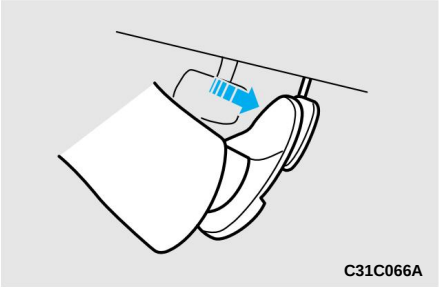

⚠

WARNING : When starting off, do not operate the selector lever while depressing the accelerator pedal, as this may cause the vehicle to accelerate suddenly and result in a serious accident.

⚠ Caution :

When starting off, gradually release your foot from the brake pedal and slowly press the accelerator pedal.

While driving

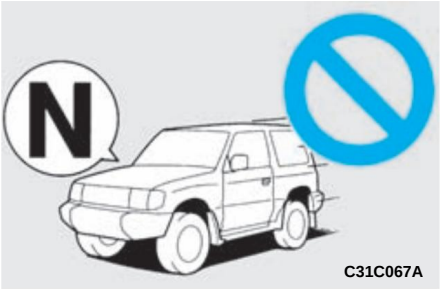

⚠

WARNING : Never put the selector lever into while Ⓝ driving. If you accidentally put it into Ⓟ , Ⓡ and the engine brakes do not work at all, it may lead to a serious accident.

Parking

⚠ Caution :

When parking, be sure to apply the parking brake while keeping your foot on the brake pedal and place the selector lever in the Ⓟ position.

Advice : The key cannot be removed from the engine switch unless the selector lever is in the Ⓟ position.

Machine Translated by Google

For a safe drive

When parking, use JC31D-Ea

Do not park your car near flammable objects

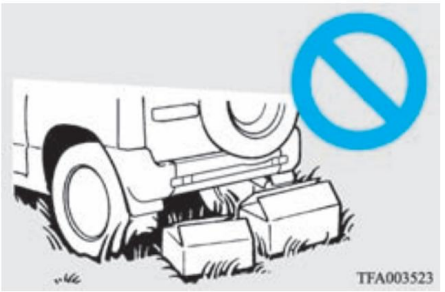

⚠

WARNING : Do not park your vehicle near flammable materials such as dried grass or paper. The exhaust pipe becomes very hot after driving and may cause a fire.

advice

• Avoid idling for long periods of time. If you are going to stop for a long time, turn off the engine. Not only does it waste fuel, but the exhaust gas contains toxic substances and is a nuisance to those around you.

Always turn off the engine when taking a nap

⚠

WARNING • Exhaust fumes may cause gas poisoning. • Unintentionally moving the shift lever or selector lever or depressing the accelerator pedal may lead to a serious accident, such as unintentional starting. • Continuously depressing the accelerator pedal unintentionally may cause overheating or a fire due to abnormal overheating of the engine or exhaust pipe.

Machine Translated by Google

When parking on a slope, fully apply the parking brake, shift the gears and place wheel chocks.

Caution :

When parking on a slope, be sure to apply the parking brake and put the shift lever in or for manual transmissions (in for automatic transmissions). It is also effective to use wheel chocks.
Wheel chocks can be purchased from your Mitsubishi Motors dealer. Avoid parking on steep slopes.

There is a risk of an unexpected accident, such as the vehicle moving without a driver.

When carrying a child

JC31EAXa

Children should sit in the rear seat.

WARNING • Not only can you be distracted by your child's movements while sitting in the passenger seat, which can get in the way of driving, but your child may also come into contact with the driving controls, leading to a serious accident.

• Even if you have to put a child in the passenger seat, please observe the following: • Always wear a seat belt. • Move the seat back as far as possible. • Make sure your child sits deep in the seat, with their back against the backrest, in the correct position.

• If a child is standing in front of the instrument panel without using a seat belt or child seat, or is not sitting correctly in the passenger seat, they may suffer serious, even life-threatening, injuries from the SRS airbag when it inflates.

Machine Translated by Google

For a safe drive

Make sure your child wears a seat belt

⚠

WARNING : Do not hold a child on your lap. In the event of sudden braking or a collision, your arms may not be able to support the child properly and the child may be seriously injured.

• Always wear your seat belt, even in the rear seat.

⚠ caveat

• Small children whose shoulder belts touch the neck, chin, or face when fastened by a seat belt, or whose waist belts do not rest on the hips, may be subjected to strong pressure in the event of a collision with a normal seat belt, and may be seriously injured by the seat belt. Use a child seat that fits the child's body size. ÿ P.4-14 • The use of child seats is required by law for children under the age of 6.

• Do not install an infant seat (baby seat) in the passenger seat. If installed in the passenger seat, when the passenger airbag inflates, a strong force will be applied to the top of the rear-facing infant seat (baby seat), which may push the infant against the seat back, causing serious injury that could be life-threatening.

Machine Translated by Google

For your child's safety , the following equipment is available. Please read the instructions for use and use it to ensure your child's safety.

• Seat belt with child seat fixing mechanism When the seat belt is fully pulled out, the belt does not move in the pulling direction, and the child seat can be fixed. ÿ P.4-15

• Power windows • Safety mechanism

If a child gets their hand or neck caught, the door glass will automatically lower slightly.

ÿ P.3-6

• Lock switch When the lock switch is turned ON, the door glass cannot be opened or closed even if the passenger seat or rear seat switches are operated.

ÿ P.3-5

Doors, windows and seats are operated by adults

caveat

• Be careful not to pinch your hands, face, etc.

• Please make sure that children do not operate the device by mistake. Please use the lock switch for power windows.

Do not allow hands or faces to stick out of windows

WARNING : If you stick your hands or face out of the window, you may be hit by objects outside the vehicle or suffer serious injury in the event of sudden braking.

Do not let children play with the seat belt

WARNING : Do not allow children to play with the seat belt. In particular, if the seat belt has a child seat locking mechanism, playing with the belt around the body may accidentally activate the child seat locking mechanism, making it difficult to remove the belt and resulting in serious injury such as suffocation. If the child seat locking mechanism is accidentally activated and the seat belt cannot be removed, cut the belt with scissors or similar tools.

Machine Translated by Google

For a safe drive

When leaving the car, remove the key and take your child with you.

C31E023A

⚠

WARNING • Do not leave children alone in the car. The inside of a car under the hot sun can get very hot and there is a risk of heat stroke. • If the key is left in the car, children may misbehave and operate the power windows or other electrical equipment, start the car, or start a fire, which could result in a serious accident.

Do not allow children to play in the luggage compartment

⚠

WARNING : Do not carry children in the luggage compartment as it is not designed for people to ride in. Doing so may result in a serious accident.

Handling of 4WD vehicles JC31J-Ga

When driving with "4L"

⚠ Caution :

For automatic vehicles, do not exceed approximately 50km/h when using "4L".

On dry paved roads and highways, it is 2H.

⚠ Caution :

When driving on dry paved roads, always drive in "2H". In particular, never drive on dry highways in "4H" or "4L". Driving on dry paved roads in "4H" or "4L" may result in increased fuel consumption, noise, and premature tire wear. In addition, it may put strain on the drivetrain parts, which may cause serious breakdowns such as oil leaks and seizure. Always drive in "2H".

Machine Translated by Google

Be careful of these things too JC31I-Ud

Precautions when installing accessories

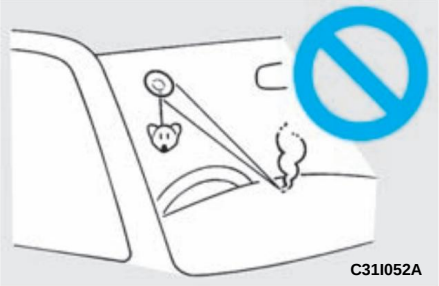

⚠

Caution : Do not attach jewelry to the windshield or place air fresheners on the instrument panel. This can interfere with driving, and suction cups or air freshener containers can act as lenses, causing fires or other unexpected accidents.

• Do not attach accessories to painted areas. Special ingredients in the suction cups may cause the painted surface to peel off or become discolored.

Do not leave lighters, soda cans, glasses, etc. in the car.

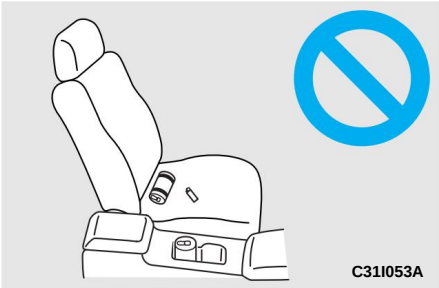

⚠ Note

• When exposed to strong direct sunlight, the inside of the vehicle can become so hot that flammable materials such as lighters may spontaneously combust, cans of carbonated drinks or beer may burst, and plastic lenses or glasses made of plastic materials may become deformed or cracked.

After using the ashtray

⚠

Caution : Make sure to extinguish any matches or cigarettes and keep the lid closed to avoid the risk of fire.

Machine Translated by Google

Precautions when installing window film

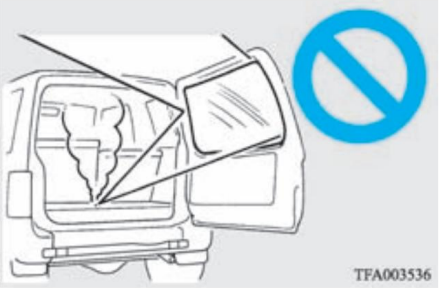

Caution : Do not use commercially available mirror-type films.
In the unlikely event that sunlight is reflected by the back door glass, it may cause an unexpected accident, such as a fire.

Do not start the engine while the vehicle is jacked up

WARNING : If you start the engine with the vehicle raised on a jack, the vehicle may come off the jack, which could result in a serious accident.

Use specified size tires and wheels

Caution

• Mitsubishi Motors Corporation has notified the Ministry of Land, Infrastructure, Transport and
Tourism of tire and wheel sizes. • Do not use tires of other sizes or mix different types of tires, as this will adversely affect safe driving. ÿ "Tire and Wheel Sizes" P.14-7 • For 4WD vehicles, the driving force is applied to
all four tires, so be sure to use tires of the same specified size, type, and brand, and with no difference in wear. Using tires of different sizes, types, brands, or degrees of wear may put strain on the drive system parts, causing serious malfunctions such as oil leaks and seizure, which may lead to unexpected accidents. ÿ "Tire and Wheel Sizes"
P.14-7 • Even if the rim size and offset
amount are the same, some wheels cannot be used because they interfere with the vehicle body. If you would like to use your own tires, please consult your Mitsubishi Motors dealer.

Machine Translated by Google

Do not load luggage directly onto the roof rails.

Advice : For

driving safety, do not load luggage directly onto the roof rails or carelessly attach ropes to them, as this may cause the luggage to shift and lead to an unexpected accident.

• When loading luggage onto the roof, use a special roof carrier. When doing so, make sure to load the luggage evenly so that the center of gravity is not shifted to one side.

No illegal modifications

Caution :

Do not make any modifications other than those permitted by law. In addition, installing any parts other than genuine Mitsubishi Motors parts may affect the performance and functionality of the vehicle and may cause an unexpected accident.

MITSUBISHI MOTORS
GENUINE PARTS

Caution regarding electrical equipment and radios

Caution :

If electrical equipment, radio equipment, etc. are not installed properly, it may adversely affect the electronic components and may lead to unexpected accidents such as breakdowns or fires. When installing electrical equipment, radio equipment, etc., consult your Mitsubishi Motors dealer.

Machine Translated by Google

For a safe drive

Interference from electronic devices such as mobile phones and computers

Advice : When using a mobile phone in a car, noise may come out of the audio. In this case, use the mobile phone as far away as possible from the audio.

• Using electronic devices such as a computer may cause the car navigation system to not function properly.

After inspection at a Mitsubishi Motors dealership

Caution : The following may indicate a breakdown in your vehicle. If left unchecked, this may adversely affect driving or lead to an accident. Have your vehicle inspected at a Mitsubishi Motors dealership. • If there are unusual sounds, smells, or vibrations • If there is a shortage of brake fluid • If there are traces of oil leakage on the ground

For safe driving

Caution : For safety reasons, do not use car phones or cell phones while driving. Also, do not operate CD players, cassette players, car navigation systems, etc. Doing so may distract you from operating the devices and lead to an accident.

• Please refrain from smoking while driving. It can make you less alert and lead to an unexpected accident.

Machine Translated by Google

When using a self-service gas station, use JC31N-A

Be careful with fuel

⚠

WARNING • Open flames are strictly prohibited when refueling. Fuel is highly flammable and may cause a fire or explosion. • Always stop the engine. • Do not use cigarettes, lighters, etc.

⚠

CAUTION • Be careful not to inhale vaporized fuel. Some fuel contains toxic substances. • Keep the doors and door windows closed while refueling. Vaporized fuel may get into the vehicle interior.

Advice : Be careful not to spill fuel. It can cause discoloration, stains, and cracks in the paint. If fuel gets on the vehicle, wipe it off with a soft cloth.

Eliminate static electricity

⚠

WARNING • Before removing the fuel cap, be sure to discharge static electricity from your body by touching a metal part of the vehicle or the fuel pump. If you are charged with static electricity, a spark may occur that can ignite vaporized fuel. • Always perform refueling operations such as opening the lid (filler port) and removing the fuel cap alone, and do not allow others to come near the filler port. If multiple people are performing the same operation, there is a risk that vaporized fuel will ignite if the other person is electrically charged. • Do not leave the filler port until refueling is finished. If you sit down on the seat during the refueling process, you may becor

Machine Translated by Google

For a safe drive

Be careful with the fuel cap

WARNING : When opening the fuel cap, do not turn it suddenly . Pressure inside the fuel tank may cause fuel to spray back out of the filler neck. If you hear a hissing noise when loosening the fuel cap , wait until the noise stops, and then turn the fuel cap slowly.

When closing the fuel cap, make sure that it is securely closed . If it is not securely closed, fuel may leak and cause a fire.

Caution :

Do not use fuel caps other than genuine Mitsubishi Motors parts .

Observe the precautions at gas stations

CAUTION • Observe the precautions posted at the gas station . • Be sure to insert the fuel nozzle securely into the fuel filler opening . If the fuel nozzle is not inserted correctly, fuel may spill.

Stop refueling when the fuel nozzle automatically stops. Repeated refueling may cause the fuel to overflow .

Advice : If you have any questions about how to refuel, please consult a gas station attendant.

Machine Translated by Google

Opening and closing of each part

Keys.....3- 2

Doors.....3- 2

Keyless Entry 3- 4

Center Door Lock 3- 5

Power windows 3- 6

Engine Hood.....3- 8

Fuel lid (fuel filler port).....3-10

Backdoor 3-11

Machine Translated by Google

key

JF21A-Bc

It comes with two keys.

Advice : Key

combinations vary by vehicle model.
Masu.

• In the unlikely event that you lose your key, you can have a new key made by contacting your Mitsubishi Motors dealer with the key number. The key number is stamped on the key number plate. Please keep the key number plate separate from the key.

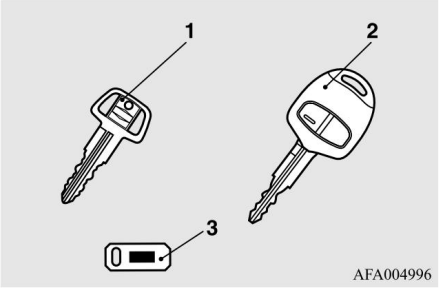

1 - Master key 2 - Master key (keyless entry key) 3 - Key number plate

Door A

JF22BAD

WARNING : When leaving your vehicle, always turn off the engine and lock the doors to prevent fire, theft, etc. This is also a legal requirement. If you have children with you, always take them with you when you leave the vehicle. Also, do not leave valuables in the vehicle.

Caution :

When closing the door, make sure that it is closed securely and that the half-open door warning light in the meter is off. If the door is left half-open while driving, it may open, which may lead to an unexpected accident.

Machine Translated by Google

Locking and unlocking from outside the vehicle

• When locking or unlocking using the key, turn the key toward the front of the vehicle to lock and toward the rear to unlock.

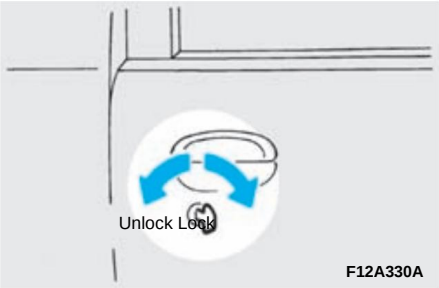

• When locking without using a key

1. Tilt the lock knob on the inside of the door towards the front of the vehicle.

death

2. Hold the door handle. 3. Close the door.

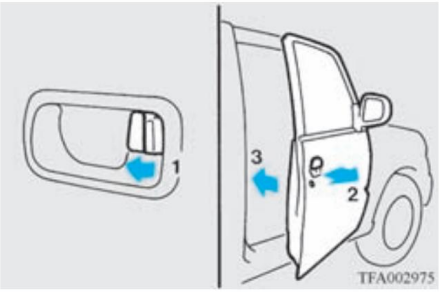

Advice : To prevent forgetting to remove the key, always hold the key when you close the door.

• Key removal prevention: If you turn off the engine switch and open the driver's door with the key still inside, a buzzer will sound intermittently to notify you that you have forgotten to remove the key. Also, if you open the driver's door with the key still inside and try to lock it by tilting the lock knob towards the front of the vehicle, the door will not lock.

Locking and unlocking from inside the vehicle:

Push the lock knob towards the front of the vehicle to lock it, and push it towards the rear to unlock it.

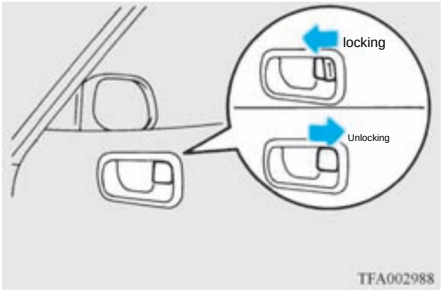

Advice : If you repeatedly lock and unlock the doors, the protection circuit may be activated and the central door lock may temporarily stop working. If this happens, wait a while (about one minute) before operating the door again.

Machine Translated by Google

Keyless entry JF22D-Hc The doors and back door can be locked and unlocked, and the power windows can be closed using a remote control switch.

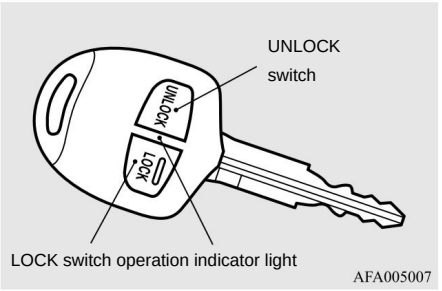

• Locking and unlocking the doors and back door: Pressing the LOCK switch will lock all the doors and back door, and pressing the UNLOCK switch will unlock all the doors and back door.

Even if you press the UNLOCK switch to unlock the doors, if you do not open the doors or back door within 30 seconds, they will automatically lock again.

Checking operation when locking and unlocking

Operation can be confirmed as follows. However, the interior lamp will only flash or light when the interior lamp switch is in the middle (•) position.

When locked: Room lamp and emergency flasher flash twice.

When unlocked: Room lamp stays on for about 15 seconds, and emergency flasher flashes once.

Advice : You can disable the operation confirmation function (flashing of the emergency flashers). For details, please consult your Mitsubishi Motors dealer.

• How to close the power windows:

After pressing the LOCK switch to lock all the doors and the back door, press and hold the LOCK switch again for at least one second within 30 seconds to close all the door windows. If you want to stop the process midway, press the LOCK or UNLOCK switch.

Advice • You can change the following operations using the remote control switches. For details, consult your Mitsubishi dealer. • Disable the "close" operation of the power window. • Disable the "open" function of the power window. Add

Machine Translated by Google

advice

• Keep the remote control switch within about 1m of the car. The operating distance may vary depending on the surrounding conditions, such as the presence of a TV tower, substation, or broadcasting station nearby .

• The remote control switch will not work in the following cases: • When the key is inserted in the engine switch • When any door (including the back door) is open or ajar • Do not leave the remote control switch in places exposed to direct sunlight, such as on the dashboard. This may cause the remote control switch to malfunction. • If you lose your remote control switch or would like to have a new remote control switch made, consult your Mitsubishi Motors dealer. You can make up to four remote control switches.

• As the inside of the remote control switch is delicate, please pay attention to the following: • Do not subject it to impact. • Do not expose it to water. • Do not disassemble or modify it. •

The batteries may be depleted in the following cases. Have the batteries replaced at a Mitsubishi Motors dealer. • When the remote control switch does not lock or unlock even when pressed at the correct distance. • When the operation indicator light is dim or not lit.

Center door lock JF12B-Wb

All doors (including the back door) can be locked and unlocked by the following operations. Turn the driver's door key toward the front of the vehicle to lock, and toward the rear to unlock. Push the lock knob on the inside of the door toward the front of the vehicle to lock, and toward the rear to unlock.

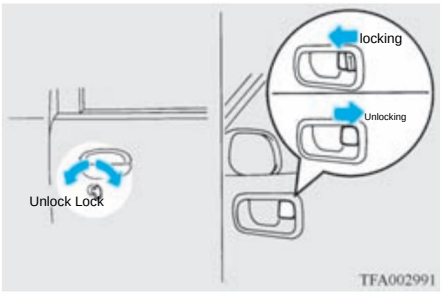

advice

• If you repeatedly lock and unlock the doors, the protection circuit may be activated and the central door lock may temporarily stop working. If this happens, wait a while (about one minute) before operating the door again.

Machine Translated by Google

Power window JF27A-Zf

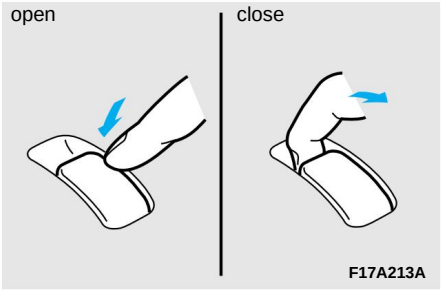

WARNING : When closing the power windows, make sure passengers do not stick their faces or hands out of the windows for safety.
For safety, an adult, not a child, should operate the power windows. When leaving the car,

always remove the key and take children with you. If the key is left in, a child may move

around and get their hands or neck caught.

Tip : You can also close the power windows using the remote control switch. ÿ "Keyless Entry" P.3-4

Driver's seat switch

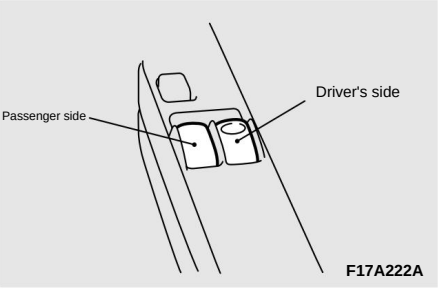

All door windows can be opened and closed using the driver's seat switch.
When the engine switch is ON, press the switch to open, and pull up to close. If you press or pull up the switch hard, the doors will automatically open or close fully. To stop the operation midway, lightly press the switch.

Machine Translated by Google

When the passenger seat
switch engine switch is ON, press the switch to open it and pull it up to close it.

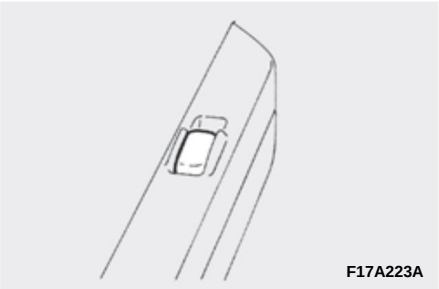
F17A223A

Advice : The
window can be opened and closed for approximately 30 seconds even after the engine switch is turned off. If the driver's door is opened during this time, the window can be opened and closed for another 30 seconds. However, once the driver's door is closed, the window can no longer be opened and closed.

Window lock switch: When carrying a child, turn the window lock switch to ON. The door glass cannot be opened or closed even by operating the passenger seat switch. Press it again to release the lock.

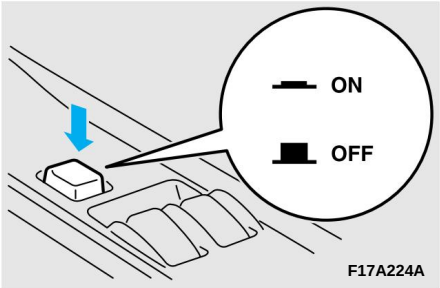

F17A224A

Tip : All door glass
can be opened and closed using the driver's seat switch.

Machine Translated by Google

• Safety mechanism: In the

unlikely event that a hand, neck, or other body part becomes caught, the door glass will automatically lower for safety.

After the door glass has lowered, it can be closed by pulling up the switch again.

Caution : To ensure that the door glass closes securely, the safety mechanism is not activated immediately before the door is fully closed. Be careful not to get your fingers caught.

advice

• If the safety mechanism is activated three or more times in succession, the door glass will not close normally. Take measures against the door glass as follows. When the door glass is open, pull up the power window switch repeatedly to fully close the door glass. After it is fully closed, release the switch and then pull up the switch again for approximately one second. This will allow the door glass to be opened and closed as normal.

Engine hood JF13A-If

• How to open

1. If the wiper arm is upright, retract it.

Advice : If you open the engine hood with the wiper arms upright, the engine hood may be scratched.

2. Pull the lever located at the bottom right of the instrument panel to slightly raise the engine hood.

3. Insert your hand into the gap in the engine hood and lift the engine hood while pushing the lever in the center of the front end to the left.

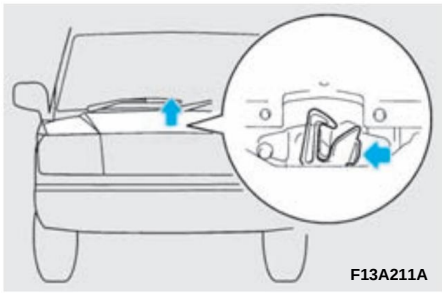

Machine Translated by Google

4. Insert the support rod into the hole in the engine hood to securely fasten the engine hood in place.

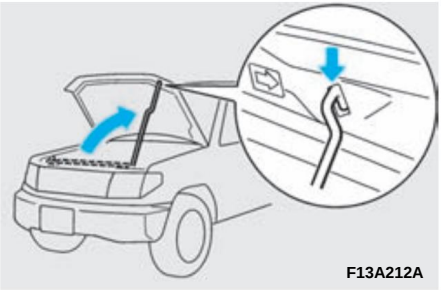

CAUTION : If the engine hood is open when it is windy, the wind may blow the support rod out of the way. Take particular care when it is windy. Always insert the support rod into the designated hole. If it is inserted in any other place, the support rod may come out and cause an unexpected accident.

• How to close

1. While supporting the engine hood, remove the support rod and secure it in place.

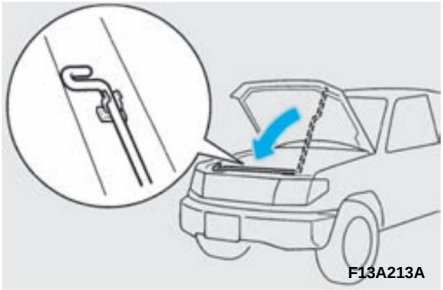

2. Raise the engine hood slightly (about 30 cm) away from the vehicle.

Note

• Be careful not to pinch your hands or objects.

3. Ensure that the engine hood is completely closed.

Caution :

Before driving, always check that the engine hood is securely closed. If the vehicle is driven with the hood not completely closed, it may open.

Advice : Do not press the engine hood hard with your hands. Depending on the amount of force or the location of the force applied, the body of the vehicle may be dented.

Machine Translated by Google

Fuel lid (fuel filler)

The JC30A-Eg fuel lid (fuel filler port) is located at the rear right side of the vehicle.

⚠

WARNING • When refueling, open flames are strictly prohibited. Fuel is highly flammable and may cause a fire or explosion. • Always stop the engine. • Do not use cigarettes, lighters, etc. • Before removing the fuel cap, be sure to remove static electricity from your body by touching a metal part of the vehicle or the fuel pump. If you are charged with static electricity, sparks may be generated and the vaporized fuel may ignite. • Always perform refueling operations such as opening the lid (fueling port) and removing the fuel cap by yourself, and do not allow others to come near the fueling port. If multiple people are performing the operation, there is a risk that the vaporized fuel may ignite if the other person is charged with electricity. • Do not leave the fueling port until refueling is finished. Sitting on the seat during the refueling process may cause the charge to be recharged.

Advice • Always use the specified fuel. ÿ "Refuel with the specified fuel" P.2-5 ÿ "Service data: Fuel" P.14-1

• How to open

1. Pull up the lever at the bottom right of the driver's seat to open the lid (refill port).

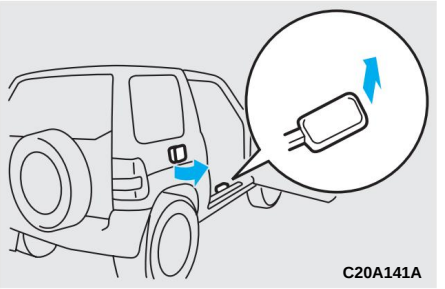

C20A141A

2. Hold the fuel cap knob and slowly turn it to the left to remove it.

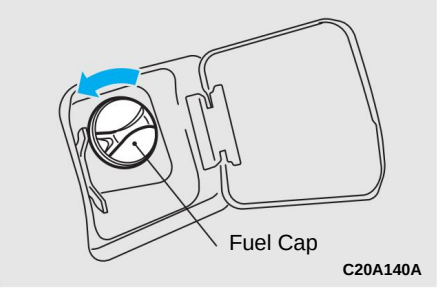

C20A140A

⚠

WARNING : Do not turn the fuel cap suddenly. Pressure inside the fuel tank may cause fuel to spray back out of the filler neck. If you hear a hissing noise when you loosen the fuel cap, wait until the noise stops, and then turn the fuel cap slowly.

Machine Translated by Google

• How to close

1. Close the fuel cap by turning it clockwise until you hear a click.

⚠

WARNING : Make sure the fuel cap is securely closed. If it is not securely closed, fuel may leak and cause a fire.

2. Close the fuel lid by gently pushing it with your hand.

back door

JF25AAY

⚠

WARNING • Always make sure the back door is securely closed before driving. If you drive with the back door open, exhaust fumes may enter the vehicle and cause carbon monoxide poisoning. • When parking or stopping on the road with the back door open, place a stop sign or similar sign at the rear of the vehicle. When the back door is open, vehicles behind may not be able to see the emergency flashers, which may lead to an unexpected a

⚠

CAUTION • Be extremely careful when opening or closing the tailgate on slopes or when the wind is strong. The tailgate may move suddenly, leading to an unexpected accident. • When loading or unloading luggage from the luggage compartment, do not stand behind the exhaust pipe. You may be burned by the heat of the exhaust. • After closing the tailgate, always check that it is securely closed. If the tailgate is opened while driving, luggage may fall out, leading to an unexpected accident.

Machine Translated by Google

Locking and unlocking from outside the vehicle

• When locking or unlocking using a key , insert the key and turn it to the right to lock and to the left to unlock.

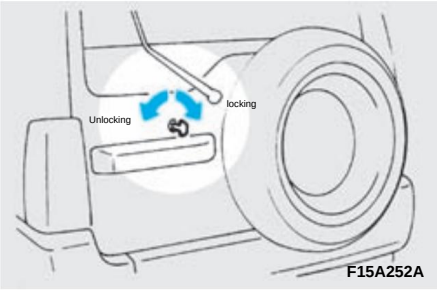

advice

• When the driver's door is locked or unlocked, the back door will also be locked or unlocked at the same time.

Machine Translated by Google

Seats, seat belts, child seats, **SRS** Airbags

Sheet

Front seats.....4- 2

Rear seat.....4- 5

Headrest 4- 7

Seatbelts

Seat belts 4- 9

child seat

Child seats.....4-14

SRS airbags

SRS Air Bags.....4-18

Machine Translated by Google

Sheet

Front seat JG21A-Ci

Please adjust all parts of the seat before driving.

To ensure proper driving posture, adjust the seat while paying attention to the following points.

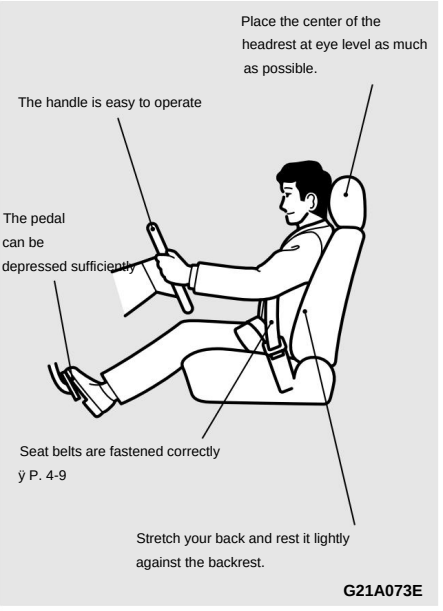
Place the center of the headrest at eye level as much as possible.
The handle is easy to operate
The pedal can be depressed sufficiently
Seat belts are fastened correctly
ÿ P. 4-9
Stretch your back and rest it lightly against the backrest.
G21A073E

⚠

WARNING : Always adjust the seat before driving. Adjusting the seat while driving may cause it to move more than necessary, making it difficult to control the vehicle and leading to a serious accident.

• After adjusting the seat, make sure that the seat is securely fixed. If the seat is not secured, it may move and cause a serious accident.

• Do not drive with the seat back reclined more than necessary. In the event of sudden braking or a collision, your body may slip under the seat belt and you may be seriously injured by the seat belt.

⚠ Caution :

• Seat adjustments should always be performed by an adult. Allowing a child to operate the seat adjustments may result in an unexpected accident. • Do not place a cushion or other object between the seat back and your back. This may prevent you from maintaining the correct driving posture and may lead to an unexpected accident. • When operating the seat, do not place your hands or feet under the seat or near any moving parts. • Be sure to watch over passengers when moving the seat backwards or reclining the backrest.

Machine Translated by Google

Forward/backward adjustment JG21B-CC

Adjust the seat while pulling the lever. After adjusting, gently rock the seat back and forth to check that it is securely fixed.

Backrest angle adjustment JG21C-SB

Adjust the lever while pulling it. After adjusting, gently rock the backrest to check that it is securely fixed in place.

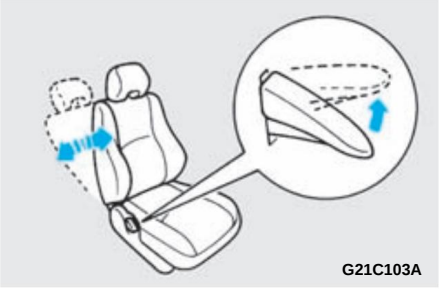

⚠

Caution : When operating the lever, place your body against the backrest or support your hands against it, otherwise the backrest may suddenly return and hit you in the face.

Cushion height adjustment (driver's seat) Adjust by turning the knob. JG21D-U

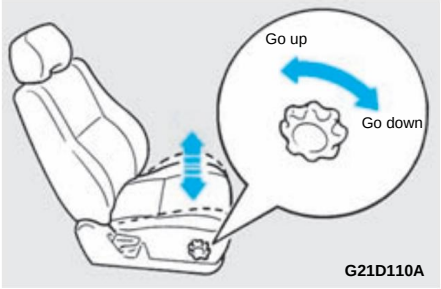

4

Machine Translated by Google

Sheet

Front seat heater (driver's seat)

Equipment by type

JG16A-Q

When the engine switch is ON, pressing side (1) of the switch will operate the heater and the indicator light inside the switch will light up. To stop the heater, press side (2).

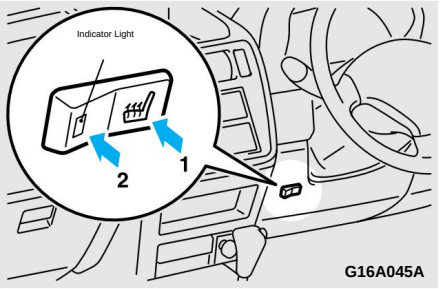

⚠ Note

• Continuous use with the engine stopped may cause the battery to run out. •
Continuous use for long periods of time may cause low-temperature burns (blisters, etc.). The following people should take particular care: • Infants, children, the elderly, the sick, and the physically disabled • People with sensitive skin • People who are extremely fatigued • People who have consumed alcohol
or taken medicine that makes them drowsy (cold medicine, etc.) • Do not place heavy luggage on the seat or
stick needles or nails into the seat. • Do not cover the seat with insulating materials such as blankets or cushions. This may cause overheating.
• When cleaning the seat, do not use organic solvents such as benzene, gasoline, or alcohol, as this may damage the seat surface and heater.

• If you spill water, juice, etc., be sure to dry it thoroughly before using it again.

Advice : Turn the switch OFF when not in use.

Machine Translated by Google

Getting in and out of the rear seat (passenger seat) JG01J-Oc

⚠
WARNING : Do not drive with the seat back tilted forward. The seat is not secured in place and may result in serious injury in the event of sudden braking or a collision.

To recline the seat back, pull up the lever (1) or step on the pedal (2). Push the entire seat forward. To return the seat to its original position, raise the seat back, then move the entire seat backwards and check that it is securely fixed in place.

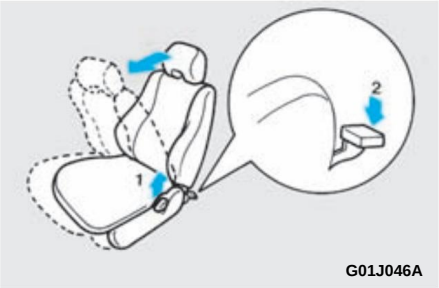

G01J046A

⚠
CAUTION: When operating the lever or pedal, place your hands on the seat back. The seat back may suddenly return and hit you in the face. Use your feet to operate the pedals (2).

stomach.

Rear seat

JG23B-Kf

⚠ caveat

• Always adjust the seat before driving. Adjusting the seat while driving may cause it to move more than necessary, which may lead to a serious accident. • When adjusting, folding, or returning the seat, make sure that the seat is securely fixed. If the seat is not secured, it may move and lead to a serious accident. • Do not drive with the seat back reclined more than necessary. In the event of sudden braking or a collision, your body may slip under the seat belt and you may be seriously injured by the seat belt. • Do not carry people or let children play in the car with the rear seat folded down. In the event of sudden braking, you may be seriously injured.

⚠ Caution:

• Seat adjustments should always be performed by an adult. Allowing a child to operate the seat may result in an unexpected accident. • When adjusting the seat, do not place your hands or feet under the seat or in any moving areas.

Machine Translated by Google

Sheet

By folding the backrest forward, JG52CAC , you can carry large items.

• When defeating

1. Remove the head restraint. ÿ "Removing the head restraint" P.4-8 2. While pulling up the knob on the side you want to recline, tilt the backrest forward.

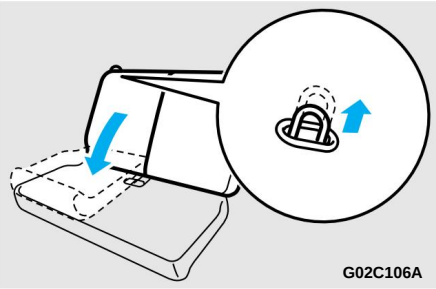

• When returning

1. Raise the backrest until it is securely locked. 2. After returning it to its original position, gently rock the backrest to ensure that it is securely fixed. 3. Attach the headrest.

⚠

WARNING : Do not allow people to ride or children to play in the luggage compartment while driving. This may lead to a serious accident in the event of sudden braking.

⚠ Note

• Do not load luggage inside the vehicle above the height of the seats. Also, make sure that luggage is securely fastened.
Doing so may prevent you from seeing behind you, or luggage may be thrown forward in the event of sudden braking, which could lead to an unexpected accident.

Adjust the backrest angle by pulling up the JG52A-FA knob. After adjusting, gently shake the backrest to make sure it is securely fixed.

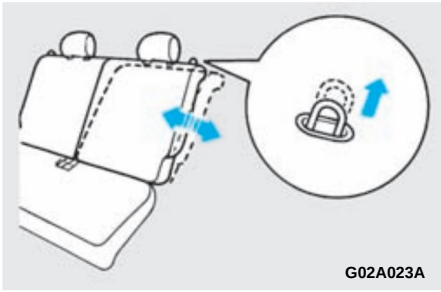

Machine Translated by Google

Rear seat cushion JG52D-AB The rear seat cushion can be removed. Please use it when installing the seat cover, etc.

• To remove, lift both ends of the seat cushion and remove it.

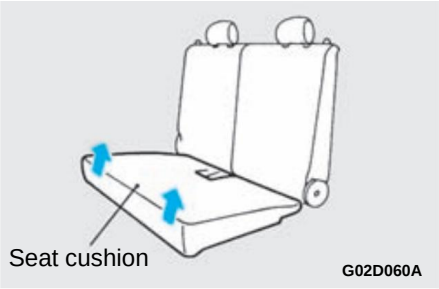

• When installing

1. Place the seat belt buckle over the seat cushion. 2. While pushing the seat cushion all the way backward, push the fixing hooks on the underside of the seat cushion into the left and right mounting holes until you hear a click.

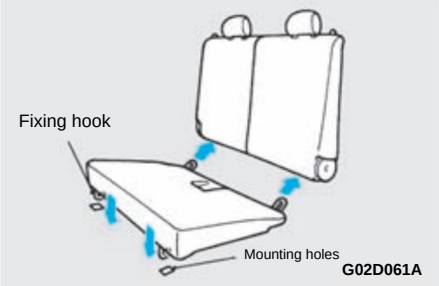

3. After installation, gently shake the seat cushion to make sure it is securely fixed in place.

Headrest JG26A-Hb

⚠

WARNING • Do not use the headrest at a height higher than it can be fixed. This will not help to ensure safety in the event of an accident. • Placing a cushion or other object between the backrest and your back will not help to ensure safety. • Do not drive with the headrest removed. Be sure to install it before driving. Doing so may result in serious injury in the event of a collision.

• Adjust the height of the headrest so that the centre of it is at eye height as much as possible.

If it does not reach eye level (especially if you are a tall person), adjust it to the highest position you can.

To raise it, just pull it up, and to lower it, press and hold the lock button while lowering it.

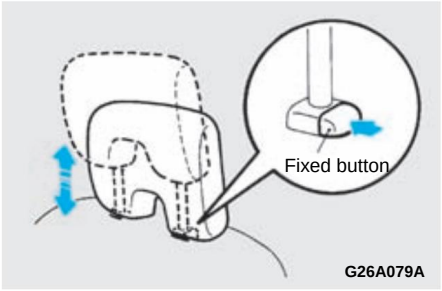

Machine Translated by Google

Sheet

• Removal and installation: While JG26B-Gd

holding down the fixing button, pull the connector all the way up to remove it.To

install the connector, insert the connector while holding down the fixing button.

⚠

Caution : After installing the head restraint, make sure the fixing button is locked.

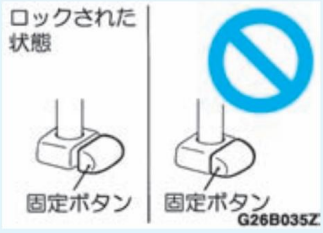

Machine Translated by Google

Seatbelts

Seat belts Seat belts JG28A-Qk

ensure the safety of the driver and passengers in the event of an accident. Please follow the instructions and precautions below and be sure to fasten your seat belt before driving.

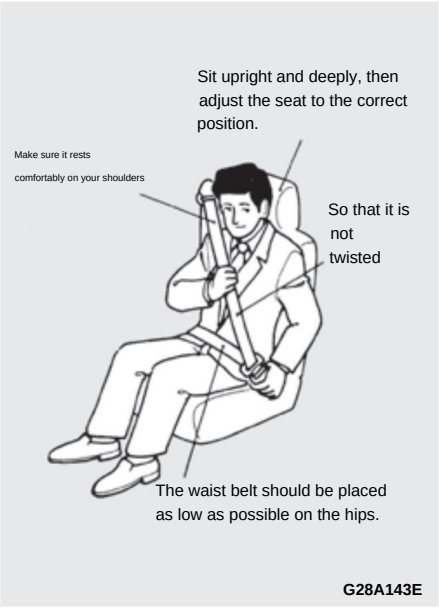
Sit upright and deeply, then adjust the seat to the correct position.
Make sure it rests comfortably on your shoulders
So that it is not twisted
The waist belt should be placed as low as possible on the hips.
G28A143E

⚠

WARNING : • Do not wear the shoulder belt under your armpits, but wear it so that it rests securely on your shoulders. If the belt is not securely around your shoulders, your body may be thrown forward in the event of a collision, which could result in serious injury. • Do not wear the lap belt around your stomach. In the event of a collision, your stomach may be subjected to strong pressure, which could result in serious injury from the seat belt.

• The belt is designed for one person. Do not use it with more than one person. The belt may not function properly in the event of a collision, which may result in serious injury.

⚠ caveat

• Do not drive with the seat back reclined more than necessary. In the event of sudden braking or a collision, your body may slip under the seat belt and be seriously injured by the seat belt. • Always make sure that all occupants wear seat belts when riding in a vehicle. Failure to wear seat belts may result in serious injury in the event of sudden braking or a collision.

• When wearing the seat belt, please keep your torso upright and sit deep in the seat. If you do not wear the seat belt in the correct posture, it may not be effective. For information on the correct posture, see "Front Seats".

ÿ P.4-2

• Make sure the seat belt is not twisted. If the belt is twisted, it will become narrower, which may result in strong localized force being applied in the event of a collision, resulting in serious injury from the seat belt. • Do not drive closer than necessary to the steering wheel or instrument panel. The seat belt may not be fully effective in the event of a collision. • Even children must wear seat belts. Holding a child on your lap may not provide enough support in the event of sudden braking or a collision, and the child may be seriously injured.

Machine Translated by Google

Seatbelts

⚠

WARNING : Pregnant women and people with medical conditions should also wear seat belts in case of an accident. However, as there is a risk of strong localized pressure, consult with a doctor and check the precautions before using. Pregnant women should wear the waist belt as low as possible around the waist, avoiding the abdomen. The shoulder belt should be securely placed around the shoulder and worn so that it rests on the chest, avoiding the abdomen. When wearing a seat belt, do not use clothespins or clips to create slack in the belt. Slack in the belt may not be effective. Replace the seat belt if it is frayed or cut, or if the metal parts no longer function properly. If it is used in a defective condition, it may not function properly in a collision and may not perform to its full potential. If the seat belt is subjected to a strong impact in an accident, be sure to replace it even if there is no visible abnormality. Even in the case of a minor accident, have the belt inspected by a Mitsubishi Motors dealer. The belt itself may be broken, and the seat belt may not be able to perform adequately. • If you need to repair or replace the seat belt, consult your Mitsubishi Motors dealer.

• Do not insert any foreign objects into the buckle or retractor. Also, do not modify, install or remove the seat belt. This may result in the seat belt not working properly in the event of a collision.

⚠

WARNING : If the belt becomes dirty, use a neutral detergent. Never use organic solvents such as benzene or gasoline, or bleach or dye the belt. This may reduce the performance of the seat belt and make it unable to perform adequately.

3-point seat belt JG28KAPa

There is no need to adjust the length of the belt. The belt stretches and contracts according to the movement of the body, but if a strong impact is received, the belt automatically locks and secures the body.

• When wearing

1. Hold the plate and fasten your seat belt loosely. Pull it out.

advice

• If the seat belt is locked and cannot be pulled out, pull the belt firmly once to loosen it, then pull it out slowly again.

2. After checking that the belt is not twisted, insert the plate into the buckle until it clicks.

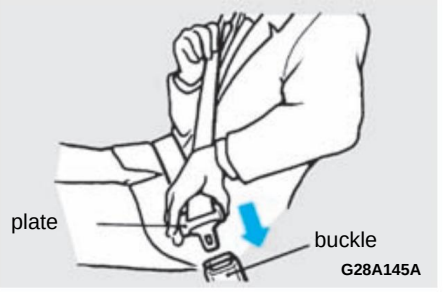

Machine Translated by Google

3. Place the waist belt as low as possible around your hips and pull the belt so that it fits snugly around your waist.

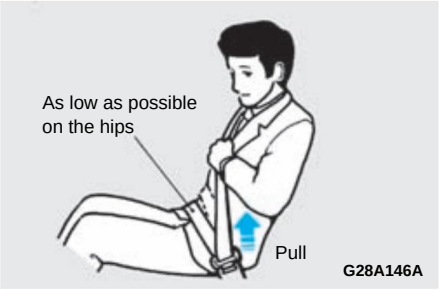

G28A146A

• To remove the belt, hold the plate and press the buckle button. The belt will automatically retract, so place your hand on the plate and slowly retract it.

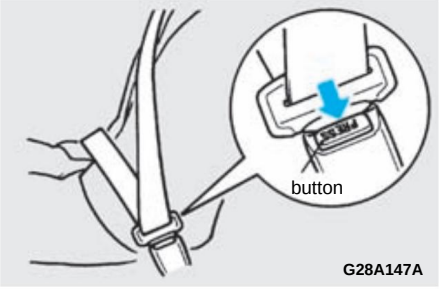

G28A147A

WARNING : Do not allow children to play with the seat belt. In particular, if the seat belt has a child seat locking mechanism, playing with the belt around the body may accidentally activate the child seat locking mechanism, making it difficult to remove the belt and resulting in serious injury such as suffocation. If the child seat locking mechanism is accidentally activated and the seat belt cannot be removed, cut the belt with scissors or similar tools.

Advice : • When using a seat belt with a child seat fixing mechanism, if you move your upper body a lot while wearing the seat belt, the seat belt may not be able to be pulled out. This is because the child seat fixing mechanism is activated. In this case, fully retract the seat belt to release the child seat fixing mechanism, and then fasten the seat belt again. ÿ "How to Install a Child Seat" P.4-15

Machine Translated by Google

Seatbelts

Seat belts with pretensioner mechanism/force limiter mechanism

Seat belts with pretensioner mechanism/force limiter mechanism are installed on the driver's seat and passenger seat. JG28H-Fb

• Pretensioner mechanism The pretensioner mechanism is a device that instantly retracts the seat belt, further increasing the effectiveness of the seat belt when the engine switch is ON and the vehicle receives a strong impact from the front that could cause serious injury to the driver or front passenger.

WARNING : To ensure that seat belts with pretensioners are effective, please observe the following: • Adjust the seat to the correct position. ÿ "Front Seats" P.4-2 • Wear the seat belt correctly. ÿ "Seatbelts" P.4-9

CAUTION: • When repairing seat belts with pretensioners or near the floor console, or installing car audio, etc., the pretensioner mechanism may be affected. Therefore, consult your Mitsubishi Motors dealer. • When scrapping your vehicle, consult your Mitsubishi Motors dealer. There is a risk of injury if the seat belt with pretensioner is deployed unexpectedly.

Advice : Seat belts with pretensioners will activate if the vehicle experiences a strong frontal impact, even if the seat belt is not fastened.

• Once a seat belt with a pretensioner has been activated, it cannot be reused. Please have both the driver's seat and passenger seat belts replaced at the same time at a Mitsubishi Motors dealership.

• Force limiter mechanism : This device effectively absorbs the load applied to the seat belt during a collision, softening the impact on the occupants.

Machine Translated by Google

• SRS airbag/
pretensioner warning light

Under normal conditions, the light will come on when the engine switch is turned ON and will go out after a few seconds.
The SRS airbag warning light also serves as the pretensioner warning light.

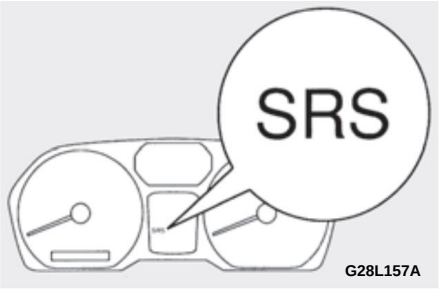

G28L157A

⚠ Caution :

If the warning light appears as follows, it may be that there is a system malfunction. In the event of a collision, the SRS airbags and seat belts with pretensioners may not work properly, which could result in injury. Have the vehicle inspected by a Mitsubishi Motors dealer. • The warning light does not come on or remains on when the engine switch is turned on. • The warning light comes on while driving.

How to store the rear seat belt When the seat JG28E-Ta

belt is not in use, store the plate and buckle as shown in the illustration.

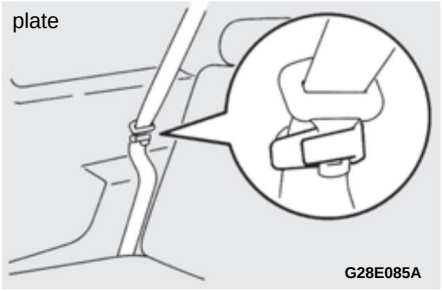

G28E085A

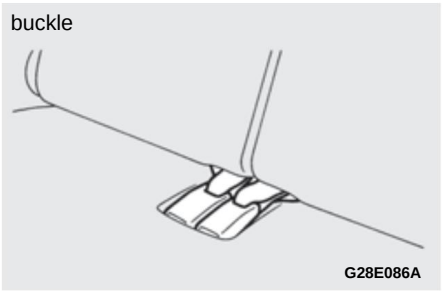

G28E086A

Machine Translated by Google

child seat

Child seat JG18BAD

WARNING : Small children whose shoulder belts touch their neck, chin, or face, or whose waist belts do not rest on their hips, may be subject to strong pressure on the abdomen and other areas in the event of a collision with a normal seat belt, and may be seriously injured by the seat belt. Please use a child seat that is suitable for the child's physique.

• It is required by law that children under 6 years of age use child seats.

There are three types of child car seats: for infants (baby seats), for toddlers (child seats), and for school-age children (junior seats). The type of child car seat that can be used varies depending on the child's size. Also, some seats cannot be secured in place depending on their shape and size. For more information, please consult your Mitsubishi Motors dealer.

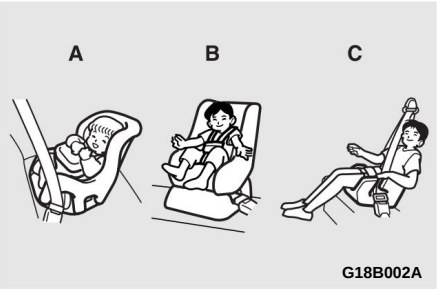

A: For infants (baby seat)
B: For infants (child seats)
C: Junior seat for school children

<Guidelines for selection>

	Weight (kg)	Height (cm)	Reference age
For infants (baby seats)	Less than 10	75 or less	Newborn to 12 months
For toddlers (child seats)	Under 18	Under 105	Under 4
For school children (junior seats)	15 to 36	100 to 135	Ages 4 to 10

Advice : The above table shows the approximate weight, height, and age range. Usage conditions vary depending on the product, so be sure to check.

Machine Translated by Google

How to install a child seat

JG18C-Sb

When installing using a seat belt with a child seat fixing mechanism

The rear seat three-point seat belts are equipped with a child seat fixing mechanism.

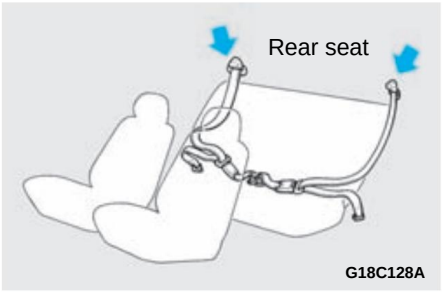

When the seat belt is fully pulled out, the child seat locking mechanism is activated. If you stop rewinding the belt, the belt will not move in the direction of the pull, and the child seat will be secured in place. When installing a child seat, be sure to install it securely by following the steps below.

⚠

WARNING : Never install a rear-facing child seat, such as an infant seat, in the passenger seat. Also, never install a child seat, such as an infant seat, that can be installed either forward or backward, in a rear-facing position. When the passenger seat SRS airbag inflates, a strong force is applied to the top of a rear-facing child seat, which may push the child against the seat back, resulting in serious injury that could be life-threatening.

• If it is unavoidable to install a forward-facing child seat in the passenger seat, make sure to install it in the rearmost position.

Machine Translated by Google

child seat

advice

• The installation method explained below is an example of how to install a general child seat. When installing, be sure to follow the instruction manual that comes with the child seat correctly.

1. Place the child seat in the rear seat. Masu.
2. Following the instruction manual that comes with the child seat, pass the seat belt through the belt guide of the child seat, then insert the plate into the buckle until you hear a click.

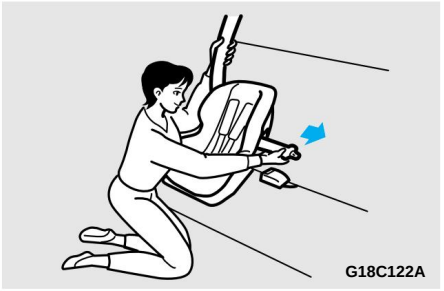

3. Slowly pull the shoulder belt out as far as it will go to engage the child seat locking mechanism.

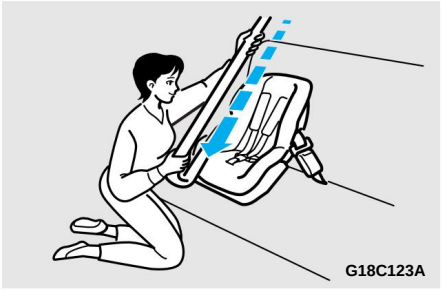

4. Wind up the belt. At this time, make sure that the belt does not move in the direction of pulling out. If the belt moves in the direction of pulling out, pull the belt out again until it is fully extended. 5.

Place your knees on the child seat and press your body weight against the seat, while pulling up the belt on the buckle side to wind up the shoulder belt until there is no slack in the entire seat belt.

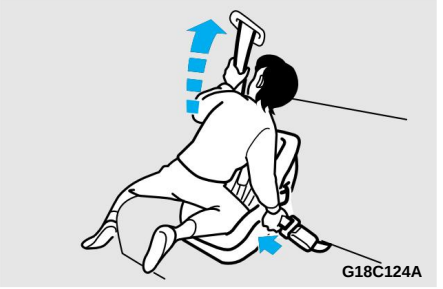

6. Rock the child seat back and forth and side to side to make sure it is securely fastened.

• When removing

1. Remove the seat belt from the child seat by undoing the plate from the buckle. 2. Retract the seat

belt all the way to release the child seat fastening mechanism.

Machine Translated by Google

child seat

• Child seat fixing mechanism included

When installing using a seat belt other than a seat belt

We recommend that you use a seat belt with a child seat anchoring mechanism. If you have to use a seat belt other than a child seat anchoring mechanism, please make sure to attach it securely by following the steps below.

1. Place the child seat where you want to install it.

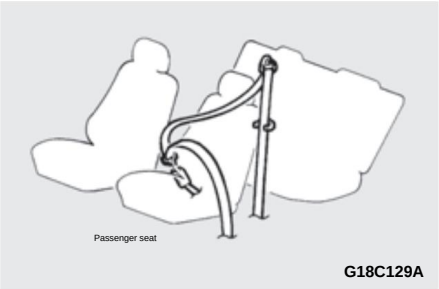

2. Secure the child seat with the seat belt according to the instructions that come with the child seat.

caveat

• The method of installing a child seat varies depending on the type of seat belt . Install it correctly for each seat belt. • Even if you use a three-point seat belt other than a seat belt with a child seat fixing mechanism, be sure to install it correctly according to the child seat's instruction manual. Depending on the type, it may be necessary to secure the child seat with the locking clip provided with the child seat.

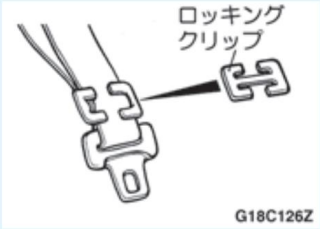

• To remove, remove the plate from the buckle and remove the seat belt from the child seat.

Machine Translated by Google

SRS Airbags

SRS Airbag JG28LAK Driver's and passenger's SRS airbags are devices that supplement the function of the seat belts and reduce the impact to the head and chest of the driver or passenger in the passenger seat when the engine switch is ON and the vehicle receives a strong impact from the front that could cause serious injury to the driver or passenger in the passenger seat.

SRS is an abbreviation for Supplemental Restraint System, which means supplemental restraint device.

⚠ WARNING : The SRS airbag is not a substitute for a seat belt. Always wear a seat belt. If you are not wearing a seat belt, you may be thrown forward in the event of sudden braking, and if the SRS airbag inflates, the strong impact could cause serious, even life-threatening, injuries. Always wear a seat belt for the following reasons: • The seat belt keeps your body in the correct position when the SRS airbag inflates. • The seat belt can reduce injury even if the SRS airbag does not deploy. • Wearing a seat belt prevents you from being thrown out of the vehicle.

⚠ WARNING : Adjust the seat to the correct position and sit in the seat with your back against the backrest in the correct posture. Because the SRS airbag inflates at a very high speed, if you are riding too close to the SRS airbag, you may be in danger of suffering serious, even life-threatening, injuries from the airbag when it inflates. • Do not touch the SRS airbag components and the surrounding area as they will become very hot after inflating. You may be burned.

⚠ Caution : If the area housing the driver's or passenger's SRS airbags is damaged or cracked, have it inspected by a Mitsubishi Motors dealer. In the event of a collision, the SRS airbags may not deploy properly, which could result in injury.

Machine Translated by Google

advice

• The SRS airbag inflates very quickly, so contact with the SRS airbag may result in abrasions or bruises. • When the SRS airbag inflates, a fairly loud noise is heard and white smoke comes out, but this is not a fire and does not have any adverse effects on the human body. However, people with respiratory diseases or sensitive skin may experience temporary irritation of the throat or skin. If any residue (residue, etc.) comes into contact with the eyes, skin, or other parts of the body, rinse with water as soon as possible. In rare cases, it may irritate the skin of people with sensitive skin. • The inflated SRS airbag quickly deflates and does not obstruct vision. • Once the SRS airbag is inflated, it cannot be reused. Have the SRS airbag components replaced at a Mitsubishi Motors dealer. Even if the airbag does not deploy in an accident, have your vehicle inspected at a Mitsubishi Motors dealer for safety. • The windshield may be damaged due to impact or the passenger seat SRS airbag deploying.

Driver's SRS Air BagThe driver's SRS air bag is installed inside the steering wheel.

WARNING : Do not replace the steering wheel, or attach stickers or covers to the pads. Doing so may cause the SRS airbags to not function properly, which may result in serious injury.

• Do not drive with your face or chest close to the steering wheel. Do not rotate. When the SRS airbag inflates, there is a risk of serious injury, such as burns to the arms or face, caused by the airbag.

Machine Translated by Google

SRS Airbags

Passenger SRS AirbagThe passenger SRS airbag is located in the instrument panel above the glove box. The passenger SRS airbag will operate simultaneously with the driver's SRS airbag even if there is no passenger in the vehicle.

⚠ caveat

• Do not place any objects on the instrument panel or attach any stickers, etc. Also, do not attach any accessories to the windshield or a wide mirror to the rearview mirror. Doing so may prevent the SRS airbag from deploying properly or may cause such objects to fly out and cause serious injury.

⚠

WARNING : When carrying a child, be sure to observe the following. The strong impact caused by the SRS airbag inflating may cause serious injury that could be life-threatening to the child. • Children should sit in the rear seat and always wear a seat belt. • For small children who are unable to fasten a seat belt properly, a child seat should be installed in the rear seat. • The use of a child seat is required by law for children under the age of 6.

• Never install a rear-facing child seat, such as an infant seat (baby seat), in the passenger seat. Also, never install a child seat (child seat) that can be installed either forward or backward, facing backwards. When the passenger seat SRS airbag inflates, a strong force is applied to the top of a rear-facing child seat, which may push the child against the seat back, causing serious injury that could be life-threatening.

Machine Translated by Google

⚠

WARNING • If it is unavoidable to install a forward-facing child seat in the passenger seat, make sure to install it in the rearmost position.

• Passengers in the front seat should not sit at the front edge of the seat, rest their hands or feet on the instrument panel, or sit with their face or chest close to it. Also, do not let children stand in front of the instrument panel or hold them on your lap. If the SRS airbag inflates, it may cause serious, even life-threatening, injuries.

⚠

WARNING : Passengers in the front seat must not place any objects, such as a bag, between them and the SRS airbag. When the SRS airbag inflates, objects may be thrown out and serious injury may occur.

When the SRS airbag/ pretensioner warning light is working properly, it will come on when the engine switch is turned ON and will go off after a few seconds. The SRS airbag warning light also serves as the pretensioner warning light.

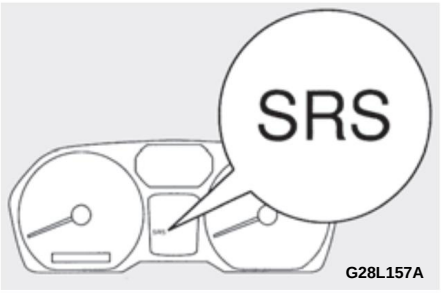

⚠

Caution : If the warning light appears as follows, it may be a system malfunction. In the event of a collision, the SRS airbags and seat belts with pretensioners may not work properly, resulting in injury. Have the vehicle inspected by a Mitsubishi Motors dealer. • The warning light does not come on or remains on when the engine switch is turned on. • The warning light comes on while driving.

Machine Translated by Google

SRS Airbags

Driver and passenger seat SRS airbag deployment conditions

• When activated, the

system activates when the vehicle receives a strong impact from the front that could cause serious injury to the occupants.

When the car collides head-on into a hard wall such as concrete at a speed of 25km/h or more.

When the vehicle receives a strong impact (similar to the impact on the left) from a direction within approximately 30 degrees to the left or right of the front of the vehicle.

G28L149B

advice

• If the collision is not against a solid wall like concrete, but against something that can absorb the impact (something that deforms and moves, like a car or a guardrail), the collision speed (vehicle speed) at which the airbag deploys will be higher.

• When the SRS airbag may not deploy: Even

if the front of the vehicle is significantly deformed in a collision, the impact on the occupants may not be as great due to the impact-absorbing body structure, so deformation or damage to the vehicle does not necessarily correspond to the deployment of the SRS airbag.

When the vehicle collides with a small area such as a utility pole or tree

When crawling into the bed of a truck or other vehicle

When a collision occurs from the diagonal front

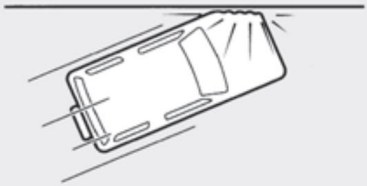

G28L150L

Machine Translated by Google

• When the SRS airbags do

not deploy, they will not deploy because they have no effect on protecting the occupants even if they

inflate. Also, once an SRS airbag has been deployed, it will not deploy again in the event of a second or subsequent collision.

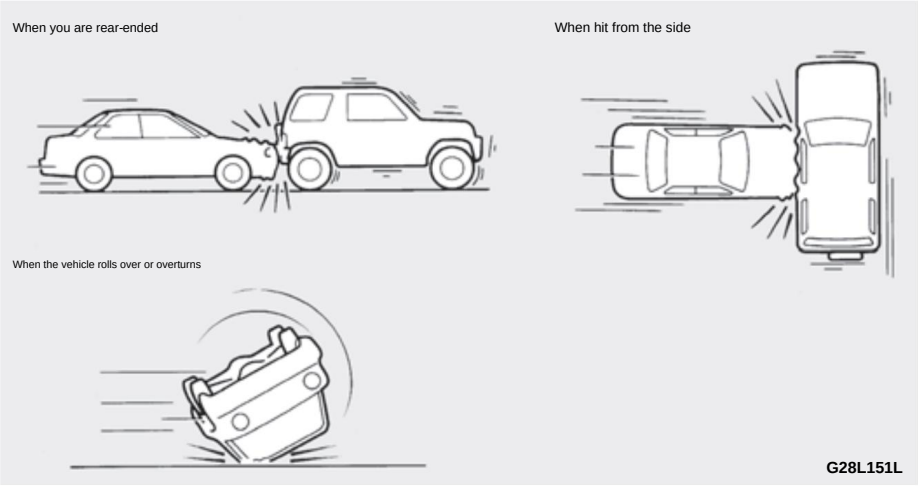

• When it may activate : It may activate if the

underside of the vehicle receives a strong impact while driving.

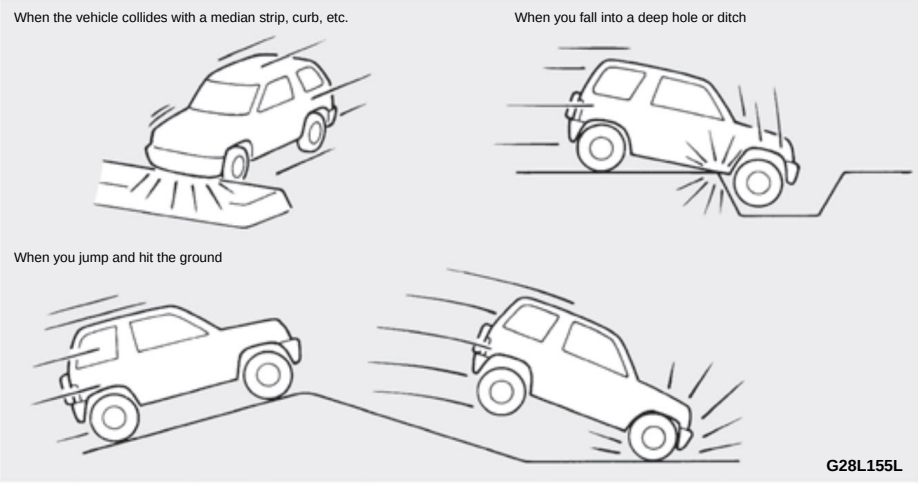
When the vehicle collides with a median strip, curb, etc.
When you fall into a deep hole or ditch
When you jump and hit the ground
G28L155L

Machine Translated by Google

SRS Airbags

Handling Precautions

⚠ Note

• When making repairs around the steering wheel, instrument panel, or floor console, installing car audio, or performing repairs to the front of the vehicle, please consult your Mitsubishi Motors dealer, as there is a risk that the SRS airbag system may be affected or that the SRS airbag may deploy unexpectedly, resulting in injury.
• When scrapping your vehicle, consult your Mitsubishi Motors dealer. The SRS airbag may deploy unexpectedly, resulting in injury. •
Do not use an electrical tester to diagnose the airbag circuit. This may lead to a malfunction of the SRS airbag. • Radio waves from
wireless devices may adversely affect the computer that activates the SRS airbag. Therefore, consult your Mitsubishi Motors dealer when installing a wireless device or similar equipment.

• Do not modify the suspension.
Any change in this setting may result in malfunction of the SRS airbags.
• Do not install any grill guards or other items other than genuine Mitsubishi Motors products on the front of the vehicle. This may affect the operation of the SRS airbags. • Do
not forcefully close the SRS airbag deployment area, such as the steering pad or the top of the instrument panel.
Do not apply excessive force, such as hitting it.
The SRS airbag may not function properly, resulting in serious injury.

advice

• When giving up your vehicle, explain that it is equipped with SRS airbags and keep the instruction manual in the vehicle.

Machine Translated by Google

Meter Switch

meter

Meter 5- 2

Indicator lights/warning lights..... .....5- 5

Indicator light..... 5-6

Warning light..... 5-6

switch

Light Switches 5- 9

Headlight Leveling Dial.....5-11

Turn Signal Lever.....5-12

Front wiper/washer switch 5-12

Rear wiper/washer switch.....5-13

Emergency flasher switch 5-15

Rear window defogger
(Defrost) Switch.....5-15

Front fog lamp switch 5-16

Horn switch.....5-16

Machine Translated by Google

meter

meter

JD01ACU

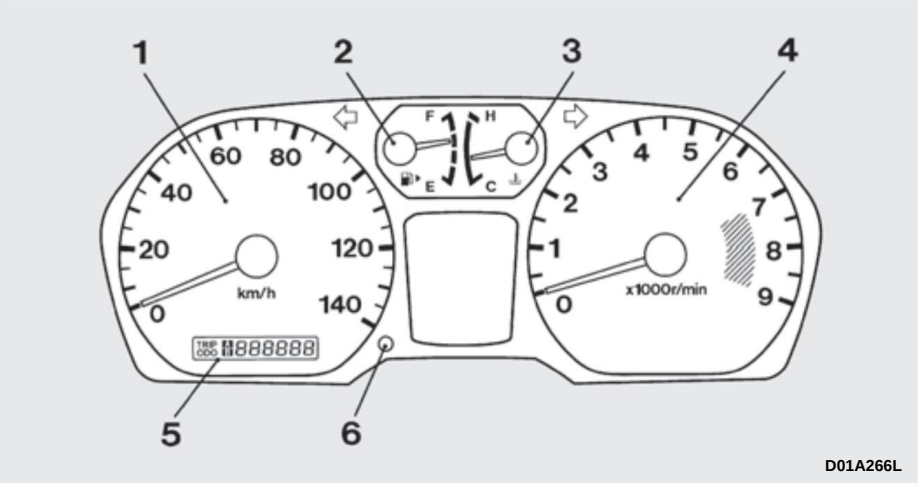

1 - Speedometer 2 - Fuel gauge
3 - Water
temperature gauge

4 - Tachometer 5
- Trip meter Odometer 6 - Reset button

Machine Translated by Google

Speedometer indicates JD03A-I
the driving speed.

Tachometer JD04A-DB
indicates the engine revolutions per minute.

> Advice : Do not allow the needle to enter the red zone (red display area) as this may shorten the engine's lifespan and cause damage.

Odometer (total distance meter) Trip meter (segment distance meter)

JD03FAH

When the engine switch is ON, the ODO (odometer) or TRIP (trip meter) is displayed. The display switches each time the reset button is lightly pressed.

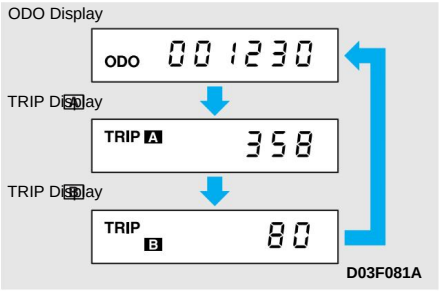

ODO (Odometer): Displays the total distance traveled in km.

TRIP (Trip meter): Displays the distance traveled between two points in kilometers .

There are TRIP A and TRIP B.

<Example> You can measure the distance from your home using TRIP A, and from a stopover point on the way using TRIP B.

To reset it to 0, press and hold the reset button for more than 1 second. In this case, only the displayed item will be reset. <Example> If TRIP A is displayed, only TRIP A will be reset.

> Advice : The trip meter can measure up to 9999.9km for both A and B. If the battery is removed, the memory for both TRIP A and TRIP B will be erased and the display will become 0.

Machine Translated by Google

meter

Fuel Gauge JD15AAGb

When the engine switch is ON, this indicates the amount of fuel remaining.

F— Tank is full. (Approx. 43L) E— Please refuel.

⚠

WARNING : Always turn off the engine when refueling. Do not use cigarettes, lighters or other sources of open flames.

⚠

Caution : Running out of fuel can have a detrimental effect on the catalytic converter. If the warning light comes on, refuel as soon as possible.

Advice : When going up hills or around curves, the fuel in the tank will shift, causing the pointer to fluctuate.

• Fuel lid position indicator

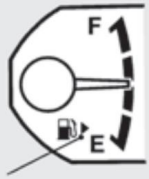

Fuel lid mark

D05A073A

This indicates that the fuel lid (fuel filler) is located on the right side of the vehicle. ÿ "Fuel Lid (Fuel Filler)" P.3-10

Water temperature gauge JD06A-Ic

Indicates the temperature of the engine coolant when the engine switch is ON.

⚠

Caution : When the needle approaches the "H" indicator, there is a risk of overheating. Continuing to drive the vehicle may cause engine failure, so immediately stop the vehicle in a safe place and take appropriate action. ÿ "If the vehicle overheat

Machine Translated by Google

Indicator Lights/Warning Lights

JD50ACUb

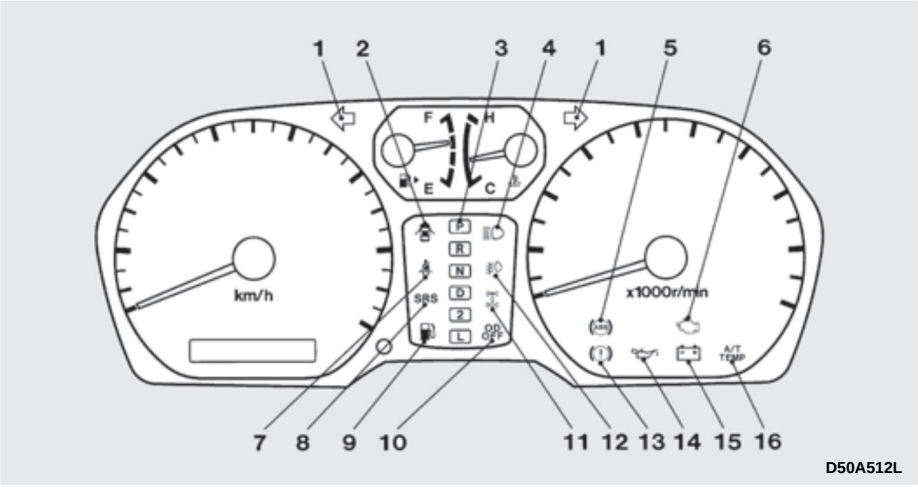

D50A512L

1 - Direction indicators/Emergency flashers 2 - Door ajar warning light 3 - Selector lever position indicator Automatic vehicles ÿ P. 6-8 4 - Headlight Up indicator light 5 - ABS warning light Equipment by type ÿ P. 6-20

6 - Engine warning light 7 - Seat belt warning light 8 - SRS airbag/pretensioner warning light ÿ P. 4-13, 4-21 9 - Fuel level warning light

10 - Overdrive indicator light Automatic vehicles ÿ P. 6-10

11 - 4WD operation indicator light ÿ P. 4WD vehicles

7-4 12 - Front fog lamp indicator light Equipment by type 13 - Brake warning light 14 - Oil pressure warning light 15 - Charging warning light 16 - A/T oil temperature warning light Automatic vehicles, 4WD vehicles

Machine Translated by Google

meter

Indicator Light

JD87A-A

Direction indicator light/ Emergency flasher lightJD52A-Dd

The indicator lever and emergency flashers will flash when activated.

Advice : If the flashing becomes abnormally fast, the turn signal bulb may be burned out, so have your vehicle checked at a Mitsubishi Motors dealership.

Headlight Up Indicator

JD51A-B

The headlights will light up when pointed upwards.

Front fog lamp indicator light

Equipment by type

JD74B-D

The indicator light comes on when the front fog lights are turned on.

Warning lights

JD87B-A

Charging warning light JD54A-HB

If there is an abnormality in the charging system, this light comes on. If the charging system is normal, the light comes on when the engine switch is turned ON and goes out when the engine is started.

Caution :

If this light comes on while the engine is running, immediately stop the vehicle in a safe place and contact your Mitsubishi Motors dealer.

Engine warning light JD85AAF

If there is an abnormality in the engine control unit, this light comes on.

When the engine switch is turned ON, if the engine control unit is normal, this light comes on and goes out after a few seconds.

Caution :

If the light comes on while the engine is running, avoid driving at high speed and have your vehicle inspected at a Mitsubishi Motors dealership as soon as possible. When driving, you may not be able to gain speed even if you press the accelerator. When stopped, the idling speed increases and the creep phenomenon may become stronger in automatic vehicles, so press the brake pedal more firmly.

5

Machine Translated by Google

Oil pressure warning light JD25A-EC

This light comes on when the engine oil pressure drops while the engine is running.
Under normal conditions, the light comes on when the engine switch is turned ON and goes out when the engine is started.

CAUTION

• Driving with insufficient engine oil or with the light on even when the engine oil level is normal may cause the engine to seize and become damaged. • If the light comes on while the engine is running, immediately stop the vehicle in a safe place, stop the engine, and check the engine oil level. (For inspection instructions, refer to the separate "Maintenance Notes.")
• If the engine oil level is normal and the light comes on, contact your Mitsubishi Motors dealer.

Advice : The oil pressure warning light does not indicate the oil level. Always check the oil level using the oil level gauge.

Brake warning light JD23AAM

The light comes on when the engine switch is ON and goes out when the engine is started.
Even if the engine is running, the light comes on in the following cases:
• The parking brake is applied. • The brake fluid is low.

Caution

• In the following cases, your braking may become ineffective, so park your vehicle in a safe place and contact your Mitsubishi Motors dealer. • When the parking brake does not come on when applied, or does not go off when released. • When the brake warning light remains on while driving and does not go off. • If your brakes are not working properly, take the following steps to stop the vehicle. • Press the brake pedal harder than usual. • If the brakes do not work, use the engine brake to slow down your speed and then slowly apply the parking brake. At this time, press the brake pedal to turn on the stop lights to alert vehicles behind you.

Machine Translated by Google

meter

Seat belt warning light JD27A-Fd

When the engine switch is ON and the driver's seat belt is not fastened, the light comes on to remind the driver to fasten the seat belt.
When the seat belt is fastened, the light goes out.

A/T *Oil temperature warning light

Automatic and 4WD vehicles

* : Automatic transmission

JD73A-V

This light comes on when the automatic transmission oil temperature becomes high. Under normal conditions, the light comes on when the engine switch is turned ON and goes out when the engine is started.

Advice : If the light comes on while driving, park the car in a safe place and leave the engine running with the hood open to allow it to cool. Once the light goes off, you can drive as usual. If the light does not go off or comes on frequently, have the car inspected at a Mitsubishi Motors dealer.

Door ajar warning light JD28A-DA

Illuminates when the doors and back door are not completely closed.

Caution : Before driving, make sure the warning lights are off.

Fuel level warning light JD63A-Wc

When the engine switch is ON, this light comes on when the fuel level drops below approximately 7L. If this warning light comes on, refuel as soon as possible. ÿ "Fuel Lid (Fuel Filler)" P.3-10 ÿ "Fuel" P.14-1

Caution : Running out of fuel may have a detrimental effect on the catalytic converter.

Advice : • On slopes or curves, the fuel in the tank may move, causing the display to be incorrect.

Machine Translated by Google

switch

Light switch JE31AACa

When you turn the knob, the lamps marked with circles in the table below will light up.

Lamp Name		
Headlights	●	—
Sidelights	●	●
Taillight	●	●
Number plate light	●	●
Instrument lighting •		●

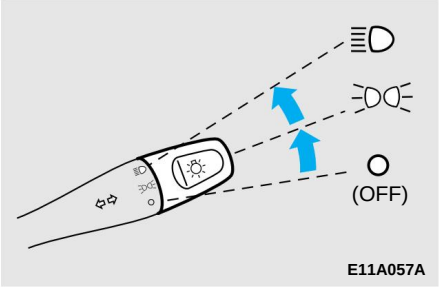

E11A057A

Advice : The inside of the lens may fog up on rainy days or after washing the car. This is the same phenomenon as when windows fog up on humid days, and does not affect the functionality of the product. The fog will clear when the light is turned on by the heat. However, if water accumulates inside the lamp, have the product inspected by a Mitsubishi Motors dealer.

• Headlights * Auto cut function (automatic turning off) * External lights such as headlights and fog lights

illumination

(1) When the light switch is in the or position, the engine switch is turned OFF, and the driver's door is opened, the lights will automatically turn off. • If you remove the key and open the driver's door, a buzzer will beep to let you know that you have forgotten to turn off the lights.

• If the driver's door is opened with the key still inserted, a buzzer will beep intermittently to let you know that you have forgotten to remove the key.

(2) If the light switch is in the or position, the engine switch is turned OFF, and the driver's door is not opened for approximately three minutes, the lamps will automatically turn off.

5

Machine Translated by Google

switch

When using it as lighting after getting off the train

The lights can remain on for approximately 30 seconds after you disembark.

1. Turn the light switch and engine switch to the OFF position. 2. Turn the light switch to the ON position.

Advice : If you set the light switch to the position, the lights will not be available for use as lighting after you get off the bus. (The lights will not turn off automatically and will remain on as normal.)

3. Get out of the driver's seat.

Advice : When you get out of the driver's seat, if the key is removed, a buzzer will sound (beep) to warn you that you have forgotten to turn off the lights. If the key is inserted, a buzzer will sound (beep, beep) to warn you that you have forgotten to remove the key. However, this will stop if you close the door.

4. The lights will automatically turn off after about 30 seconds.

Advice : If the driver's door is not opened, the lights will automatically turn off after about 3 minutes. The following functions can be changed. For details, consult your Mitsubishi Motors dealer. •

Allows the lights to be used as lighting after getting out of the vehicle even when the light switch is in the position.

• Disable the auto-cut function of lamps.

Each time the up/ JE11B-Lc

down lever is pulled to (1), the headlights alternate between pointing up and down. When the lever is lightly pulled to (2), the headlights point up while the lever is being pulled, and the indicator light in the meter also lights up.

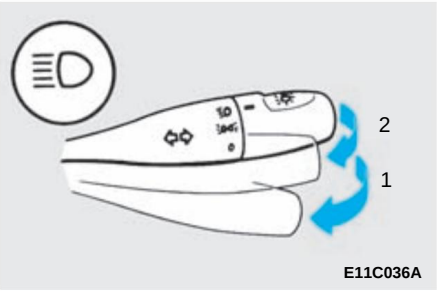

E11C036A

Advice : Even if the light switch is in the (OFF) position, the headlights will stay on while you pull the lever lightly to (2). If you forget to return the headlights to their up position, the next time you turn the light switch to the (OFF) position, they will always start out facing down.

Machine Translated by Google

Headlight levelling dial

The direction in which the headlights shine (light axis) changes depending on the number of passengers and the weight of luggage. If the headlights are pointing more upward than usual because of passengers or luggage, turn the dial to adjust the headlights to point more downward. The larger the number on the dial, the more downward the light axis.

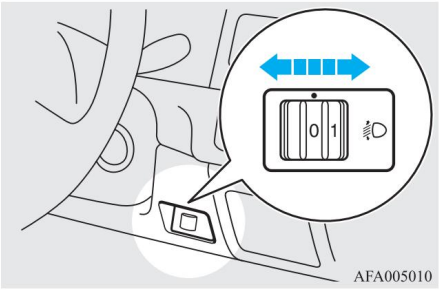

Please adjust the dial position according to the number of passengers and the weight of luggage using the table below as a guide. After unloading passengers or luggage, be sure to return the dial to the "0" position.

Occupant and luggage compartment loading status		Dial Position
	When in the driver's seat	0
	Driver's seat + passenger seat	1
	When all seats are occupied	2
	All seats occupied + luggage room at maximum load	2
	Driver seat in + luggage room at maximum load (rear seats folded)	3

advice

- When adjusting the optical axis, be sure to set the dial to the “0” position (optical axis facing all the way up).

5

Machine Translated by Google

switch

Turn signal lever JE11D-Bd

When the engine switch is ON and the lever is operated to (1), the direction indicator lights and the indicator lights in the meter will flash. The lever will return automatically when you return the steering wheel. If the lever does not return due to a gentle curve, etc., return it by hand. When changing lanes, etc., lightly operate the lever to (2) and the direction indicator lights and the indicator lights in the meter will flash only while you are operating the lever.

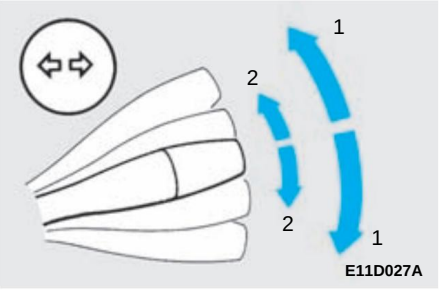

1 - Turn signal
2 - Lane change

Advice : If the turn signal light starts flashing abnormally quickly, the bulb may be burned out, so have your vehicle checked at a Mitsubishi Motors dealership.

Front wiper/washer switch

JE13ACU

It can be used when the engine switch is ON or ACC.

Wiper switch

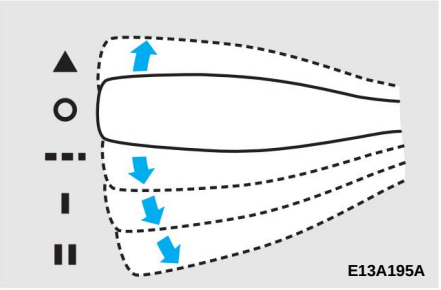

ÿ 1 operation (wiper mist function) Stop

Intermittent operation (approximately every 4 seconds)

Low speed operation

High speed operation

Machine Translated by Google

• Wiper mist function

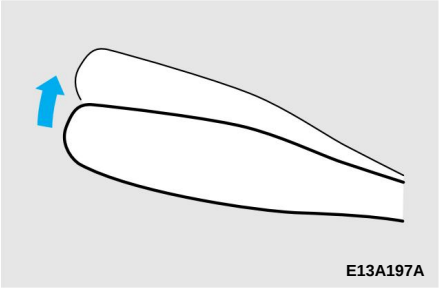

E13A197A

When you raise the lever to the ÿ position and release it, the wipers will operate once. Use this when you want the wipers to operate only once, such as in drizzle. The wipers will operate continuously while the lever is raised to the ÿ position.

Pull the washer switch lever toward you to spray washer fluid. If the washer fluid is sprayed when the wipers are not in operation or are in intermittent operation, the wipers will operate several times.

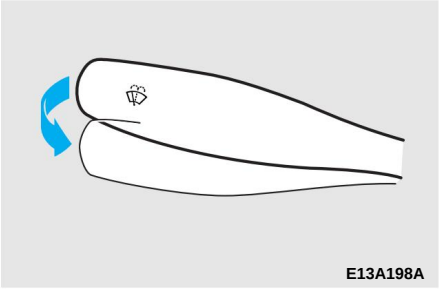

E13A198A

Rear wiper

Washer switch JF03B-Hb

It can be used when the engine switch is ON or ACC.

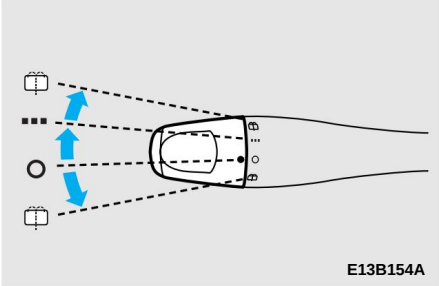

E13B154A

Intermittent operation (approximately every 8 seconds) Stopped While the switch is turned to this position, washer fluid is sprayed and the wipers operate several times at the same time.

advice

• To ensure rear visibility, the wipers will operate automatically several times and then operate intermittently when the switch is in the following positions: • When the switch is in the position • When the shift lever (or selector lever) is shifted to while the wipers are operating intermittently in the position

Machine Translated by Google

Caution for Wiper/Washer Switch

JE13C-Fc

Caution :

When using the washer in cold weather, the washer fluid sprayed onto the glass may freeze and impair visibility. Use the heater or rear window defogger to warm the glass before using the washer.

advice

• If the glass is dirty with dust or mud, wash the car or spray it with washer fluid before using the wipers. Operating the wipers when the glass is dirty may scratch the glass. • If no washer fluid comes out and you continue to operate the washer switch, the pump may malfunction. Check the washer fluid level and check for clogged nozzles. ÿ "Checking and refilling washer fluid" P.11-3 • Do not operate the wiper blades if they are stuck to the glass due to freezing or other reasons. Operating the wiper blades while they are stuck to the glass may damage the wiper blades or cause the wiper motor to break down. If there is a risk of freezing or if the wipers have not been used for a long time, make sure that the wiper blades are not stuck to the glass. • If the wiper blades stop moving midway due to snow accumulation, etc., even if the wiper switch is turned OFF, current still flows through the motor, and the motor may burn out if the engine switch is not turned OFF. Be sure to park the car in a safe place, turn the engine switch OFF, and remove the snow, etc. so that the wiper blades can move.

Machine Translated by Google

Emergency flasher switch JE16A-RUse this switch when you have to stop the car on the road due to a breakdown or other reasons. When you press the switch,
all emergency flashers will flash and the indicator light in the meter will also flash. Press it again to turn them off.

Advice : If the
vehicle is used for a long period of time with the engine off, the battery may become drained and the engine may not start.

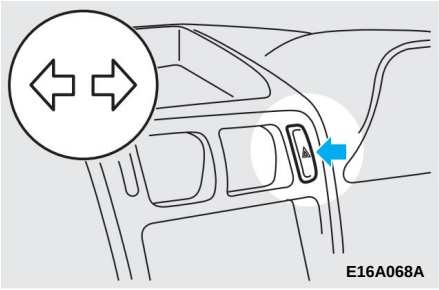

E16A068A

Rear window defogger switch JE17A-Ie

The heating wire printed on the rear window warms the glass and defogs it, while also making it easier to remove frost and ice from the glass surface.
When the engine switch is ON, press the switch to activate the system, and the indicator light will turn on. Press the switch again to stop the system.

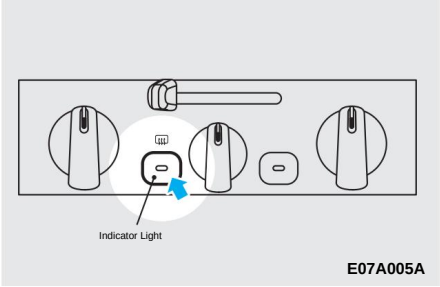

E07A005A

Advice : Do not
use this device when the engine is stopped. This may cause the battery to die and the engine to not start. This device consumes a
lot of power, so please turn it off once the fog has cleared.

• Do not place any objects near the rear window. The heating wire may break if an object hits it due to the vibration of the
vehicle. • When cleaning the inside of the rear window, use a soft cloth and wipe along the heating wire to avoid damaging it.

Machine Translated by Google

Front fog lamp switch

Equipment by type

JE18A-We

Use this function when visibility is poor, such as when it is foggy or at night when it is raining or snowing. When the headlights or taillights are on, pressing the switch will turn on the front fog lights and the indicator light in the meter. To turn them off, press the switch again.

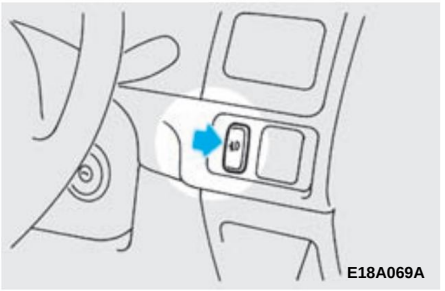

Advice : When

the headlights and taillights are turned off, the front fog lights will automatically turn off.

• To turn the lights back on, press the switch again when the headlights or taillights are on.

Horn switch JE23A-D

Pressing the mark on the handle will sound the horn.

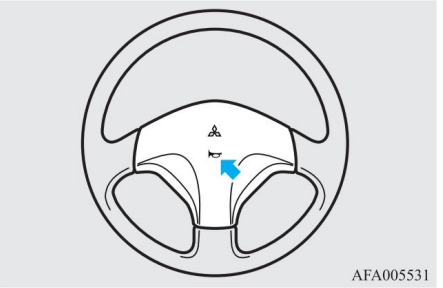

Machine Translated by Google

Driving device

Engine switch 6- 2

Before starting the engine.....6- 3

How to start the engine.....6- 4

Handling of turbo cars 6- 6

Manual Transmission 6- 6

Automatic transmission
(With shift lock device) 6- 7

Parking brake 6-15

Rearview mirror 6-16

Door mirrors.....6-16

Side Under Mirrors.....6-18

Anti-lock Braking System (ABS).....6-19

Machine Translated by Google

Engine switch JI41A-Ed

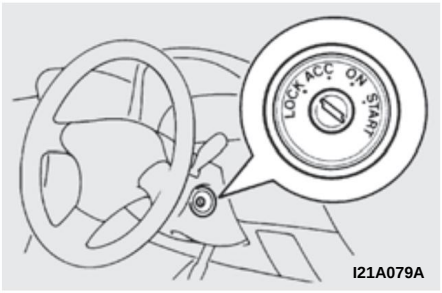

Function of each position

6

LOCK	The key can be inserted and removed. When the key is removed, the handle is locked.
ACC (Accessories)	You can use the audio, cigarette lighter, etc. even with the engine turned off.
ON	All electrical systems are functional. This is the position when the engine is running.
START	The engine will start. Once the engine is running, release the key. It will automatically return to the ON position.

advice

• When the engine is stopped, turn the engine switch to LOCK. Using electrical appliances such as a radio or cassette stereo for a long period of time with the engine switch in ON or ACC position may cause the battery to run down, making it impossible to start the engine. • Do not turn the key to the START position while the engine is running. Doing so may damage the starting motor.

When removing the key, turn it to the LOCK position and then remove it. For automatic vehicles, the key cannot be (P) removed unless the selector lever is in the ACC position. For manual vehicles, while holding the key in the ACC position, turn it to the LOCK position and then remove it.

Advice : If you

cannot turn the key from LOCK to ACC, gently move the steering wheel left and right while turning the key.

Machine Translated by Google

Before starting the engine JI47A-L

1. Assume the correct driving position.
   Adjust the seat position so that you can depress the brake pedal firmly and operate the steering wheel easily.
   ÿ "Front Seat" P.4-2 2. Make sure that the parking brake is applied.

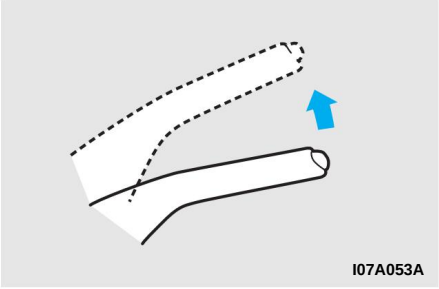

3. If you have a manual transmission, put the shift lever in and fully depress the clutch pedal. If you have an automatic transmission, put the selector lever in. (P)

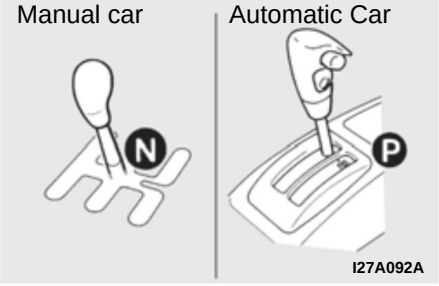

advice

• For automatic vehicles, the engine will not start unless the selector (N) lever is in or . For safety, start the
engine in a position where the wheels can be (P) fixed. • Manual vehicles are
equipped with a clutch start system.

What is a clutch start system? To prevent accidental operation, this is a device that prevents the engine from starting unless the clutch pedal is fully depressed.

4. Press the brake pedal with your right foot.

WARNING : In an automatic vehicle, use your right foot to check the position of each pedal to avoid accidentally stepping on the accelerator instead of the brake. If
you confuse the accelerator pedal for the brake pedal, the vehicle may accelerate suddenly, which could result in a serious accident.

Caution :

Even if the engine is difficult to start without depressing the accelerator pedal, such as in extremely cold weather, be sure to depress the brake pedal after the engine starts.

Machine Translated by Google

How to start the engine JI47BAR

⚠

WARNING : Do not leave the engine running in a poorly ventilated enclosed space such as a garage, as this may result in gas poisoning. If the exhaust sound changes or you still smell gasoline or exhaust gas inside the vehicle, this may be due to an abnormality in the exhaust or fuel system. Be sure to have your vehicle inspected by a Mitsubishi Motors dealer.

⚠ Note

• Do not start the engine from outside the vehicle, for example through a window. This may lead to an unexpected accident. Sit in the driver's seat in the correct driving position before starting the engine. ÿ "Before starting the engine" p. 6-3 • If the engine warning light comes on while the engine is running, avoid driving at high speeds and have the vehicle inspected at a Mitsubishi Motors dealer as soon as possible.

Machine Translated by Google

advice

• To prevent the battery from running out or the starting motor from breaking down, do not turn the starting motor for more than 10 seconds after setting the key to START. If the engine does not start after 10 seconds, return the key to LOCK, wait 2 to 3 seconds, and then try to start the engine again. Repeated attempts to start the engine before the engine or starting motor has stopped may cause damage to related parts. • To protect the engine, avoid running the engine at high speeds or at high speeds when the engine is cold or immediately after restarting. • After replacing the battery, the learned contents of the electronic control system, including the engine, are erased, which may cause the engine speed to become unstable. If the engine speed becomes unstable, perform the initial engine adjustment.

ÿ "If the engine speed becomes unstable after replacing the battery!" P.13-24

• Normally, you

start the engine by turning the engine switch to START without pressing the accelerator pedal.

• During extreme cold

1. With the accelerator pedal half-depressed, turn the engine switch to START to start the engine. 2. Once the engine is running, gradually release the accelerator pedal.

TIP : If the engine does not start, follow these steps: • Start the engine with the accelerator pedal fully depressed.

• Once the engine is running, gradually release the accelerator pedal.

Machine Translated by Google

Handling turbo cars JC15A-EB

> ⚠ Caution :
>
> Immediately after starting the engine, do not rev the engine at high speeds by idling or accelerating suddenly.

What is a turbo?

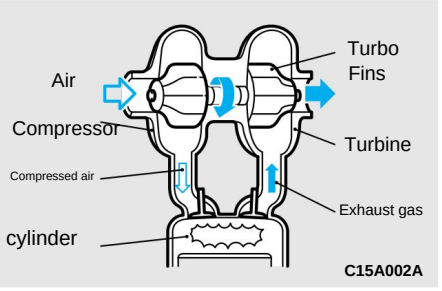

Officially called a turbocharger, it supercharges a large amount of air into the cylinder to produce greater power. The turbo fins rotate at extremely high speeds and are used under high temperatures. Lubrication is provided by engine oil, and cooling is provided by engine oil and coolant. If the engine oil is not changed at the specified time, it can cause the turbo bearings to stick and abnormal noises to occur.

Manual transmission

JI29A-BD

Shift lever

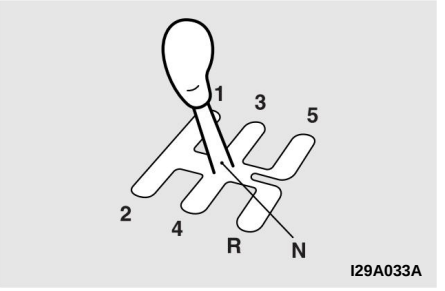

Be sure to fully depress the clutch pedal before operating the shift lever.

> ⚠ Caution :
>
> Make sure the vehicle is completely stopped before putting it into parking.

advice

• Do not always place your foot on the clutch pedal or use it as a footrest. This can cause premature wear and damage to the clutch. • If it is difficult to shift into gear, depress the clutch pedal again to make it easier. • You cannot shift directly into gear.

Please turn it on once and then put it in the car.

Machine Translated by Google

Shift Positions and Speed Ranges To avoid over-revving the JI03CCUc engine, do not exceed the speeds shown in the table below for each shift position.

advice

• Obey legal speed limits when driving. • Use the minimum speed for each shift position at a speed that does not cause knocking.

Unit: km/h

Item		1st speed	2nd speed	3rd speed	4th speed	5th speed
except Ta l- bo car	2H, 4H	25	40	65	100	
	4L	15	25	40	60	
Ta l- bo car	2H, 4H	25	45	75	120	
	4L	15	30	45	70	

Automatic transmission (with shift lock device) JI04A-Fi

Please also read "For a safe drive - Handling automatic vehicles."

ÿ P.2-10

How to move the selector lever

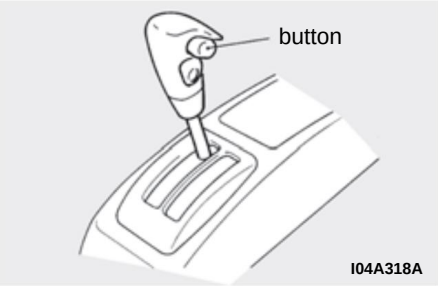

I04A318A

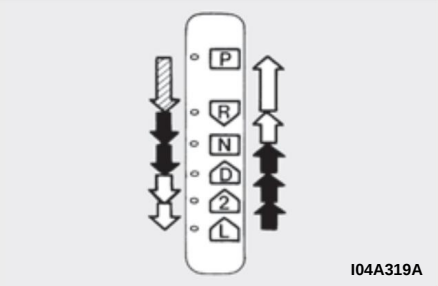

I04A319A

To operate, press the button while keeping your foot on the brake pedal.

is operated without pressing any buttons.

Operate while holding down the button.

Machine Translated by Google

WARNING • Always operate the lever without pressing the button. If you always operate the lever with the button P , R , 2 , L pressed, you may accidentally put the lever into , which may cause an unexpected accident and result in serious injury. • For safety reasons, do not put the lever into while driving.

Note

• For safety reasons, make it a habit to keep your foot on the brake pedal when performing the following operations.
N ÿ , ÿD N R

Advice : * If you do not depress the brake pedal, the shift lock device will activate and you will not be able to operate the gear shift to any other position. Also, when the key is in the LOCK position, you will not be able to operate the gear shift from to any other position D, even if you depress the brake pedal. When shifting from to or from, depress the brake pedal firmly and make sure the vehicle comes to a complete stop before shifting the gear shift R Shifting the gear shift into or from while the vehicle is moving may damage the transmission.

• Indicator light: A lamp indicates the position of the selector lever.

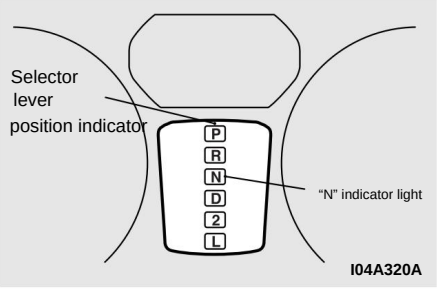

Note

• If the "N" indicator light flashes while driving, some abnormality has occurred in the transmission and the safety device has been activated. Have the vehicle inspected at a Mitsubishi Motors dealer as soon as possible.

Machine Translated by Google

Selector lever position and function

JI04BXZ

P	(Parking) When parking and starting the engine	The wheels will be locked. When parking, be sure to apply the parking brake. (P) The key can only be removed from the engine switch.
R	(Reverse) When moving backwards	(R) When the switch is pressed, a buzzer will sound to inform the driver that the vehicle is in a dangerous position. ⚠ Caution : Please note that the buzzer cannot be heard by people outside the vehicle.
N	(Neutral) Neutral	No power is transmitted. The engine can be started in this position, but for safety reasons, please start the engine in this position. (P)
D	(Drive) Normal	The gears change automatically from starting to high-speed driving.
2	driving (Second)	Use when engine braking is required.
L	Downhill driving (Low) Steep downhill driving	Use when strong engine braking is required. ⚠ WARNING : Avoid sudden engine braking on wet or icy roads as this can cause the vehicle to slip and result in a serious accident.

Machine Translated by Google

advice

• The automatic transmission control system will be activated to prevent the engine from over-revving, and the gear may not shift even when the selector lever is in the ❷ , ❶ fart position.

Overdrive Switch

JI04C-G

It works when the selector lever is in ❹ .

• Turn on the normal driving switch. The vehicle will automatically shift from 1st to 4th gear, allowing for economical driving with good fuel economy.

• Turn off the hill driving switch. The indicator light in the meter will light up. The vehicle will automatically shift from 1st to 3rd gear, and light engine braking will be available when going downhill.

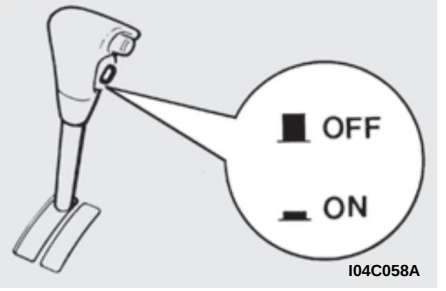

I04C058A

• Indicator light

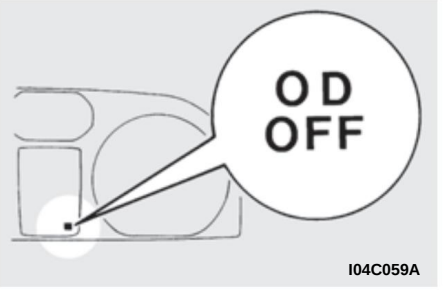

I04C059A

Machine Translated by Google

How to drive

JI04D-DA

Automatic Car

Start

JI04M-S

1. Press the brake pedal with your right foot.

caveat

- Always use your right foot to brake. Using your left foot to brake may result in delayed reaction in an emergency and may result in an inability to perform proper operation, which may lead to a serious accident.

Note

- When the selector lever is in a position other than P (forward or reverse), the vehicle will start moving when you take your foot off the brake pedal due to the creep phenomenon, even if you do not depress the accelerator pedal. The creep phenomenon becomes stronger when the engine speed is high, such as when the air conditioner is running, so please depress the brake pedal more firmly.

What is creep phenomenon?

This is a phenomenon unique to automatic vehicles; when the selector lever is in a position other than P, the power is connected and the car starts moving slowly even without pressing the accelerator pedal.

2. Place the selector lever in for forward D or in for R reverse.

WARNING : Always operate the selector lever while depressing the brake pedal. Never operate the selector lever while depressing the accelerator pedal. Doing so may cause the vehicle to accelerate suddenly, which may lead to a serious accident.

3. Check the position of the selector lever. 4. Check the surrounding area for safety and release the parking brake. 5. Gradually release the brake pedal, slowly depress the accelerator pedal and start moving. Starting on a steep

uphill slope

1. With the parking brake still applied, release your foot from the brake pedal to prevent the vehicle from moving.
2. While slowly depressing the accelerator pedal, release the parking brake and start moving.

Machine Translated by Google

Running

JI04N-A

> Caution :
>
> Do not put the selector lever in while driving (N). This will prevent the engine brake from working, and may result in an unexpected accident.

• Normally, set the selector lever to (D). When you start moving, the gears will automatically change according to your speed.

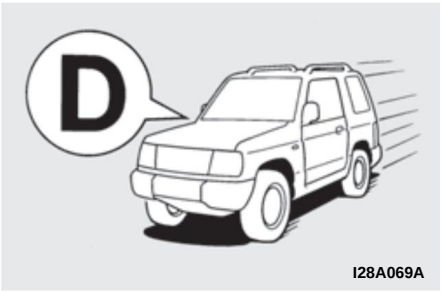

I28A069A

• When you want to accelerate quickly, press the accelerator pedal deeply. The vehicle automatically shifts to a lower gear to allow for rapid acceleration. This is called kickdown.

JI04F-FC

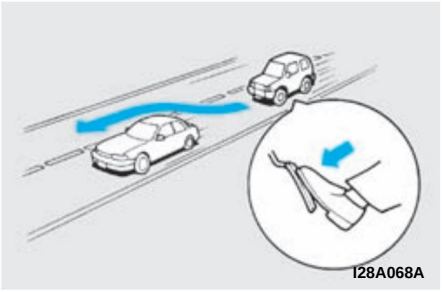

I28A068A

• Driving uphill

JI04R-A

When you depress the accelerator pedal to maintain speed on an uphill road, the engine may kick down and the engine speed may increase. If this occurs, set the shift lever to " " beforehand to (2) reduce the number of gear changes and allow for smoother driving.

• Driving downhill

JI04O-Cb

Put the selector lever in and use (2) the engine brake.

Using only the foot brake too much on a long downhill slope can cause vapor lock or brake fade, which can reduce the effectiveness of the brakes, making it dangerous. Be sure to use the engine brake as well.

Vapor lock is a phenomenon in which the brake fluid becomes overheated and boils due to the frictional heat of the brakes, generating bubbles, which then become ineffective even when the brake pedal is depressed, as the bubbles are compressed.

Fade is a phenomenon in which the frictional force of the brake pad or brake lining decreases when the friction surface becomes overheated, causing the brakes to become less effective.

> caveat
>
> • Sudden application of engine braking may cause the tires to slip, which may lead to a serious accident.

> Tip : Turning
>
> the overdrive switch OFF provides light engine braking, which is useful on long downhill stretches on the highway.
>
> ÿ P.6-10

Machine Translated by Google

• Especially when you JI04PCUc

need powerful engine braking on steep downhill slopes.

Ⓛ Put it in.

⚠

WARNING : Sudden engine braking may cause the tires to slip, which may result in a serious accident.

Stop JI04G-J

1. Keep the selector lever in Ⓡ e position and press the brake pedal firmly.

⚠ Caution :

When the engine speed is high, such as when the air conditioner is running, the creep phenomenon becomes more severe, so be especially careful to prevent the vehicle from moving.

2. Apply the parking brake if necessary.

⚠

Caution : On a steep uphill slope, the vehicle may roll back even if the creep phenomenon is activated. When stopping, depress the brake pedal and firmly apply the parking brake. Do not try to stop the vehicle by depressing the accelerator pedal without depressing the brake pedal when going uphill.

3. If you expect to be stopped for a long time due to traffic jams, etc., shift the sel Ⓝ tor lever into .

⚠ Caution :

Do not rev the engine excessively while the vehicle is stopped. If the selector lever is in any position Ⓟ , Ⓝ other than the position, this may cause the vehicle to suddenly accelerate.

4. When starting again, make sure that the Ⓓ selector lever is in the position by checking the selector lever position indicator light in the meter before starting.

Machine Translated by Google

Parking

JI04H-H

1. Bring the vehicle to a complete stop. 2. While keeping your foot on the brake pedal, ensure that the parking brake is applied. 3. Place the selector lever in (P).

Note :

In this (P) position, the wheels are fixed, so there is no risk of the vehicle moving around and it is safe. When parking, always check the selector lever position indicator light in the meter to make sure that the selector lever is in the (P) position.

• If you put the vehicle into gear before it has come to a complete stop, it may come to a sudden stop, causing injury or damaging the transmission.

Advice : When on a slope, first apply the parking brake, then move the selector lever to (P). If you put the selector lever in (P) without applying the parking brake, the selector lever may become heavy when starting off.

4. Turn off the engine.

Caution :

Always turn off the engine and remove the key when leaving the vehicle. If the engine is left running and the selector lever is in a position other than (P), the vehicle may creep and start moving on its own, or the accelerator pedal may be accidentally pressed when getting into the vehicle, causing the vehicle to suddenly accelerate.

advice

• Even when moving the vehicle a short distance, make sure you adopt the correct driving posture and are able to depress both the brake pedal and the accelerator pedal securely. • When reversing the vehicle, your body will be twisted backwards, making it difficult to operate the pedals. Make sure you can depress the brake pedal securely. • When operating the lever (R) repeatedly, (D) such as when changing direction, make sure you depress the brake pedal firmly each time and bring the vehicle to a complete stop before doing so.

Machine Translated by Google

Parking brake

JI07A-Nh

When parking, pull
the parking brake lever all the way without pressing the button.

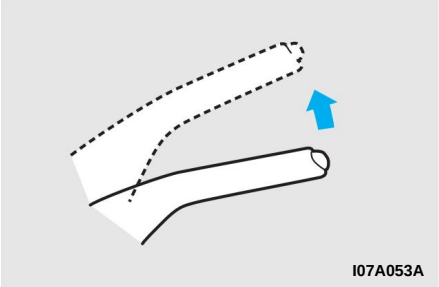

⚠

Caution : When parking on a slope, be sure to apply the parking brake and p❶ the shift Ⓡ lever in or (in the cas Ⓟ f automatic vehicles).

When returning

1. Slightly pull up the lever.
2. While holding down the button. 3. Return the lever completely. When you return the lever, check that the brake warning light in the meter is off.

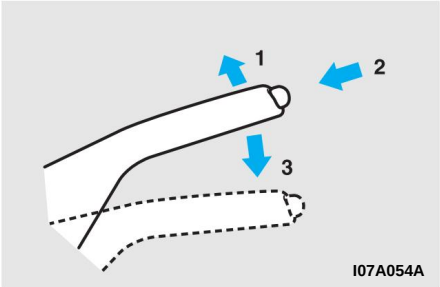

⚠

Caution : Driving with the parking brake applied can cause the brakes to overheat, reducing their effectiveness and possibly causing brake failure.

Machine Translated by Google

Rearview mirror JI08A-Gb

Caution : Always make adjustments before driving.
Adjusting the speed while driving may lead to driving errors and unexpected accidents.

Adjusting the mirror angle

Move the mirror body up, down, left and right to adjust the angle.

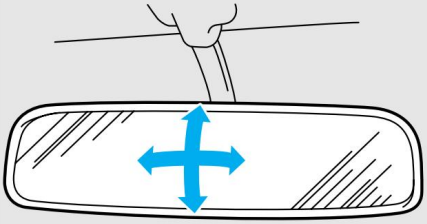

I08A055A

door mirror JI18BBDa

Mirror angle adjustment

Caution: • Be sure to adjust the mirror before driving. • The door mirrors are convex mirrors.

Please note that convex mirrors make objects appear farther away than flat mirrors, and your sense of distance will be different from reality.

This can be operated when the engine switch is ON or ACC.

1. Move the switch lever in the direction you want to adjust.

   L: Left mirror adjustment R:

   Right mirror adjustment
2. Press the adjustment switch to adjust the angle.

vinegar.

Advice : When you have completed the adjustment, return the switch lever to the center position.

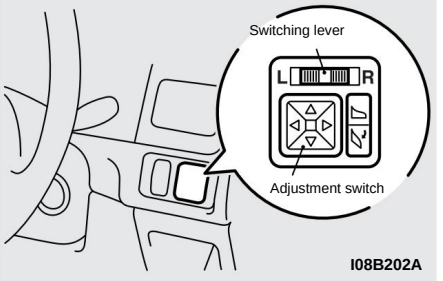

I08B202A

Machine Translated by Google

How to fold the door mirrorsThe mirrors can be folded towards the rear of the vehicle. To return them to their original position, push them towards the front of the vehicle until you hear a click.

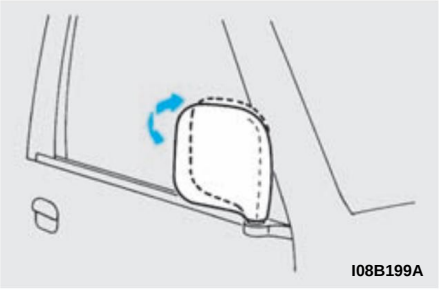

I08B199A

Caution :

Do not drive with the mirrors folded down. Doing so will prevent you from checking behind you, which may lead to an unexpected accident.

• Mirror folding switch can be operated when the engine switch is ON or ACC.

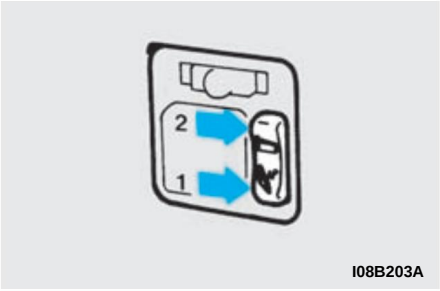

I08B203A

1. Press the (1) side of the mirror fold switch to automatically fold the mirror backwards. 2. To return the mirror to its original position, press the (2) side of the mirror fold switch. 3. When you are finished, lightly press the other side of the mirror fold switch to return it to the neutral position

Advice : • Do not turn the engine switch to LOCK while the mirrors are in operation. • The mirrors can be folded down or returned to their original position by hand, but when the engine switch is in ON or ACC position, they will move in the direction that the mirror folding switch is pressed. • After moving a mirror by hand or after it is hit by a person or object, it may not be possible to operate the mirror with the mirror folding switch. In such a case, press side (1) of the mirror folding switch to store the mirror, then press side (2) to return the mirror to its original position. • If the door mirrors do not move due to freezing or other reasons, do not operate the mirror folding switch repeatedly. This may cause the motor to burn out.

Machine Translated by Google

Hydrophilic mirror door mirror

Equipment by type

J00709100010

The mirror surface of the door mirror is coated with a coating that spreads water droplets on the mirror surface into a film (hydrophilic effect) in rainy weather, making it easier to see behind.

However, the hydrophilic effect may not be sufficient for small amounts of water droplets such as drizzle or light rain. For normal maintenance, simply rinsing with water is sufficient, but please follow the maintenance instructions to prolong the hydrophilic effect and prevent the door mirror from getting scratched. ÿ "Maintenance of exterior parts: Maintenance of hydrophilic mirror door mirrors" P.11-9

Side under mirror JI08D-BB

Use this when checking the side of the vehicle on the passenger side when starting or at very low speeds.

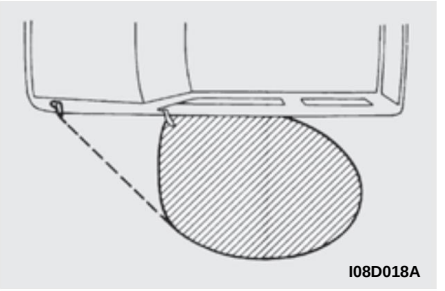

I08D018A

Caution :

- Use the rearview mirror and door mirrors to check behind you. • It is difficult to adequately check the areas directly in front of the car, behind it, and diagonally to the left from the driver's seat. When moving forward or backward in a parking lot, etc., do not rely solely on the mirrors; get out of the car and check your surroundings carefully before moving the car. • Even when you have stopped at a traffic light, etc., be sure to pay attention to your surroundings and make sure it is safe before setting off.

Machine Translated by Google

How to tilt and raise the side under mirrorsWhen parking in a narrow space, you can manually fold the side under mirrors toward the front of the vehicle. When raising them, return them to the position where the alignment marks on the top and bottom of the side under mirrors are aligned.

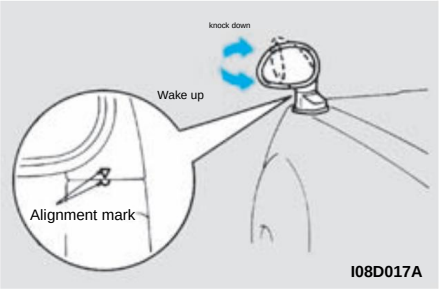

Caution : Do not drive with the side under mirrors folded down.

Advice : The mirror surface of the side under mirror is fixed and the mirror cannot be adjusted by moving the mirror surface.

Anti-lock Braking System (ABS) JI24ACG

Equipment by type

An anti-lock braking system (ABS) is a device that prevents the wheels from locking when braking suddenly or on a slippery road, maintains braking force, and keeps the vehicle in a stable position and handles well.

Caution :

The ABS system is designed to ensure vehicle stability during braking, but it does not necessarily shorten the braking distance. Do not rely too much on the ABS system, and always drive safely by maintaining a sufficient distance between vehicles.

- After driving on snowy roads, remove any snow or mud from the suspension. When cleaning the suspension, be careful not to damage the speed sensor or wiring near the wheels.
- Use the same size and type of specified tires on all four wheels. Mixing tires of different sizes or types may cause the ABS to not function properly.
- Do not install a commercially available limited slip differential (LSD).

There is a risk that the ABS will not function properly.

Machine Translated by Google

advice

• In the following cases, the braking distance may be longer than in a vehicle without ABS, so drive slowly and keep a safe distance from the vehicle ahead. • When driving on gravel roads or roads with deep fresh snow.

tree

• If tire chains are installed

tree

• Overcoming road joints and bumps Time

• When driving on rough roads such as bumpy roads. • In situations where the wheels are likely to slip, such as when driving over manholes, iron plates for construction work, white lines, or steps, the ABS may be activated even when not braking suddenly to prevent the wheels from locking. • When the ABS is activated, you may feel vibrations in the vehicle, steering wheel, and brake pedal, and hear an operating sound. The brake pedal may also feel hard when you press it. This indicates that the device is working properly and is not an abnormality. Continue to press the brake pedal firmly. • After starting to drive, you may hear a motor sound from the engine compartment and feel a shock on the brake pedal. This is because the ABS device is checking its operation and is not an abnormality. • The ABS does not activate until the vehicle speed reaches approximately 10 km/h after starting. It also stops operating when the vehicle speed drops to approximately 5 km/h.

When the ABS warning light is working properly, it will come on when the engine switch is turned ON and will go off after a few seconds.

Caution :

If the light remains on or does not light up, the device may be malfunctioning, so have it inspected at your Mitsubishi Motors dealer.

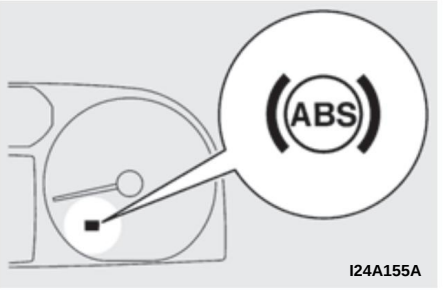

I24A155A

If the warning light comes on while driving

1. Park the vehicle in a safe place, shut off the engine, and restart it. If the light does not come on after driving for a while, there is nothing wrong. If the light remains on after driving for a while, have the vehicle inspected at a Mitsubishi Motors dealer. In this case, the ABS will not operate and the vehicle will function as a normal brake. 2. If the battery voltage is low and the engine is started, the warning light may come on, but this does not indicate a malfunction of the ABS. If this happens, let the engine idle for a while to charge the battery. If the light remains on even after charging, or if it comes on frequently, have the vehicle inspected at a Mitsubishi Motors dealer.

Machine Translated by Google

4WD Car handling

Transfer shift lever.....7- 2

4WD operation indicator light..... .....7- 4

How to drive a 4WD vehicle well.....7- 4

Precautions for Handling 4WD Vehicles.....7- 7

After off-road driving 7- 8

Machine Translated by Google

Transfer shift lever

JI48ACPg

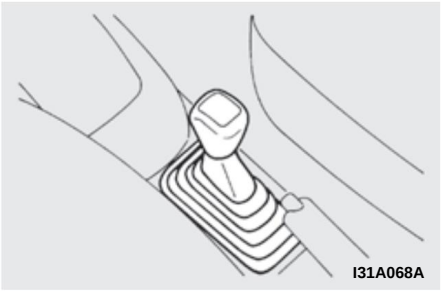

By operating the transfer shift lever, you can switch between 2WD (rear wheel drive) and 4WD (four wheel drive). Shift the transfer shift lever to each position according to the road conditions.

• Transfer shift lever position

2H (2WD) This is

the position for driving on public roads and expressways.

4H (High Range 4WD) This is the

position when driving at normal speed on snowy, sandy, or rough roads.

4L (Low Range 4WD) This position is

used when driving on rough roads such as steep inclines, steep descents, sand, or mud (especially when driving at low speeds where large driving force is required).

⚠ Note

• On dry paved roads, always drive in "2H". Never drive in "4H" or "4L", especially on dry highways. Driving on dry paved roads in "4H" or "4L" may result in increased fuel consumption, noise, and premature tire wear. In addition, it may put strain on the drivetrain components, which may cause serious breakdowns such as oil leaks and seizure. Always drive in "2H". • For automatic vehicles, do not exceed approximately 50km/h in "4L".

• Transfer shift lever operation

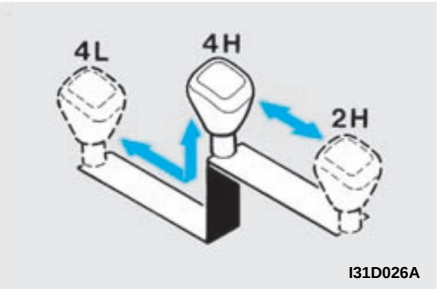

2H ÿ 4H

[Manual vehicles]

This can be operated while the vehicle is moving or stopped. When operating while driving, the vehicle must be moving in a straight line and the clutch pedal must be fully depressed before operation.

Machine Translated by Google

[Automatic vehicles] This can be operated while the vehicle is moving or stopped. When the vehicle is stopped, place the selector lever in (neutral) before operating. When driving, make sure the vehicle is moving straight ahead and release the accelerator pedal before operating.

⚠ Note

• When switching between "2H" and "4H" while driving, do so at a speed of 80 km/h or less. • Do not operate the transfer shift lever while the rear wheels are spinning on snowy roads, etc.

Advice: • In low temperatures, when you try to change from "2H" to "4H" for a while after driving, the transfer shift lever may become hard to operate or the gears may make noise. If this happens, stop the vehicle before changing gears.
• If you change to "2H" while the steering wheel is turned in "4H", the transfer shift lever may become hard to operate, but this is not a malfunction.

4H ÿ 4L

[Manual vehicles]
Stop the vehicle, fully depress the clutch pedal and operate the transfer shift lever by pushing it down.

[Automatic vehicles]
Stop the vehicle, move the selector lever to (neutral), and then operate the transfer shift lever while pressing it down. If you operate it in any position other than (neutral), gear noise may occur and the vehicle may not shift.

4L ÿ 4H

[Manual vehicles]
Stop the vehicle, fully depress the clutch pedal and operate the transfer shift lever.

[Automatic vehicles]
Stop the vehicle, put the selector lever in (neutral), and then operate the transfer shift lever. If you operate it in any position other than (neutral), the gears may make noise and the vehicle may not shift.

⚠
Caution : Do not switch between "4H" and "4L" while driving.

7

Machine Translated by Google

4WD Car handling

4WD operation indicator light JI48BCPb

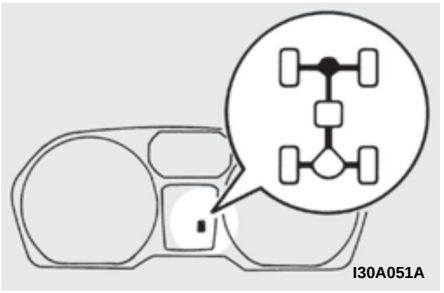

When the engine switch is turned ON, the 4WD operation indicator light in the meter shows the transfer switch status. It lights up when the vehicle is in 4-wheel drive (4H or 4L) and goes out when the vehicle is in rear-wheel drive (2H).

advice

- If the 4WD operation indicator light does not come on even when the transfer shift lever is in "4H", keep the vehicle in a straight line and drive slowly for a while, then make sure the 4WD operation indicator light comes on before continuing driving normally.
- If the 4WD operation indicator light does not turn off even when you shift the transfer shift lever from "4H" to "2H", check the safety of your surroundings and accelerate, decelerate or reverse, and make sure the 4WD operation indicator light is off before driving off. If the 4WD operation indicator light remains on even after accelerating, decelerating or reversing, leave the transfer shift lever in "2H" and have your vehicle inspected at your Mitsubishi Motors dealer as soon as possible.

How to drive a 4WD vehicle properly JI32A-Hc 4WD

vehicles are not all-purpose vehicles that can be driven anywhere. Please pay close attention to the road surface and slope conditions and drive safely.

Advice : • Sit in a slightly upright riding position, adjust the seat so that it is easy to operate the steering wheel and pedals, and always wear your seat belt. • After driving off-road, always inspect each part of the vehicle and wash it thoroughly with clean water. ÿ "After Driving Off-Road" P.7-8

• When driving on snowy or icy roads, shift the transfer shift lever to "4H" or "4L" depending on the snow or ice conditions.

Caution :

Avoid sudden acceleration, braking, or sudden steering while driving as this may cause slipping or skidding.

Advice : • We recommend that you use tire chains or winter tires. • Keep a sufficient distance from the vehicle ahead, avoid sudden braking, and make good use of engine braking.

Machine Translated by Google

• When driving on sand or mud , check the condition of the sand or mud, put the transfer shift lever in "4H" or "4L", gradually depress the accelerator pedal to start off, and keep the accelerator as constant as possible while driving at a low speed.

Caution

• Do not drive excessively on sand. This places a greater strain on the engine and drivetrain components than on regular roads, which can lead to unexpected breakdowns. • If the water temperature gauge needle approaches the "H" indicator while driving, or if the A/T oil temperature warning light (automatic vehicles) in the meter comes on, immediately stop the vehicle in a safe place and take appropriate action. ÿ "If the vehicle overheats !" P.13-19 ÿ "A/T oil temperature warning light" P.5-8

advice

• In muddy conditions, it is difficult to see the road conditions and you may get bogged down in the mud, so whenever possible, get out of your car and check the road conditions before driving. • If you need to drive through particularly bad mud, it is a good idea to use tire chains (on the rear wheels).

• Sudden acceleration, braking, and sudden steering while driving can make it easier to get stuck (the tires become buried in sand or mud and the vehicle becomes unable to move), so please avoid these actions whenever possible.

• If your car gets stuck, while lightly depressing the accelerator pedal, put the shift lever in ÿ if you have a manual transmission, or put the selector lever in ÿ if you have an automatic transmission , and repeatedly move forward and backward, using inertia to free yourself. If one of your rear wheels is stuck in mud and you cannot get it out, pull the parking brake lever slightly to apply the brakes slightly (but not fully) and then gradually depress the accelerator pedal to start moving. This will make it easier to get out. After you have freed yourself, release the parking brake lever. • If you have driven near the sea, wash your car as soon as possible as the salt in the seawater can cause rust to form on your car.

Machine Translated by Google

4WD Car handling

• When climbing a steep slope,
put the transfer shift lever in “4L” to make effective use of engine power.

Caution :
Avoid zigzagging diagonally as you climb; climb as straight as possible.

Advice : Choose
an area with minimal rocks, sand and bumps, and choose a gentle slope at the beginning and end of your climb.
• Before climbing, walk to the top on foot to make sure your vehicle can climb the slope.

• When descending a steep slope,
put the transfer shift lever in "4L" and descend slowly using the engine brake to prevent the tires from locking.

Caution :
Avoid zigzagging diagonally as you descend. Go as straight as possible.

Advice : • When
descending a slope, if you see an obstacle ahead and hastily brake, you may lose control of your vehicle, so if possible, walk to check the condition of the slope before descending. • When descending a slope, avoid changing gears or operating the clutch while you are descending. It is important to select a gear that is appropriate for the slope conditions in advance.

• When crossing a river,
even 4WD vehicles are not completely water-resistant. If the electrical system becomes flooded, the vehicle will become unable to move. Avoid driving
through water as much as possible. If you have to cross a river, put the transfer shift lever in "4L" and observe the following points when crossing the river.

1. Before crossing a river, check the depth and topography of the
river. 2. Choose a place as shallow as possible and drive slowly at about 5km/h to avoid creating waves. 3.
Cross the river at a right angle or downstream, and cross in one go without changing gears or using the clutch during the crossing.

Caution :
After crossing a river, your brakes will become less effective. Pay close attention to the vehicles in front and behind you, drive slowly, and lightly depress the brake pedal several times to restore brake effectiveness.

Advice : Frequent
crossings will have a significant impact on the lifespan of your vehicle. Please consult your Mitsubishi Motors dealer in advance to have the appropriate measures and inspections carried out.

Machine Translated by Google

4WD vehicle handling precautions JI49A-De

- Driving on dry paved roads and highways

When you do

⚠ Note

• On dry paved roads, always drive in "2H". In particular, never drive in "4H" or "4L" on dry highways. Driving on dry paved roads in "4H" or "4L" may result in increased fuel consumption, noise, and premature tire wear. In addition, it may put strain on the drivetrain parts, which may cause serious breakdowns such as oil leaks and seizure. Always drive in "2H".

• When going around a sharp curve , when in four-wheel drive, a phenomenon similar to that of braking may occur when turning a sharp curve at low speed. This is called tight corner braking, and is a phenomenon unique to four-wheel drive vehicles that occurs because the trajectories of the front and rear tires are different. When this phenomenon occurs, it can be resolved by returning the steering wheel to a straight-ahead position or by switching to rear-wheel drive.

⚠

Caution : When making sharp turns, the tight corner braking phenomenon occurs, making it difficult to drive, so avoid making sharp turns.

• About tires and disc wheels

In 4WD vehicles, driving force is applied to all four tires, so the condition of the tires has a large effect on the vehicle's performance.

Please pay close attention to the tires. • Use the specified tires and disc wheels on all four wheels. ÿ "Tire and wheel sizes" P.14-7 • When replacing tires or disc wheels, replace all four wheels. • Rotate the tires every 5,000 km. ÿ "Tire rotation" P.11-4 • Check the tire pressure regularly.

⚠

Caution : Use tires of the same specified size, type, and brand, and with no difference in wear. Using tires of different sizes, types, brands, or levels of wear may put strain on drivetrain components, causing serious breakdowns such as oil leaks and seizure, which may lead to unexpected accidents.

• In manual vehicles, operate the clutch pedal slowly and surely. If the clutch is suddenly engaged or pressed halfway when the engine is running fast, the strong pulling force can damage the clutch, transmission, etc. Operate the pedal slowly and surely.

Machine Translated by Google

4WD Car handling

When jacking up

⚠

WARNING : Do not start the engine or rotate the wheels while the vehicle is on the jack. Doing so may cause the tires on the ground to rotate, causing the vehicle to come off the jack and resulting in a serious accident.

After off-road driving, JI50A-Bc

1. Check for damage caused by protruding objects on the road (such as stones). 2. Wash the vehicle thoroughly with clean water. Especially when driving on sandy beaches or roads where deicing salt has been spread, the salt in the vehicle can easily cause rust.

⚠ Caution :

After washing the vehicle, lightly depress the brake pedal several times while driving at a low speed to dry the brakes. If the brakes do not work properly, have them inspected immediately by a Mitsubishi Motors dealer.

3. Remove any insects, dead grass, etc. that may be clogging the radiator.

4. After crossing a river or traveling through water, check the following items and take appropriate action.

• If the brakes do not work properly, have your vehicle inspected immediately by a Mitsubishi Motors dealer. •
Check the engine, transmission, transfer case, and differential oil, and change the oil if it is cloudy. • Have the grease in the wheel bearings replaced by a Mitsubishi Motors dealer. • If the interior of the vehicle is flooded, clean the carpets, etc. Please dry.
• If water has entered the headlights, have the water drained at a Mitsubishi Motors dealership.

⚠ Caution :

If you notice any abnormality, have your vehicle inspected immediately by a Mitsubishi Motors dealer. Leaving the problem unattended could lead to an unexpected accident.

Machine Translated by Google

Interior equipment

Sun visor 8- 2
Vanity mirrors.....8- 2
Ashtray.....8- 3
Cigarette lighter 8- 4
Room Lamp 8- 5
Clock.....8- 5
Glove box 8- 6
Cup holders.....8- 6
Luggage Floor Box 8- 7
Luggage Hooks.....8- 7

Machine Translated by Google

Not only can it be attached to the JG10AAF

front of the sun visor , but it can also be attached to the side if you remove it from the hook.

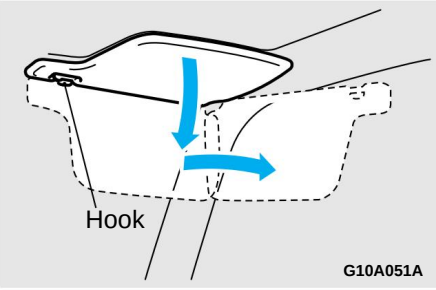

Vanity mirror JG13A-T

It's located behind the driver's sun visor.

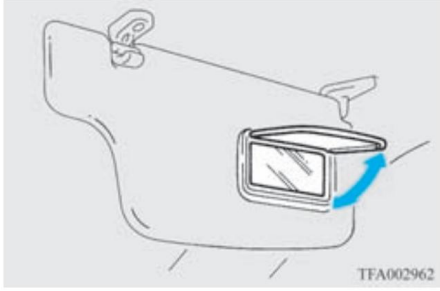

The card holder is

located on the lid of the driver's vanity mirror and can be used to hold toll passes, etc.

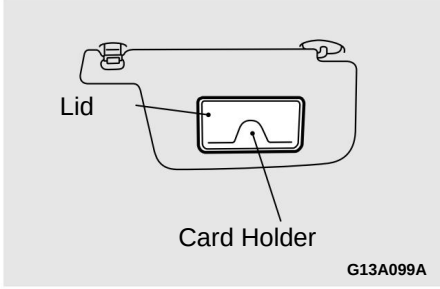

Machine Translated by Google

ashtray

JG32AAR

> ⚠ Caution :
>
> Make sure to extinguish cigarettes and matches before placing them in the ashtray, and be sure to close the ashtray after use. Leaving the ashtray open may cause the fire to spread to other cigarette butts.
> • Do not put too many cigarette butts or flammable materials such as scraps of paper in the ashtray as this may cause a fire.

Open the lid when using.

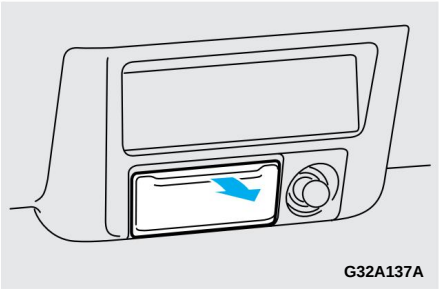

G32A137A

When cleaning, press the ash remover and pull it out towards you.

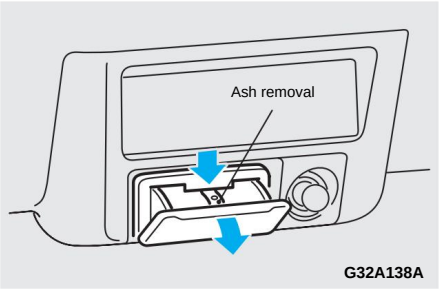

G32A138A

To install, insert the bottom of the ashtray into the groove and then push it in while pressing down the ash remover.

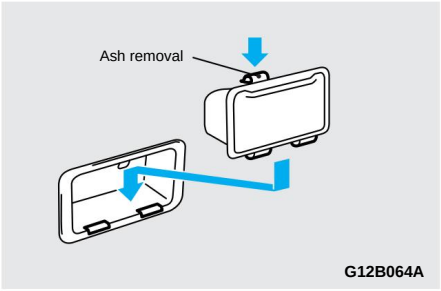

G12B064A

Machine Translated by Google

Cigarette lighter JG31A-JB

When the engine switch is ON or ACC, push the cigarette lighter in and release it. After a while, you will hear
a sound and it will return to its original position.

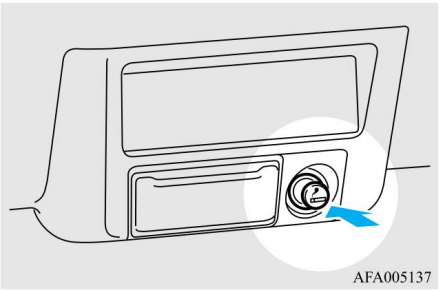

Caution :

Do not allow children to handle the cigarette lighter. The cigarette
lighter may overheat and cause a fire. Please observe the following: • Do not hold down the cigarette lighter.

Sai.

• Modifications to cigarette lighters
Don't do that.

• Using the cigarette lighter of another vehicle do not. • Do not use
commercially available electrical appliances as this may damage the socket. If used in a

damaged socket, the cigarette lighter may pop out or remain pushed in and become stuck. • When handling the cigarette lighter, do not touch hot
parts or areas close to them, but touch only the knob. • If the cigarette lighter does not return to its original position 30 seconds after
being pushed in, this may be a malfunction, so pull it out by hand and have it inspected at a Mitsubishi Motors dealership.

advice

• Remove the cigarette lighter from the socket.
Do not leave the socket plugged in. If dirt, metal pieces or other foreign objects get into the socket, it may cause a fire or short circuit. When using
the socket, be sure to use electrical appliances that are 12V and have a capacity of 120W or less. In addition, using
the socket for a long period of time when the engine is not running may cause the battery to run out.

Machine Translated by Google

Room lamp JE29AADe

1. (OFF)
The light will turn off regardless of whether a door or the back door is opened or closed. 2. (•) The light will turn on when any door or the back door is opened, and will gradually dim when closed and turn off after about 30 seconds. However, it will turn off immediately in the following cases: • When the engine switch is turned ON • When all doors are locked using the driver's door key, lock knob, or keyless entry remote switch

Advice : When the doors and back door are closed and the key is removed, the light will turn on and gradually dim before turning off after about 30 seconds. You can also adjust the time until the light turns off. For details, please consult your Mitsubishi Motors dealer.

3. (ON) The light will stay on regardless of whether the door or back door is open or closed.

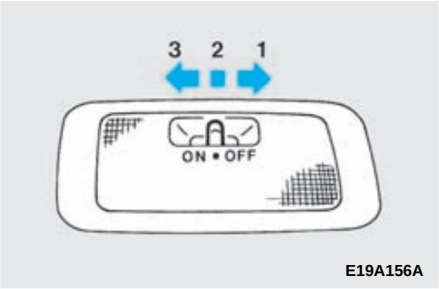

E19A156A

advice

• Leaving the interior lights on for a long period of time when the engine is not running can drain the battery. Always check that the lights are off before leaving the vehicle.

clock

JG15BBQ

For information on displaying or adjusting the clock, refer to the "Clock" section of the audio or the separate audio instruction manual.

Machine Translated by Google

Glove box JG14B-KB

Pull the lever to open it.

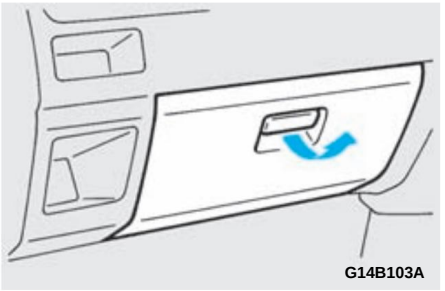

Caution : Always keep the glove box lid closed while driving. In the event of an accident, you may be injured by the lid or small items inside.

TIP : Do not leave valuables in the glove box when leaving the car.

Cup holder JG34HAG

• For front seats

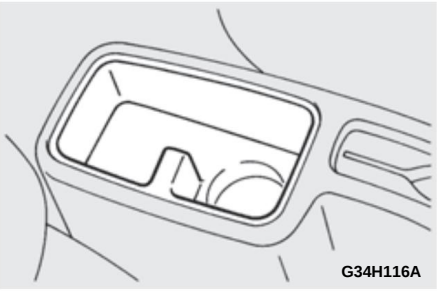

• For rear seats

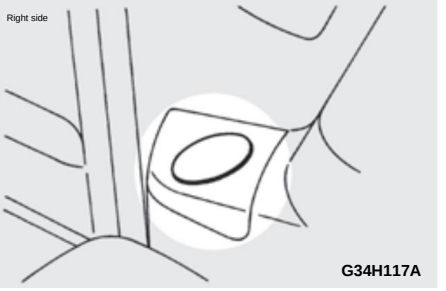

Machine Translated by Google

Luggage floor box

JG42A-U

Lift the luggage floor board (A) to reveal the luggage floor box.

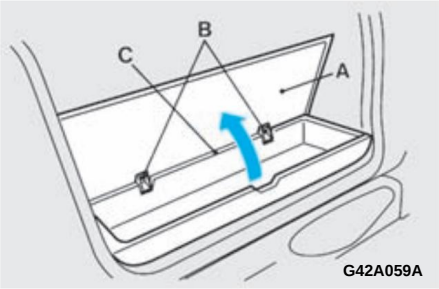

Advice : Align

(B) on the luggage floor box and insert the board into the groove (C) to secure it in place.

Luggage hook JG17A-S

There are hooks on the sides of the luggage compartment. Please use them to secure luggage.

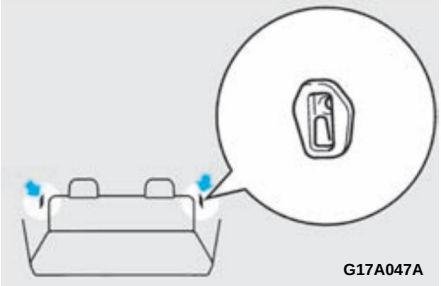

Note

• Do not load luggage inside the vehicle above the height of the seats. Also, make sure that luggage is securely fastened. Doing so may prevent you from seeing behind you, or luggage may fly out in the event of sudden braking, which could result in an unexpected accident.

Advice : Do not

hang loads weighing more than 3 kg on the hook. This may damage the hook or the vehicle.

Machine Translated by Google

MEMO

Machine Translated by Google

Air conditioning

Air outlet 9- 2

Manual Air Conditioner 9- 4

Clean Air Filter 9- 8

Bioclear Filter 9- 8

How to use air conditioners effectively 9- 9

Machine Translated by Google

Air outlet

JH16ALP

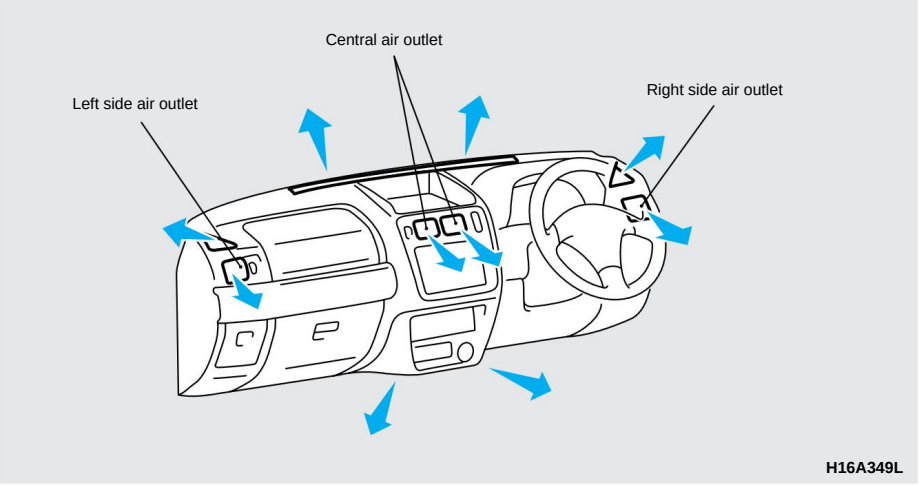

Adjust the airflow
direction by moving the air outlet.

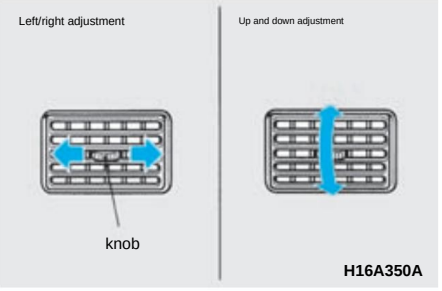

Advice: • When
cooling, it may occasionally appear as if mist is coming out of the air outlet, but this is normal and occurs when humid air is suddenly cooled. • If the cooling or
dehumidifying effect is poor, have your vehicle inspected at a Mitsubishi Motors dealer.

Machine Translated by Google

Switching the air outlet Use the air outlet switching dial to switch the air outlet according to your purpose. ÿ "Air outlet switching dial" P.9-6

: Medium

airflow : High airflow

When you want to blow air on the upper body

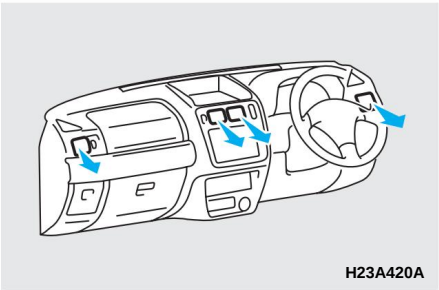

H23A420A

When you want to blow air to your upper body and feet

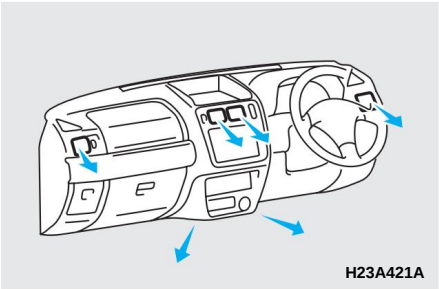

H23A421A

Advice : When the air outlet switch dial is set between and , more air will be blown towards the upper body, and when set between and , more air will be blown towards the feet.

When you want to blow air at your feet

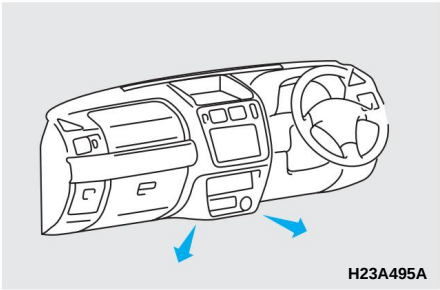

H23A495A

When you want to blow air to the feet and windshield

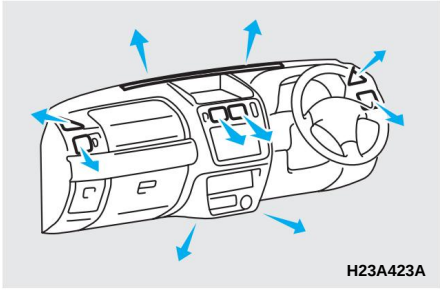

H23A423A

advice

• Setting the air outlet switch dial between and will blow more air towards the feet, and between and will blow more air towards the windshield.

When you want to blow air onto the window glass

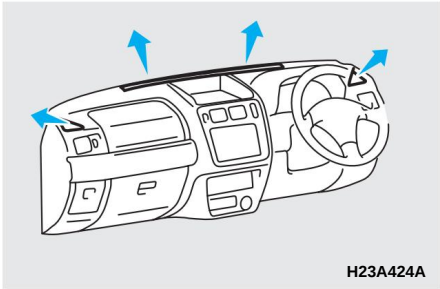

H23A424A

9

Machine Translated by Google

Air conditioning

Manual air conditioning can be used when the engine switch is ON.

JH23AAK

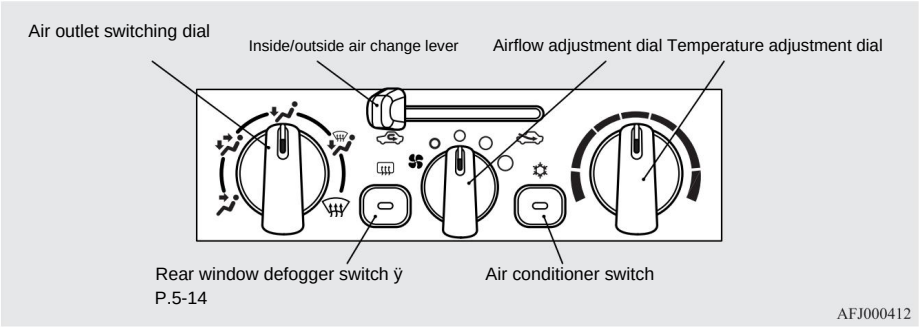

- How to use each switch 9-5
- When you want to heat the room.....9-7
- When you want to keep your head cool and your feet warm.....9-7
- When you want to remove frost from the windows.....9-7
- When you want to heat and defog at the same time 9-8
- When you want to cool the room.....9-8
- When you want to ventilate.....9-8

9

Machine Translated by Google

How to use each switch

• Temperature adjustment dial

Adjusts the temperature of the airflow. Turn right to increase the temperature and left to decrease the temperature.

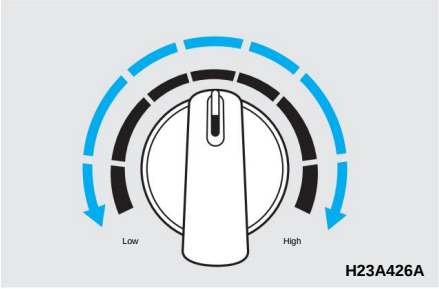

Advice : When the engine coolant temperature is low, the air supply temperature will not change even if you turn the temperature adjustment dial.

• Airflow adjustment dial: Turn right to increase the airflow, turn left to decrease the airflow.

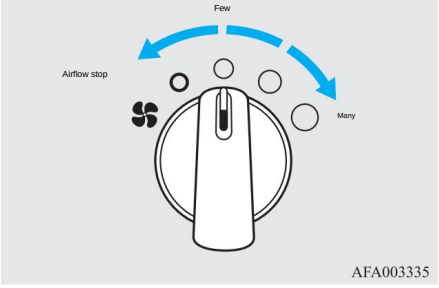

• Inside/outside air selector lever You can switch between outside air intake (letting outside air into the car) and inside air circulation (blocking outside air). When the outside air is polluted, such as in a tunnel or traffic jam, use inside air circulation.

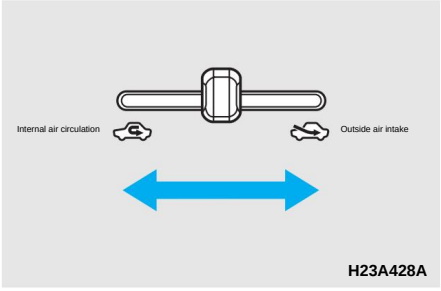

- During normal driving - When you want to cool quickly or when the outside air is polluted

⚠ Note

• Normally, use the outside air intake setting. • When you want to cool the room quickly, use the inside air recirculation setting. However, if you leave the inside air recirculation setting on for a long period of time, the window glass will fog up easily, so occasionally switch to the outside air intake setting to ventilate the room.

Machine Translated by Google

Air conditioning

• Air conditioner switch Pressing

the switch will turn on the air conditioner (cooling and dehumidification functions) and the operation indicator light inside the switch will light up. Pressing the switch again will stop the air conditioner.

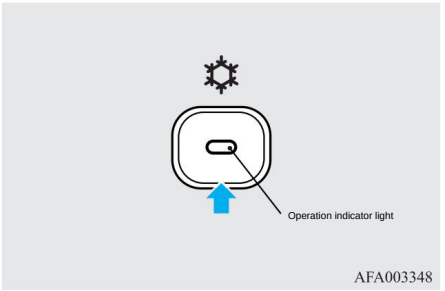

Caution :

In automatic vehicles, when the air conditioner is running, the engine speed increases and the creep phenomenon becomes stronger, so be sure to press the brake pedal firmly when the vehicle is stopped.

ÿ "Creep Phenomenon" P.6-11

• Air outlet switching dial: Switch the air outlet according to your purpose.

ÿ "Air outlet switching" P.9-3

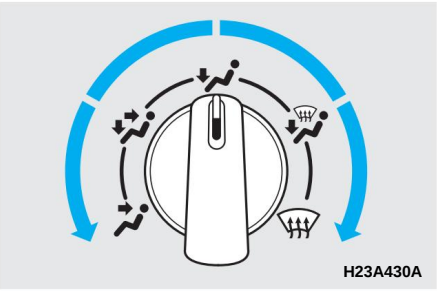

Caution:

When using between and , set the inside/outside air selector lever to outside air intake to prevent the windows from fogging up. ÿ "Inside/outside air selector lever"

P.9-5

9

Machine Translated by Google

How to use

JH03BAK

• When you want to heat the room

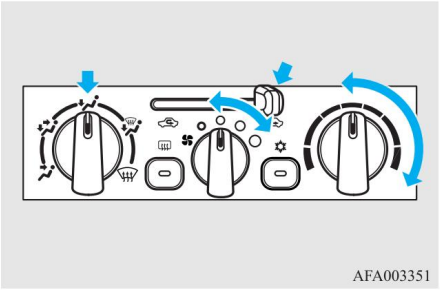

AFA003351

• When you want to keep your head cool and your feet warm, use JH03C-F

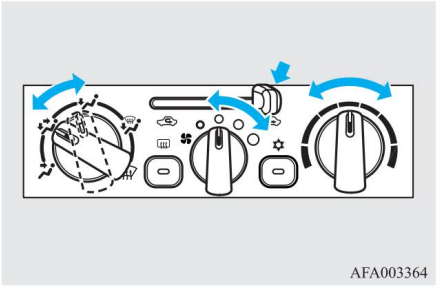

AFA003364

• Remove fog and frost from windows

When you want to

JH03D-Ub

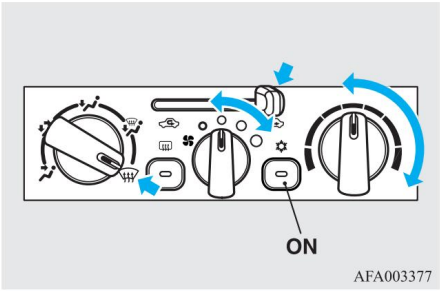

AFA003377

If you want to remove the fog or frost quickly, use the air conditioner with the air volume controlled to maximum and the temperature controlled to maximum.

Caution :

• To prevent fogging of the windows, be sure to use the unit with outside air intake. • For safety reasons, be sure to remove any fog or frost from the windows as soon as possible to ensure visibility.

Advice: When using the air conditioner in a hot or cold location, do not set the temperature close to the minimum temperature, as this can cause condensation to form on the outside of the windshield.

Machine Translated by Google

• When you want to heat and defog at the same time

JH03H-I

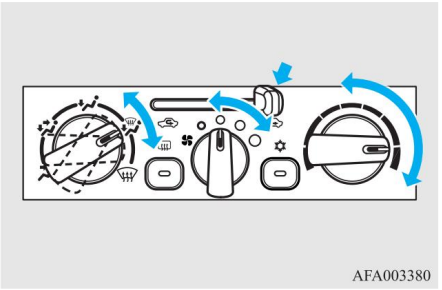

Caution :

To prevent the windows from fogging up, be sure to use the unit with outside air intake.

Advice : Using an air conditioner has a dehumidifying effect.
Masu.

• When you want to cool

JH04F-S

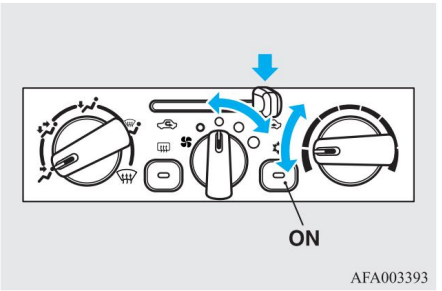

Caution :

Although recirculating internal air will cool the room quickly, be sure to switch to introducing outside air from time to time to allow for ventilation.

• When you want to ventilate

JH03E-J

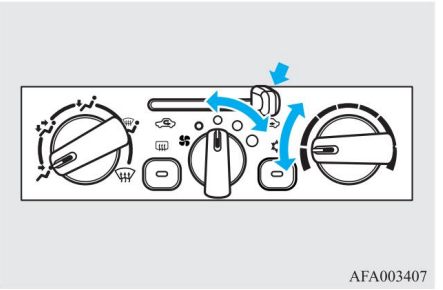

Clean Air Filter JH14K-L

Equipment by type

The product has a built-in filter to remove pollen, dust, and other particles. If pollen or dust accumulates on the filter, its effectiveness will decrease, so we recommend that you replace the filter regularly.

Bio Clear Filter

Equipment by type

The built-in filter suppresses pollen and dust mites that cause allergies, keeping the air inside the vehicle clean. If pollen or dust adheres to the filter, its effectiveness decreases, so we recommend replacing the filter regularly.

Advice : The filter's lifespan will be shortened depending on the region and how often the air conditioner is used. If the airflow volume drops drastically or the windows become easily fogged up, it is time to replace the filter. Please consult your Mitsubishi Motors dealer. (Recommended replacement time: every year or 12,000 km, whichever comes first.)

Machine Translated by Google

How to use your air conditioner effectively JH04JAN

1. If your vehicle is parked in the hot sun for a long time, the temperature inside the vehicle will become very high. In this case, open the door windows to let the hot air out of the vehicle.

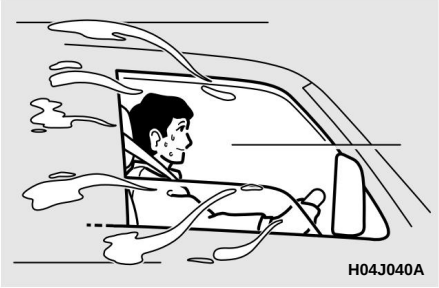

2. Do not expose your body to cold air for long periods of time. Too much cooling is not good for your body, so adjust the temperature to a level that feels slightly cool.

3. Check the amount of refrigerant gas before the hot season arrives. A lack of refrigerant gas will reduce the cooling effect.

advice

• If the air conditioner is not working properly, it may be due to a lack of refrigerant gas or lack of refrigerant. Have the vehicle inspected at a Mitsubishi Motors dealer.

The refrigerant gas used is the new refrigerant HFC-134a (R134a). To prevent global warming, do not release it into the atmosphere.

Machine Translated by Google

MEMO

Machine Translated by Google

audio

AM/FM electronically tuned radio & CD player with clock.10- 2

Error Codes 10-11

Effective use of audio.....10-12

Antennas 10-13

• For information on how to operate the AM/FM electronically tuned radio and CD/MD player, please refer to the separate booklet. Please refer to the instruction manual.

• For information on operating the audio in vehicles equipped with the Mitsubishi Multi Entertainment System, please refer to the separate instruction manual.

Machine Translated by Google

audio

AM/FM Electronically Tuned Radio & CD Player (with Clock) JH29AAY

Equipment by type

It can be used when the engine switch is ON or ACC.

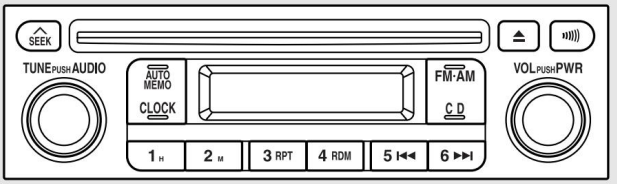

H09A108J

How to adjust the volume
and sound quality Volume adjustment.....10- 3
Sound quality and volume balance adjustment.....10- 4
When listening to the radio 10- 5
When storing a station.....10- 6
When listening to traffic information .....10 -7
When listening to a CD.....10- 8
When fast-forwarding and rewinding 10- 8
When cueing up to the beginning of a track 10- 8
When listening to the same track repeatedly .....10- 9 When
listening to tracks in random order 10- 9
When removing a CD 10-9
When switching the display 10-9
Clock.....10-10

10

Machine Translated by Google

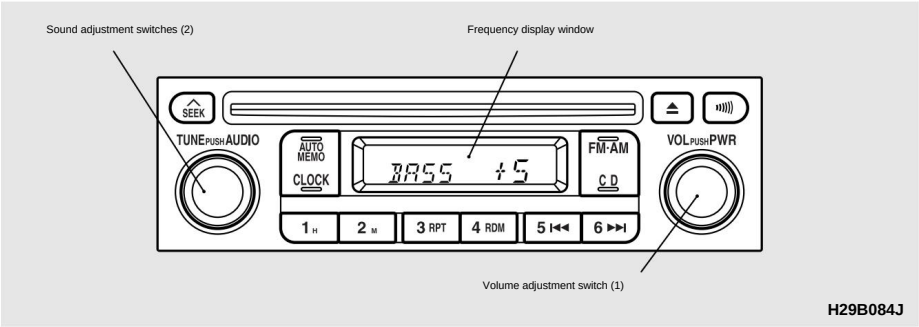

How to adjust the volume and sound quality

JH29B-Z

• Volume

Adjustment Adjust using the volume adjustment switch (1). The adjustment status is displayed in the frequency display window.

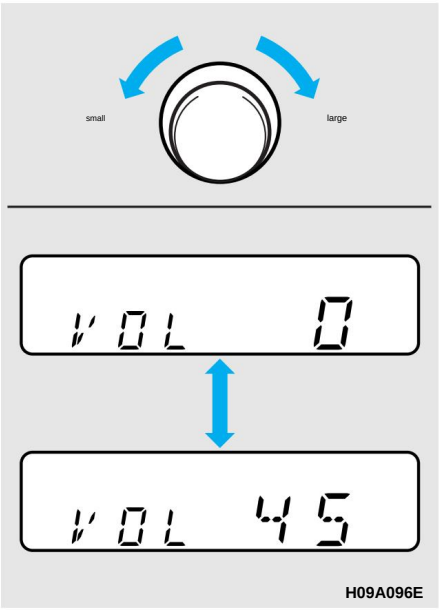

Note

• When driving, use the headphones at a volume that allows you to hear sounds outside the vehicle. Driving without being able to hear sounds outside the vehicle may lead to an unexpected accident.

Advice : After adjustment is complete, the original display will return after approximately 2 seconds. If you turn the volume adjustment switch and leave it for more than 2 seconds or operate any other button, the adjustment mode will be canceled and the original display will return.

Machine Translated by Google

audio

• Sound quality and volume balance adjustment

JH29BAA

You can adjust the sound quality and volume balance.

1. Press the sound adjustment switch (2) to select the mode you want to adjust. Each time you press the switch, the adjustment mode changes and is displayed in the frequency display window. BASS (bass) ÿ TRE (treble) ÿ FADE (front/rear volume) ÿ BAL (left/right volume) ÿ Cancel adjustment
mode 2. Turn the sound adjustment switch (2) left or right to adjust to your liking. The adjustment status is displayed in the frequency display window.

Example: BASS adjustment

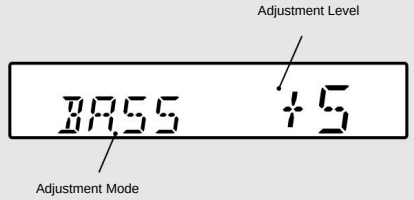

H29B085A

Mode Display	Adjustment Level Range	Sound adjustment Switch operation Counterclockwise Turn	Clockwise Turn
BASS TRE	-6 to +6 Weaker Stronger		
FADE F6 to R6		F (Front) Large	R (Rear) Large
BAL L6 to R6		L (Left side) Large	R (Right side) Large

Advice : • When the adjustment level is "0" (center position), a short beep will sound. • After adjustment is complete, the original display will return after approximately 7 seconds. If you operate the sound adjustment switch (2) and leave it for more than 7 seconds, or operate any other button, the adjustment mode will be canceled and the original display will return.

10

Machine Translated by Google

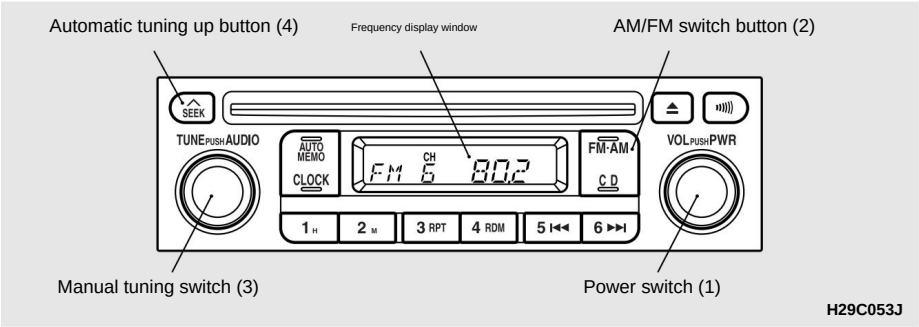

When listening to the radio, use JH29CAD

1. Press the power switch (1) to turn the power on. Press the switch again to turn the power off.

2. Press the AM/FM select button (2). When not in radio mode, it switches to radio mode, and when in radio mode, it switches between AM and FM. 3. Turn the manual tuning switch (3) or press the automatic tuning up button (4) to select the station you want to listen to.

To manually select a station

Turn the manual tuning switch (3) left or right. • To tune to a higher frequency station, turn it clockwise. • To tune to a lower frequency station, turn it counterclockwise.

To automatically select a station

Press the automatic tuning up button (4). The system will tune to a higher frequency station.

Advice : If the reception is weak and automatic station selection is not possible, select the station manually.

Machine Translated by Google

audio

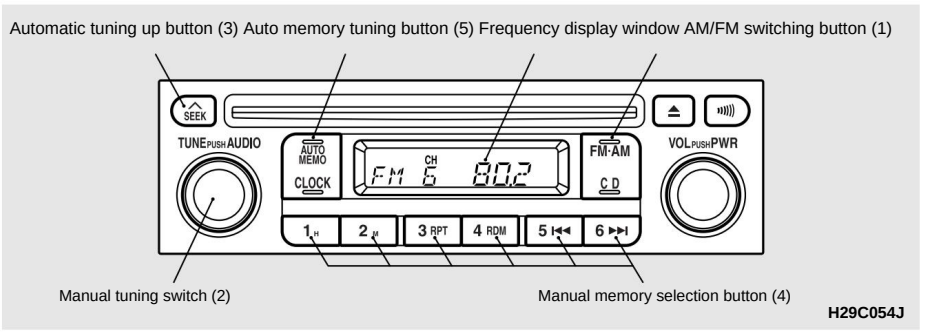

• When memorizing a station

To manually store

In addition to the stations automatically stored, you can store up to six AM and six FM stations.

1. Press the AM/FM selector button (1) to select AM or FM broadcast. 2. Turn the manual tuning switch (2) or press the automatic tuning up button (3) to receive the station you want to memorize. 3. Press and hold one of the manual memory tuning buttons (4) [1 to 6] until you hear a beep, indicating the memorization is complete. The memorized button number and frequency will be displayed in the frequency display window. 4. From next time, lightly press the manual memory tuning button (4) to receive the station memorized in that button.

Advice : • Each tuning button can store two stations, one AM and one FM. • If the battery terminal is disconnected for a long period of time, the stored stations will be cleared.

To automatically store

In addition to the manually stored stations, eight receivable AM and FM stations can be automatically stored in order of best reception. This is useful when you are in an area where you do not know the frequency or station.

1. Press the AM/FM Select Button (1) to select either AM or FM broadcast. 2. Press and hold the Auto Memory Selection Button (5) until you hear a beep.

Tip : While searching for receivable stations, the letter “A” will be displayed in the frequency display window. If there are no receivable stations, “----” will be displayed.

3. From the next time, each time you lightly press the Auto Memory Selection button (5), the station will be received in order from the lowest frequency to the highest frequency.

advice

• If there are fewer than eight receivable stations, only that number will be stored.

• If the battery terminals are disconnected for a long period of time, the memory will be erased.

10

Machine Translated by Google

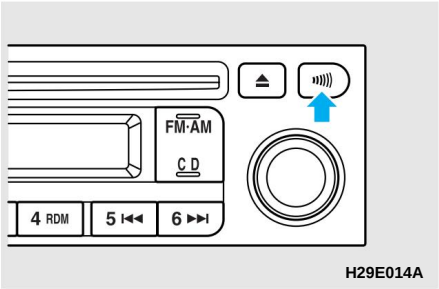

H29E014A

• When listening to traffic

information, you can receive traffic information with one touch in areas where traffic information is available. Press the traffic information button to receive traffic information stations (1620kHz). Press again to cancel.

Advice : If you are unable to receive traffic information on 1620kHz, the system will automatically switch to the 1629kHz traffic information station. If you are unable to receive either station, the system will return to the state before pressing the Traffic Information button after about 5 seconds. You can receive traffic information by pressing the Traffic Information button even while listening to a CD.

Machine Translated by Google

audio

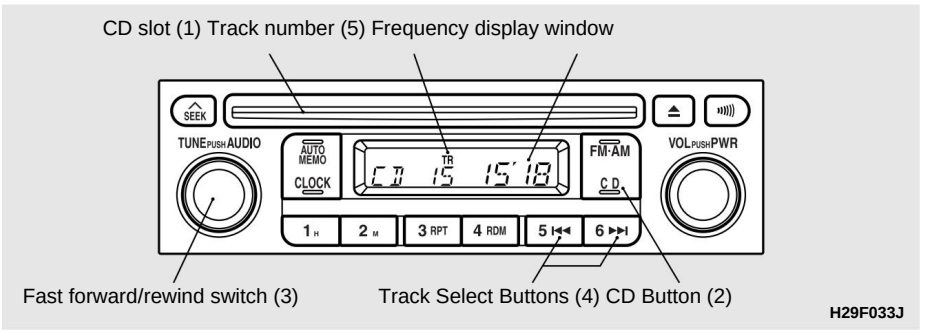

To listen to a CD, insert JH29F-K the disc with the label side facing up into the CD slot (1) and gently press it to start playback. The frequency display window will show “CD.” To switch to CD from another mode, press the CD button (2).

Advice: • CD

singles (8 cm discs) can be used without an adapter. Insert them approximately in the center of the slot.

• To fast forward or rewind , turn the fast-forward/rewind switch (3) clockwise during playback. To fast-rewind during playback, turn the fast-forward/rewind switch counterclockwise.

While turning the switch, it will fast forward or rewind.

• To skip to the beginning of a song, press the track selection button (4) and select the track number (5) of the song you want to listen to.

▶▶I Track numbers increase

I◀◀ Decreasing track number

Pressing the button once while listening to a song will return to the beginning of the song and playback will resume.

Tip : Each time

you press the track selection button (4), the track number (5) in the frequency display window will change.

10

Machine Translated by Google

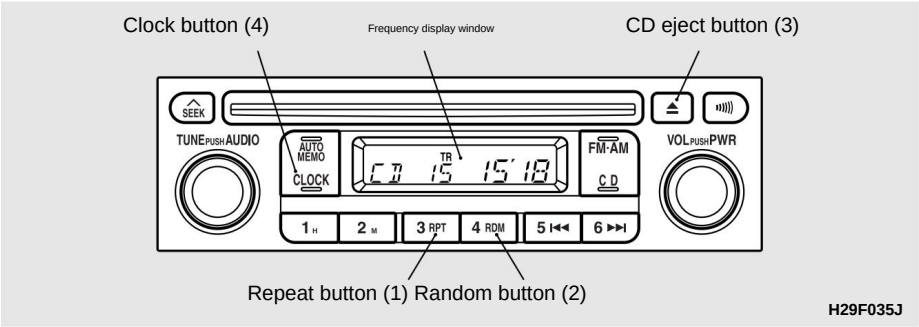

• To listen to the same song repeatedly , press the Repeat button (1) during playback to display “RPT” in the frequency display window. To cancel, press the button again.

• To play tracks in random order, press the RANDOM button (2). “RDM” will be displayed in the frequency display window. The player will randomly select and play a station from the currently playing disc. To cancel, press the button again.

• To remove the CD, press the CD eject button (3).
When in CD mode, pressing the button will automatically eject the CD and switch to radio mode.

When switching the displayJH29E-PNormally , the display is the clock. However, when the power is turned on or any audio operation (audio adjustment operation, radio operation or CD operation) is performed, the display will temporarily switch to the relevant mode. If you want to always have the frequency display (and CD running display) in radio mode (and CD mode), lightly press the clock button (4). Press it again to return to the clock display.

10

Machine Translated by Google

audio

clock

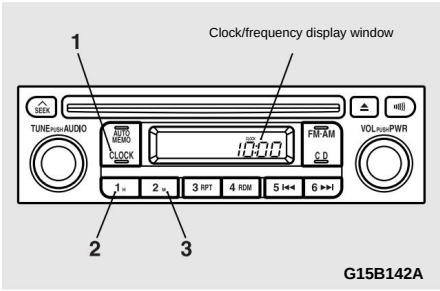

The frequency display window is normally a clock

display. When in radio mode (or CD mode), lightly pressing the clock button (1) switches it to the frequency display (and CD running display). Pressing it again switches it to the clock display.

• How to set the time

1. Press and hold the clock button (1) until the clock display starts flashing. 2. "Hour and minute setting" Press the "hour" adjustment button (2) and the "minute" adjustment button (3) to set the time. Holding down the button will fast forward the time. Once you have set the time, press the clock button (1) to stop the clock display from flashing.

advice

• When the battery terminal is disconnected and then reconnected, set the time. • When the power is turned on or any audio operation (audio adjustment operation, radio operation or CD operation) is performed, the display will temporarily switch to the respective mode.

• If you want to always have the frequency display (and CD running display) in radio mode (and CD mode), lightly press the clock button (1). Press it again to return to the clock display.

Machine Translated by Google

If an error code is JH29I-K

displayed in the frequency display window, follow the procedure in the table below.

AM/FM Electronically Tuned Radio & CD Player

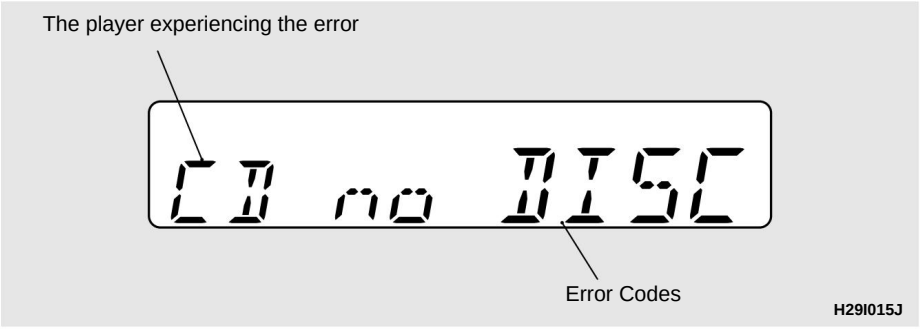

Error Codes		treatment
NO DISC	Cause No disc is inserted. Insert a disc. Player or changer	Leave it for a while.
E HOT	The inside is too hot. (Playback will be temporarily suspended when the temperature returns to the appropriate level.) The error code will disappear and playback will resume automatically. Try replacing some discs. • Error displayed only	
E 01 E 02	Mainly disk abnormalities	on certain discs ÿ This is caused by scratches or dirt on the disc (Stop using abnormal discs.) • Error displayed on all discs ÿ This is caused by condensation or dirt inside the device (If the error display persists on all discs after several hours, have the device inspected at a Mitsubishi Motors dealer.) Have the device inspected at a Mitsubishi
E 03 E	Mainly abnormalities on the device side	Motors dealer.

10

Machine Translated by Google

audio

How to use audio effectively JH12I-W

1. When listening with the engine turned off, always turn the engine switch to ACC. 2. For safety, while driving, make sure you can hear sounds outside the vehicle. 3. Radio wave conditions fluctuate while driving, so reception may be unstable. 4. When using a mobile phone in the vehicle, noise may be heard from the audio, but this is not a malfunction of the audio. In this case, move the mobile phone as far away from the audio as possible. 5. In the unlikely event that something goes wrong (foreign objects get in the vehicle, water gets on it, smoke comes out, there is a strange smell, etc.), immediately stop using the vehicle and have it inspected by a Mitsubishi Motors dealer. Do not attempt to repair it yourself or continue using it.

Handling of Compact Discs

1. If the temperature rises suddenly, such as immediately after turning on the heater in cold weather, dew (water droplets) may form on the disc or inside the audio, causing it to not function properly. In such a case, wait a while before using it. 2. If the device is subjected to strong vibrations, such as when driving on rough roads, the sound may skip. 3. Always store the device in its case. Do not place it in direct sunlight or in a high-temperature, high-humidity location.

About Compact Discs

1. This player is
   Only CDs can be used.
   Even if the CD has the mark below, CD-R/RW discs may not be usable because their reflectivity is slightly lower than that of CD discs.

H12F008A

Using discs with special shapes that do not conform to JIS standards, such as heart-shaped or octagonal discs, may cause the player to malfunction.

2. If you touch the unlabeled side directly, the disc may become dirty and the sound quality may deteriorate, so be sure to hold the disc by the center hole and the edge.

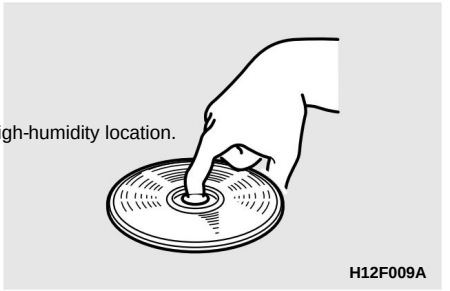

H12F009A

Machine Translated by Google

3. When cleaning the disc, wipe it with a soft cloth from the center of the inside to the outside in a perpendicular direction. Do not use benzine, paint thinner, record spray, antistatic agents, chemical cloths, etc.

H12F010A

4. Do not use discs that are cracked or severely warped. Doing so may cause the player to malfunction. 5. Do not write on the label side or playing surface with a ballpoint pen or sign pen, or attach paper or stickers to the label side or playing surface.

antenna

JH11D-Dd

When listening to the radio, please extend the antenna as far as possible with your hand.

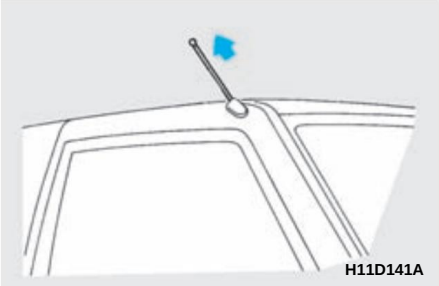
H11D141A

Advice • In the following cases, be sure to store or remove the antenna as it may be damaged. • When entering a place with a low ceiling • When using an automatic car wash • When putting on a body cover

Machine Translated by Google

MEMO

Machine Translated by Google

Simple maintenance and car care

Simple maintenance

Adding Engine Oil.....11- 2

Fuel Injector Cleaning 11- 2

Inspecting and refilling windshield washer fluid.....11- 3

Tire Wear 11- 3

Tire Rotation.....11- 4

Car Care

Maintenance of interior items.....11- 5

Care of the exterior parts.....11- 6

Machine Translated by Google

Topping up engine oil

JM03C-Vb

Engine oil has a significant effect on engine performance, life and starting, so be sure to use the specified oil and viscosity. Check the engine oil level,
and if it is low, fill it with Mitsubishi genuine engine oil or an oil can with engine oil that has the ILSAC certification mark. ÿ "Engine oil filler cap Engine oil level gauge" P.1-4 ÿ "Engine oil brands" P.14-2

ILSAC Certification Mark

M03A109A

advice

• Even during normal driving, engine oil is consumed depending on the driving conditions. Check the oil level, and if the oil level is low, add oil. • For information on how to check the engine oil level, how to add oil, and when to change the oil, please read the separate "Maintenance Notes" booklet.

advice

• When the outside temperature is low, engine oil may become white and creamy and adhere to the inside of the engine oil filler cap and filler port. This occurs when the water vapor inside the engine cools and turns into water droplets that mix with the engine oil. As the outside temperature rises and the engine warms up, the water will evaporate and disappear. This phenomenon does not cause any deterioration of the engine oil, so it is safe to continue using it as is.

Fuel injector cleaning JF04A-Aa

Cleaning the fuel injection system will help improve engine performance. Use Mitsubishi Motors genuine

injector cleaner as a cleaning agent.

Caution :

Do not use any cleaning agents other than genuine Mitsubishi Motors products. This may damage the fuel injection system.

advice

• To maintain the same performance as when your car was new for a long period of time, we recommend using the cleaning agent every 15,000 km or once a year.

Machine Translated by Google

Checking and Replenishing the Washer Fluid If

JM31B-Yb

the washer fluid is low, replenish it.

• Check the fluid level by checking the fluid position in the front and rear hoses.

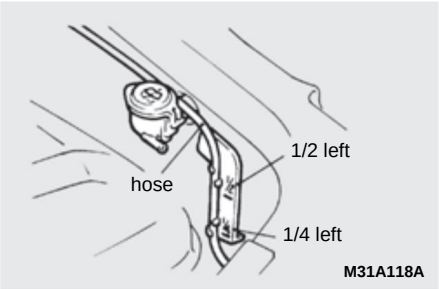

advice

• The washer tank is shared by the front and rear.

If the washer fluid is low, add Mitsubishi genuine washer fluid at a concentration appropriate for the temperature.

Region and season of use	Dilution ratio	Freezing temperature
Usually	1 part of stock solution and 2 parts of water	- 10ÿ
In winter in cold regions	1 part of stock solution and 1 part of water	- 20ÿ
In winter in extremely cold regions	Stock solution as is	- 50ÿ

Caution :

In winter, if the washer fluid is diluted too much, it may freeze to the windshield.

advice

• Do not use soapy water or other liquids instead of washer fluid, as this may cause the nozzles to become clogged or paint stains to appear.

Tire wear JM32B-AA

If wear indicators (tread depth of 1.6 mm or less) appear, the tires should be replaced as they are prone to slipping and are dangerous.

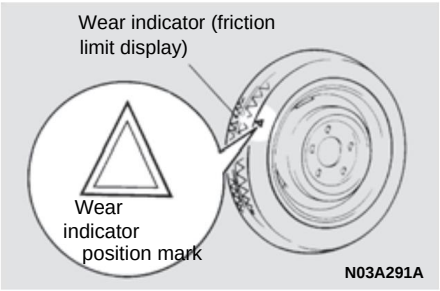

Advice : The

marks and locations of wear indicators vary depending on the tire manufacturer.

Machine Translated by Google

Tire rotation JP13AAH

To ensure uniform tire wear and to extend the life of your tires, rotate your tires every 5,000 km.

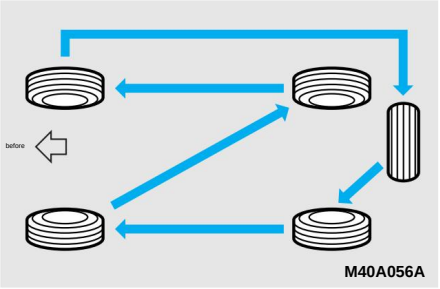

When not using the spare tire

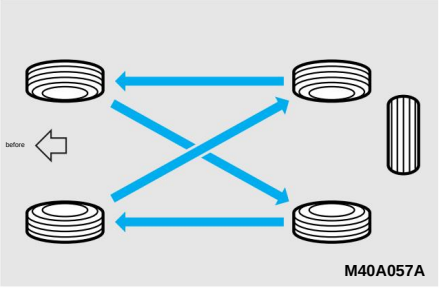

If there is an arrow indicating the direction of rotation

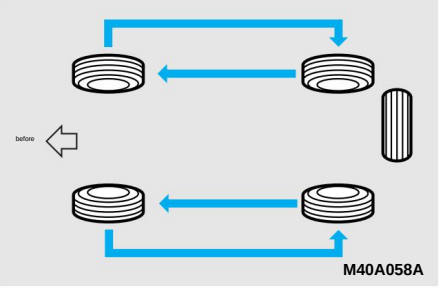

⚠ Note

- If the tires have arrows indicating the direction of rotation, rotate all four wheels forward and backward. When installing the tires, make sure that the direction of rotation of the arrow is the same as the direction of rotation when the vehicle is moving forward. If the arrows are pointing in a different direction, the tire's performance will not be fully utilized.

- Avoid mixing different types of tires as this may have a negative impact on safe driving.

Machine Translated by Google

Car Care

Care of interior accessories JK23A-DA After using water and detergent, wipe thoroughly and dry in a well-ventilated shade.

Plastic, vinyl leather, cloth, flocked parts

JK24A-A

1. Soak a soft cloth such as gauze in a 3% solution of neutral detergent and wipe gently. 2. Soak a cloth in fresh water, wring it out tightly, and wipe off the detergent thoroughly.

Carpet material

JK25A-J

1. Remove dust with a vacuum cleaner. 2. Lightly wipe with a soft cloth such as gauze soaked in a 3% solution of neutral detergent. 3. Soak a cloth in fresh water, wring it out tightly, and wipe off the detergent thoroughly.

About Liquid Air Fresheners

JK23C-Ba

Depending on the ingredients in the liquid air freshener, it may cause discoloration or cracks in plastic parts or fabric materials. Be sure to securely hold the liquid air freshener container in place to prevent it from spilling. Also, do not place the liquid air freshener on the instrument panel or near lamps or meters.

Genuine Leather

JK27A-Fa

Equipment by type

1. Wipe off dirt with a soft cloth such as gauze soaked in a 5% solution of neutral detergent for wool . 2. Soak a cloth in fresh water, wring it out tightly, and wipe off the detergent. 3. Remove moisture with a dry, soft cloth, and dry in a well-ventilated, shady area.

Advice : If water is spilled on the product or it gets wet due to rain, wipe off the moisture as soon as possible with a dry, soft cloth.

- Rubbing hard with a nylon brush or synthetic fibers may damage the surface.
- Dirt on genuine leather can lead to mold and mildew. Be sure to remove oily stains as soon as possible. • The use of organic solvents such as benzene, alcohol, and gasoline, as well as acidic or alkaline solvents, can cause the surface to discolor. Use a neutral detergent.
- If the vehicle is exposed to direct sunlight for a long period of time, the surface may become sunburned, harden, and shrink. Please park the vehicle in the shade as much as possible.

Machine Translated by Google

Exterior care JK28A-Cd

1. To keep your car looking beautiful, use a feather duster to remove any dust from the paint after driving. 2. If the following
types of dirt are left unattended, they may cause corrosion, discoloration, or stains, so wash your car as soon as possible: • Seawater, road de-icing agent, etc. •
Industrial soot, oily smoke, dust, iron powder, chemicals (acids, alkali, coal tar, etc.), etc. • Bird droppings, dead insects, tree sap, pollen, etc.

Caution :

When washing the undercarriage or wheels, be sure to use thick rubber gloves to avoid injuring your hands.

How to wash your car

JK22ACU

1. Wash the underside of the vehicle.
2. While pouring water over the top of the vehicle, use a sponge to wash off dirt. 3. If dirt is
difficult to remove with water, wash it off with a neutral detergent and then rinse it completely with water.

4. Thoroughly wash off dirt such as bird droppings and dead insects with water, and if necessary, use wax to remove dirt. We recommend using genuine Mitsubishi Motors wax. 5. Use a chamois or soft cloth
to thoroughly wipe off water so that no spots remain on the painted surface.

advice

• Do not splash water into the engine compartment. Even when washing the underside of the vehicle, be careful not to let water get into the engine compartment. This
can cause the engine to have trouble starting.

• Avoid using automatic car washes where possible, as the brushes can scratch the paintwork, causing it to lose its luster and accelerate deterioration. Scratches are particularly noticeable on dark colored or metallic cars. • Some models of washing machines
(such as coin-operated car washes) can use high temperatures and pressures. This can cause thermal deformation and damage to plastic body parts, peeling off of adhesive markings, and water entering the interior of the car, so please observe the following: • Keep a sufficient distance between the wash nozzle and the car body (approximately
40 cm or more). • When washing around the door glass, point the wash nozzle perpendicular to the glass surface and keep a sufficient distance between the wash nozzle and the glass (ap

Machine Translated by Google

advice

- When using an automatic car wash, be sure to stow the antenna, door mirrors, and side under mirrors to avoid damage to the vehicle or parts that may be broken. Also, if your vehicle has roof rails or a roof spoiler, be sure to consult with an attendant before using the machine. When using unattended coin-operated car washes, follow the operating instructions.

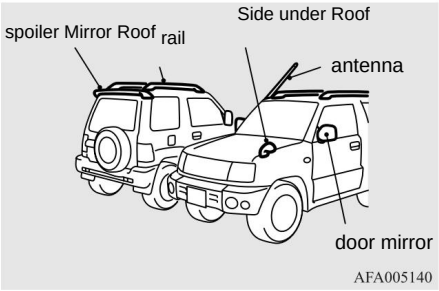

How to wax JK33A-Cf

1. Apply once or twice a month, or when the paint no longer repels water. 2. After washing the car, apply when the paint surface is below body temperature and avoid direct sunlight. This may cause stains. 3. We recommend using Mitsubishi genuine wax. Masu.

Advice : Do not

use waxes containing compounds (abrasives). Waxes containing compounds will remove dirt well, but they will scrape off the paintwork, causing the paintwork to lose its luster. They may also stain the cloth used, making discoloration more noticeable, especially with dark colors.

- Do not apply wax to matte black painted areas as this may cause discoloration. If wax does get on the area, immediately wipe it off with warm water and a soft cloth.

- When washing or waxing the car, be careful not to apply strong force to one point on the car body. Depending on the amount of force applied and the location, the car body may be dented.

Machine Translated by Google

Car Care

Window Glass Care

JK10A-Cf

If the wipers do not wipe properly, clean the windows with a window cleaner (such as a glass cleaner). We recommend using genuine Mitsubishi Motors window cleaners.

advice

• When cleaning the inside of the rear window, wipe with a soft cloth along the heating wire to avoid damaging it.

Maintenance of water-repellent glass on front door

Equipment by type

The front door glass has a coating on the glass surface to repel rainwater and other water droplets.
The water-repellent effect lasts for a limited period of time. Please observe the following to prolong the effect.

1. Wash off dirt with water. 2. If dirt is severe, wash off the dirt with a sponge while spraying water. 3. For dirt that is difficult to remove with water, use a neutral detergent. After washing the car, rinse off the neutral detergent completely with water.

advice

• When the front door glass is very dirty with mud or other debris, do not open and close it frequently, as this can scratch the glass and reduce its water-repellent effect.

• Do not use glass cleaners containing abrasives or alkaline detergents as they may reduce the water-repellent effect.

• If wax adheres to the glass, it will reduce its water-repellent properties, so wash it off with a neutral detergent and then rinse it off with plenty of water. • If the glass becomes cloudy after using a glass cleaner, wipe it off with a damp, soft cloth. • When using an automatic car wash, be sure to wash off any dirt or mud on the surface of the front door glass before washing the car. • Do not use metal objects to defrost the glass. • If the glass no longer repels water droplets, consult your Mitsubishi Motor

Machine Translated by Google

Caring for hydrophilic mirror door mirrors

Equipment by type

To ensure visibility on door mirrors, the mirror surface is coated so that rainwater and other water droplets on the mirror spread out as a film. However, the hydrophilic effect may not be fully achieved for small amounts of water such as drizzle or light rain. For regular maintenance, simply washing with water is sufficient, but to prolong the hydrophilic effect, please observe the following.

1. Wash off dirt with water. 2. If dirt is severe, wash off the dirt with a sponge while spraying water. 3. For dirt that is difficult to remove with water, use a Mitsubishi genuine oil film/film remover (glass cleaner, etc.) or a neutral detergent. After washing the vehicle, rinse off the detergent completely with water.

Advice : If the door mirror is frozen, do not use a metal or plastic plate to defrost it. Instead, use lukewarm water or a defrosting spray to remove the ice. Do not use glass cleaners that contain compounds (abrasives) as this may cause the hydrophilic effect to be lost. If ice adheres to the door mirror, rinse it off with plenty of water.

Advice : When using water-repellent window sprays, tire wax sprays, etc., cover the mirror surface with a towel or similar before use. If the liquid splashes and gets on the mirror surface, it may reduce the hydrophilic effect.

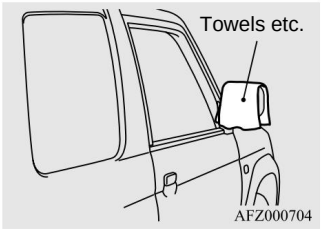

• In the following cases, the hydrophilic effect will be temporarily lost but will gradually recover. If you want to recover the hydrophilic effect immediately, wash the vehicle with a Mitsubishi genuine oil film/coating remover (glass cleaner, etc.) or a neutral detergent, then rinse with plenty of water. After that, park the vehicle outside for 5 to 9 hours and expose the mirror surface to sunlight. • When dirt is wiped off the mirror • When the mirror becomes cloudy • When the car has been washed with wax in an automatic car wash tree • When wax or water repellent has adhered to the mirror • When the car has been parked for a long period of time in a place that is not exposed to sunlight, such as an underground car park • We recommend using a genuine Mitsubishi oil film and coating remover. • If the hydrophilic effect does not recover, consult your Mitsubishi Motors dealer.

Machine Translated by Google

Car Care

Wiper Care JK17A-B If the wiper rubber has foreign matter on it or is worn, it will not wipe well. Take care as follows.

• If any foreign matter is attached to the wiper rubber, clean it with a soft cloth dampened with water. • If the wiper rubber
is worn, replace it promptly.

Advice : For
information on replacing wiper rubber, please read the separate "Maintenance Notes" booklet.

Cleaning plastic partsJK29AAUaClean with a sponge or chamois leather. If wax adheres to rough surfaces in black or gray (such as bumpers and moldings) and lamps, they may turn white. If wax does adhere to them, wipe off with warm water and a soft cloth or chamois leather.

Advice: • Do not
use hard objects such as scrubbing pads as they may scratch the surface. • Do not use wax containing
compounds (abrasives) as they may scratch the plastic surface. • Never allow gasoline, brake fluid, engine oil, grease, paint
thinner, or sulfuric acid (battery acid) to come into contact with the product as these may cause discoloration, stains, or cracks. If any of these substances come into contact with the product, immediately wipe off with a soft
cloth or chamois leather using a solution of a neutral detergent. Then immediately rinse thoroughly with water.

Aluminum wheel maintenance JK35A-H

1. While spraying water, wash off the dirt with a sponge or other tool. 2. For
dirt that is difficult to remove with water, use a neutral detergent. After washing
the car, rinse off the neutral detergent with water.

3. Wipe off any water thoroughly with a chamois or soft cloth.

Advice : Do not
use hard objects such as brushes as they may scratch the wheel surface.

• Do not use cleaners that contain compounds (abrasives) or acidic or alkaline cleaners. They may cause the wheel paint surface to peel
off, discolor, or stain.

• Do not pour hot water directly onto the product using a steam cleaner or similar.
• If seawater, road de-icing agent, etc. gets on the product, be sure to wash it off as soon as possible as this may cause corrosion.

Paint Repair Stone JK08A-C

chips and scratches can lead to corrosion. If you find any scratches or chips, repair them as soon as possible with Mitsubishi Genuine Touch-up Paint.

Machine Translated by Google

Handling in cold weather

Pre-winter inspection and preparation 12- 2

Pre-ride inspection 12- 2

Driving on snowy and icy roads 12- 3

Parking in cold climates.....12- 4

Tire chains.....12- 4

Machine Translated by Google

Handling in cold weather

Pre-winter inspection and preparation JL30A-T

• Engine oil : Replace

engine oil with one whose viscosity is appropriate for the outside

temperature. ÿ "Engine oil viscosity" P.14-2

Engine oil deteriorates more quickly in winter. When driving in severe conditions during winter, such as driving in city areas or repeated short distance driving, change the oil earlier than usual.

• Coolant If

the coolant freezes, it will damage the engine. Use antifreeze (Mitsubishi genuine product) at a concentration of 50%.

• Washer fluid: Keep the

concentration of washer fluid (Mitsubishi genuine product) at 50% or more. ÿ

"Checking and refilling washer fluid" P.11-3

• When the battery

temperature drops, the battery is put under strain and this may cause problems when starting the engine. Therefore, check the fluid level and specific gravity, and replenish the fluid or charge the battery if necessary.

advice

• For information on refilling battery fluid, please read the separate "Maintenance Notes."

• Preparing for tire chains or winter tires When changing to winter

tires, change all four wheels. ÿ "How to change tires" P.13-13 In

some areas, the use of tire chains or winter tires is required by local ordinance. Please follow the local ordinance.

• Drain water from the fuel tank.

Use a genuine Mitsubishi Motors moisture remover.

Caution : Do not use any moisture remover other than genuine Mitsubishi Motors products. It may damage the fuel injection system. In addition, in cold weather there is a risk of moisture freezing, so use it before it gets cold.

• When replacing

wiper blades with cold weather wiper blades, be sure to use genuine Mitsubishi Motors parts.

Pre-ride inspection JL30B-L

Please add the following inspection to your daily inspections.

Remove any snow or frost from the windshield to ensure visibility. Also, check that the wiper blades are not frozen to the windshield.

Advice : In winter,

the wiper blades may freeze and stick to the windshield. If this happens, warm up the windshield with a heater.

"How to remove frost" P.9-7 If you move the wiper while it is still stuck to the windshield, it may damage the wiper blades or cause the wiper motor to malfunction.

Machine Translated by Google

• Check the suspension

Remove any ice that has adhered to the suspension. Ice may damage parts while driving.

⚠ Note

• The brake-related parts are gathered around the suspension. Be careful not to damage the parts or wiring when removing them.

• Frozen doors If

you try to force open a frozen door, the rubber around the door may come off or crack. Pour hot water over the door to melt the ice. Afterwards, wipe off all moisture promptly.

Advice : Do not

pour hot water on the key hole. If it freezes, you will not be able to insert the key.

• Before getting into the

car , be sure to thoroughly remove any snow from your shoes to prevent the pedals from slipping and the windows from fogging up.

• Check the pedals and steering wheel.

Make sure the pedals and steering wheel move smoothly.

Driving on snowy and icy roads JL30C-CB

• Warming up the engine:

Prolonged warm-up operation wastes fuel. For environmental reasons, keep warm-up operation to a minimum, approximately one minute.

Be careful of slipping on snowy or icy roads

1. Drive slowly and put tire chains on the rear wheels or change to winter tires on all four wheels. 2. The road

surface may be frozen on bridges, in the shade, in puddles, near tunnel entrances, etc. Drive carefully and avoid sudden braking, steering, and acceleration.

• Keep a sufficient distance

between vehicles on snowy or icy roads, as the grip of the road surface is reduced and braking becomes less effective.

• Remove snow inside the fenders as soon as possible. Snow that is kicked up while driving may freeze inside the fenders and cause poor steering. Please remove any ice blocks.

• Check the effectiveness of your brakes When

driving on snowy roads, ice may form on the brake system, causing the brakes to become less effective. While driving, pay attention to the vehicles in front and behind you and the road conditions, and occasionally lightly depress the brake pedal to check the effectiveness of the brakes.

• Wash your car

promptly In cold regions, deicing agent may be spread on the roads. This can cause rust, so wash your car promptly. Wash the undercarriage in particular thoroughly.

Machine Translated by Google

Parking in cold climates JL30D-Ad

The parking brake may freeze. Do not apply the parking brake, but put the shift lever in 1st or 2nd gear if you have a manual transmission, or in 3rd gear if you have an automatic transmission, and then use wheel chocks. Also, do not park under the eaves or trees. The weight of falling or accumulated snow may dent the roof of your car.

TIP : Park your car with the front facing downwind to prevent the engine from getting too cold. Keeping the wiper arms upright will help prevent the wiper blades from freezing to the windshield.

Tire chains JL23ACUd 2WD vehicles are rear-wheel drive vehicles, so please install tire chains on the rear wheels. 4WD vehicles are four-wheel drive vehicles with the main rear wheels as the main rear wheels, so please install tire chains on the rear wheels.

Caution : Do not attach tire chains to the front wheels.

Use tire chains that are the correct size for your tires.

Tire size	Suitable tire chains
175/80R15 90Q	45183 (JIS marking)

Machine Translated by Google

How to install JIS tire chains

1. Engage the parking brake fully and place a wheel chock in front of the tire diagonally opposite the tire to which you will be attaching chains.

Advice : Please purchase wheel chocks from your Mitsubishi Motors dealer.

2. Jack up the car.

ÿ P.13-9

caveat

- Jacking up the vehicle on a frozen surface may cause the jack to come loose, which may result in a serious accident. Always jack up the vehicle on a surface that is not frozen.
- Do not start the engine, crawl under the vehicle, or look into it while the vehicle is jacked up. This may result in a serious accident.

3. Place the chain over the tire with the folded part of the connector on the outside.

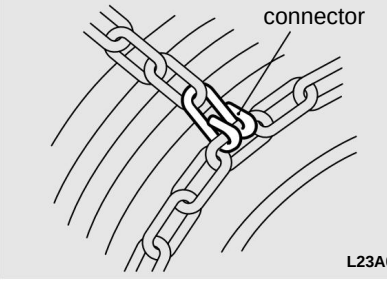

L23A019A

Note

- When putting up tire chains on the road, choose a flat, hard place where you can work safely without interfering with traffic. Also, use emergency flashers and stop signs to warn following vehicles and have passengers wait in a safe place.

Advice :

- If you attach tire chains to aluminum wheels, the wheels may be damaged. Be sure to attach the chains so that the chains and metal fittings do not come into contact with the wheels.
- When tire chains are installed, drive at a speed of 30km/h or less.
- Avoid installing tire chains on roads other than snowy or icy roads, as this will shorten the lifespan of the chains.

Machine Translated by Google

4. Pull both ends of the tire chain fully and connect them with the inner hook first to ensure there is no slack.

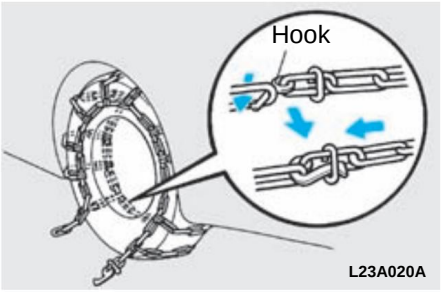

5. Secure the remaining links with wire etc. so that they do not come into contact with the body etc. 6. Attach the chain band clips with their tabs facing outwards at equal intervals.

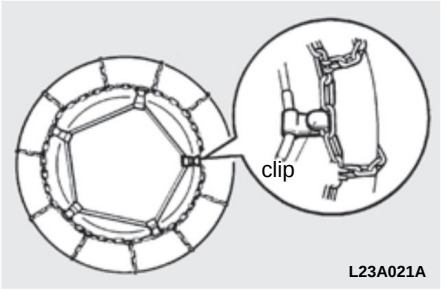

7. Lower the jack and remove the wheel chocks. 8. Drive for a while (about 500m) and check for loosening. If it is loose, reattach the hook to the next link.

⚠ Caution :

If you hear any strange noises while driving, immediately stop the vehicle in a safe place and check that the tire chains are installed correctly.

How to remove JIS tire chains

1. Remove the chain band and any wires that secure the links. 2. Remove the hooks from the inside first. 3. Move the car slightly to remove the chain. Masu.

Machine Translated by Google

What to do in case of an emergency

If the warning light comes on while driving.....13-2

If you hear this sound.....13- 4

If you have any of these problems, please contact us! 13- 5

In case of malfunction! 13- 7

When using a flare.....13- 7

If the engine stalls.....13- 8

Tools and Jacks.....13- 8

How to jack up a vehicle 13- 9

Spare tire 13-11

How to change tires 13-13

Center Caps.....13-16

When the battery is dead! 13-17

When the car overheats!

Towing.....13-21

Metallic scraping noise coming from the brakes
When! 13-23

After replacing the battery, the engine speed
When things become unstable!.....13-24

When the fuse blows! 13-24

Machine Translated by Google

If the warning light comes on while driving!

JN50A-Fc

Immediately stop the vehicle in a safe place and contact your nearest Mitsubishi Motors dealer.

Charging warning light	There may be a problem with the charging system.	Reference page ÿ P.5-6

Park the vehicle in a safe place and check the vehicle first.
If the light does not go off after checking, contact your nearest Mitsubishi Motors dealer.

Oil Pressure Warning Light	This may be due to a drop in the oil pressure that lubricates the inside of the engine. Stop the engine and check the engine oil level.	Reference page ÿ P.5-7
Brake warning light	The parking brake may be left on or the brake fluid level may be low. Make sure the parking brake is released. If the light remains on even when the parking brake is released, check the brake fluid level.	ÿ P.5-7
A/T TEMP A/T *Oil temperature warning light	The automatic transmission oil temperature may be abnormal. Leave the engine running and open the engine hood to allow it to cool.	ÿ P.5-8

*: Automatic transmission

Machine Translated by Google

You do not need to stop the vehicle immediately, but please have it inspected at a Mitsubishi Motors dealership as soon as possible.

JN50AAQa

Engine warning light	This may be due to an abnormality in the engine control device. If this lamp comes on while the engine is running, avoid driving at high speeds.	Reference page ÿ P.5-6
ABS warning light	There may be a system malfunction.	ÿ P.6-20
SRS SRS airbag warning light	There may be a system malfunction.	ÿ P.4-13 ÿ P.4-21
“N” indicator light flashing [Automatic vehicles]	It is believed that some abnormality has occurred in the transmission and all safety devices are working properly. ÿ P.6-8	

Machine Translated by Google

When you hear this sound!

JN50BCUd

N50B003J

Symptom: When the driver's door is opened, an intermittent noise (beep beep) is heard.	Action: "Key removal alarm" ÿ P.3-3 You forgot to remove the key. The buzzer will stop when you remove the key from the engine switch.
When I open the driver's door there is a beep.	"Headlight auto cut function (automatic turning off)" ÿ P.5-9 You forgot to turn off the headlights or fog lights. After a while, the buzzer will stop and the lights will turn off automatically. (However, if you turn the light switch from the (OFF) position to the position, the lights will not turn off automatically.)
When I try to back up my car, I hear a constant beeping noise.	"Selector lever position and function" ÿ P.6-9 The selector lever is in . After reversing, change the selector lever position to stop the buzzer.
When you apply the brakes while driving, you hear a metallic friction noise (squeak) from the tire braking area. The brake pads have worn down to near their limit of wear.	"When you hear a metallic friction noise coming from the brakes!" ÿ P.13-23 Have your brake pads inspected at a Mitsubishi Motors dealer.

Machine Translated by Google

If you have any problems with this,

JN50CCUa

	treatment
Symptoms The key won't turn. 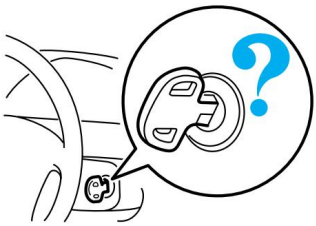	Can't turn from LOCK to ACC Turn the key while gently moving the steering wheel left and right. The selector lever will not turn from ACC to LOCK (Automatic vehicles) Check that the selector lever is in . (Manual vehicles) While holding down the key in the ACC position, turn it to LOCK. Press the brake pedal before operating
vehicles) Check that the engine switch is in ON. On rainy or humid days, the windows may fog up. Check that the outside air intake is set. Turning on the air conditioner is effective. When you want to defog or frost the windshield" ÿ P.9-7	the selector lever. The selector lever will not move from . (Automatic
The engine will not start. The lights will not turn on, or it is dark. The horn will not sound, or the sound is low. The	The battery may be dead. "What to do if your battery is dead!" ÿ P.13-17
needle on the water temperature gauge is approaching Steam is coming out of the engine compartment. 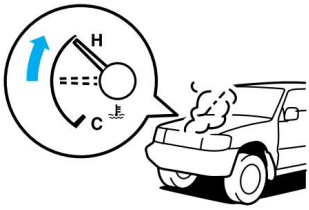	the "H" indicator. Overheating may have occurred. "What to do if the engine overheats!" ÿ P.13-19

Machine Translated by Google

Symptoms	Actions
depress the accelerator pedal. (When starting slipping, move the selector lever alternately between and (between and for manual transmissions) to use the reaction force of lightly depress the accelerator pedal and lightly	1. If you have a blanket or cloth, place it in front of the tire that is slipping to prevent it from slipping and slowly on muddy, snowy, or icy roads) 2. If there is nothing to prevent the car to escape. 3. If the tires are spinning and the car will not move, apply the parking brake to escape. ❶ R ❶ R **⚠ Note** • When using the vehicle's momentum to escape, make sure there are no people around the vehicle before doing so. • If your vehicle becomes stuck in mud, do not spin the tires unnecessarily. The tires will sink, making it more difficult to free yourself. In addition, continuing to run the engine at high speed can lead to overheating or damage to the transmission. If you are unable to free yourself after several attempts, contact a professional.
The brakes are not effective after driving into a puddle. Press the brake pedal several times to dry the brakes.	
Automatic transmission The automatic transmission has an abnormality and the safety device is probably working. The vehicle is slow to start. Drive to your nearest Mitsubishi Motors dealer and have it inspected. If it is difficult to start, put the vehicle in the shift position and start, then the vehicle will not start.	❷ Ⓓ Please switch it back on and drive. (Depending on the nature of the breakdown, this method may not be effective.) 1.
I got a flat tire.	Stay calm, hold the steering wheel firmly, and park the car in a safe place. 2. Change to the spare tire. "How to change a tire" ÿ P.13-13

Machine Translated by Google

In case of malfunction! JN40B-Ec

• Malfunction indication on public roads To prevent accidents such as rear-end collisions, the vehicle will be pulled over to the side of the road and the emergency flashers will be turned on or a stop sign will be displayed.

• Brokedown signs on expressways and motorways On expressways and motorways, it is mandatory to place a stop sign at the rear of the vehicle. People should not remain in the vehicle but should walk to the shoulder of the road and evacuate to a safe place.

Advice : Stop signs are not standard equipment. Please purchase them at your Mitsubishi Motors dealer.

Contact for repairs

Please refer to the separate "Maintenance Notes" booklet.

When using a flare! JN40A-Ae

Use these flares in the event of a breakdown on highways, railroad crossings, etc. Flares are provided at the bottom left of the glove box. When you have used a flare or one has expired, purchase one at your Mitsubishi Motors dealer. Flares have an expiration date (written on the flare).

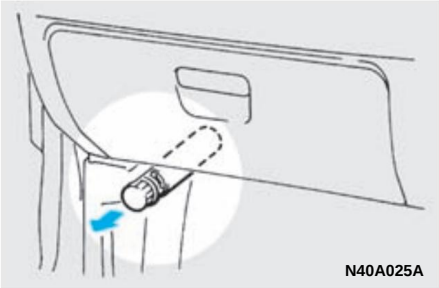

N40A025A

caveat

• Do not let children play with flares. • Never point the flares at someone's face or body as this may cause burns. • Do not use near flammable materials such as gasoline as it may cause a fire. • Do not use in tunnels as smoke can reduce visibility and lead to a serious accident. Please use other methods such as emergency flashing lights.

Advice :

Instructions for use are written on the flare. Please read them carefully in advance.

• The flame lasts for about 5 minutes, so the emergency flashing lights Please use it together. ÿ

"Emergency flasher switch" P.5-15

Machine Translated by Google

When the engine stalls! JN40C-Ma

If the engine stalls while driving, driving operation will change, so please park the car in a safe place using the following method.

1. The brake booster will not work, so the braking effect will be reduced. Press the brake pedal harder than usual. 2. The power steering device will not work, so the steering will be heavy. Press the steering wheel harder than usual.

If the engine stalls and cannot be started

1. Ask a passenger or a person nearby for help and push the vehicle to a safe place. 2. If the vehicle stalls at a railroad crossing and you are unable to move it immediately, quickly evacuate the passengers and press the emergency button at the crossing.

Caution : If a train is approaching or if there is an emergency, signal with a flare.

Advice : For both manual and automatic vehicles, you cannot leave the engine switch in the START position to start the vehicle as an emergency evacuation. ÿ "Before starting the engine" P.6-3

Tools and Jack JN01B-Ga

Storage location: Stored in the luggage compartment.

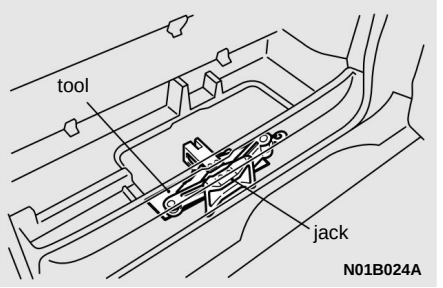

Caution : After using tools or the jack, be sure to store them back in their original positions. Leaving them indoors or elsewhere may lead to an unexpected accident. Do not use the jack for any purpose other than changing tires and installing tire chains. Also, do not use a jack other than that installed in the vehicle.

tool JN21BAC

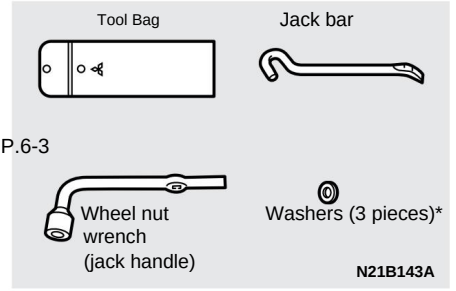

*: Used when attaching an aluminum wheel to the spare tire hanger. ÿ "How to change tires" P.13-13

Machine Translated by Google

Removing and installing the jack JN31C-Z

• When removing

1. Push the lid inside the luggage floor box forwards and then lift it up.

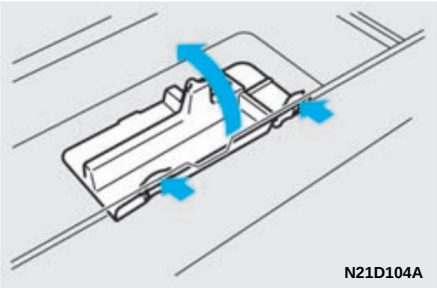

N21D104A

2. Retract the jack and remove it from the mounting bracket.

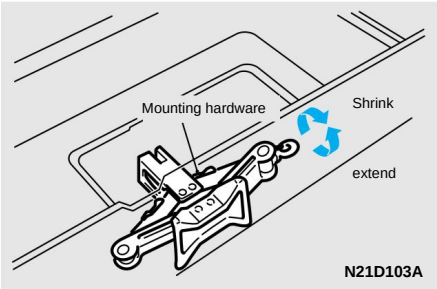

N21D103A

• When storing

1. Retract the jack and then return it to its original position. Masu.
2. Extend the jack and secure it to the mounting bracket. 3. Remove the lid inside the luggage floor box. Return it to its original position.

advice

• When installing a jack, make sure that the hook of the jack hooks onto the mounting bracket on the vehicle body. • Make sure you know in advance the types of tools and how to use the jack so that you are not in trouble in the event of an emergency. • When stopping on the expressway due to a breakdown or other reason, you are required to display a stop indicator. Make sure that you carry a stop indicator with you at all times.

How to jack up a car

JN22ABT

WARNING : After jacking up the vehicle, never crawl under it. If the jack comes off, you may be seriously injured.

CAUTION :

When jacking up a vehicle, be sure to observe the following for safety. If an accident occurs, the jack may come loose, leading to an unexpected accident. • Do not leave the engine running. • Have everyone get out of the vehicle and not remain inside. • Do not use the jack on any surface other than flat, hard ground. • Do not use on frozen surfaces. • Do not place any objects on or under the jack.

stomach.

• Do not shake the car while it is on the jack.

stomach.

• Do not rotate tires when the vehicle is jacked up. • Do not leave the vehicle unattended on a jack.

stomach.

Machine Translated by Google

1. Park the vehicle on a flat, hard surface where you will not be in the way of traffic and can work safely. 2. Make sure to apply the parking brake, put the shift lever in if you have a manual transmission, or put the selector lever in if you have an automatic transmission, and stop the engine. 3. Turn on the hazard warning lights, place a stop sign at the rear of the vehicle, and get any passengers out. 4. Chock the tire diagonally opposite the tire to be replaced (the punctured tire).
   • Behind the rear wheel if it is a front wheel • In front of the front wheel if it is a rear wheel

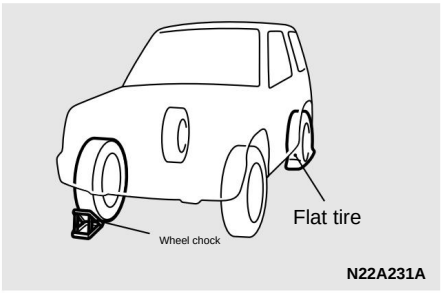

N22A231A

Advice : When jacking up a vehicle, always use wheel chocks. If the vehicle moves while jacking up the vehicle, the jack may come loose, which could lead to an unexpected accident.

Advice : • Wheel chocks can be purchased from your Mitsubishi Motors dealer. • If you do not have wheel chocks, you can use a stone or other object large enough to hold the tire in place.

5. Place the jack in the designated position near the tire to be replaced.

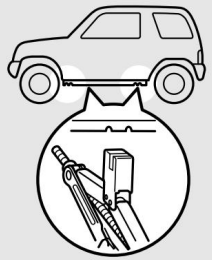
N22A295A

WARNING : When setting up the jack, do not place it anywhere other than the specified positions. If you do not place the jack in the specified positions, the body of the vehicle may be dented or the jack may fall over, resulting in serious injury.

6. Turn the jack by hand until the groove on the jack head fits into the flange.

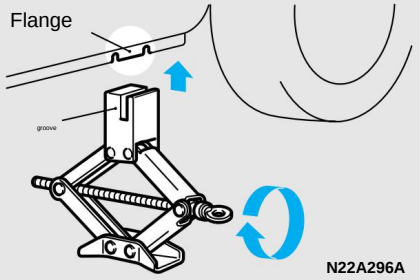

N22A296A

Machine Translated by Google

7. Insert the jack bar into the hole in the jack handle (wheel nut wrench) and gently turn the wheel nut wrench until the tire is slightly off the ground.

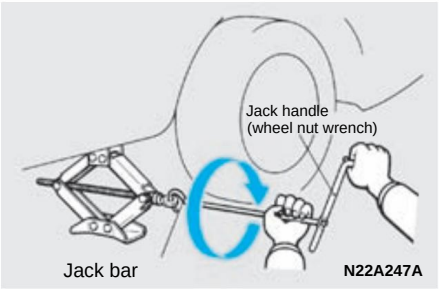

⚠ Caution :

Do not use the jack for any purpose other than changing tires and installing tire chains. Also, do not use a jack other than that installed in the vehicle. Do not jack up the vehicle higher than the height where the tires are slightly off the ground.

Spare tire

JN33ALL

• Installed on the back door of the storage location.

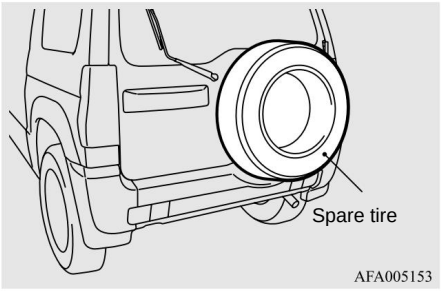

⚠

CAUTION • Hold the tire securely when removing it from the vehicle or when installing it. • Use gloves to prevent injury when putting your hands in holes in the wheel due to the edges. • When loosening or tightening bolts or nuts, be careful not to get your fingers pinched between the wheel nut wrench and the wheel. • Regularly check the air pressure in the spare tire. Driving with insufficient air pressure may lead to an unexpected accident. If the air pressure is insufficient, drive at a moderate speed to the nearest Mitsubishi Motors dealer or gas station and have the tire inflated to the specified pressure. ÿ "Tire Air Pressure" P.14-8

Advice : Do not put your foot on the spare tire.

stomach.

Machine Translated by Google

• When removing

1. If the vehicle has a spare tire case, remove the spare tire case.

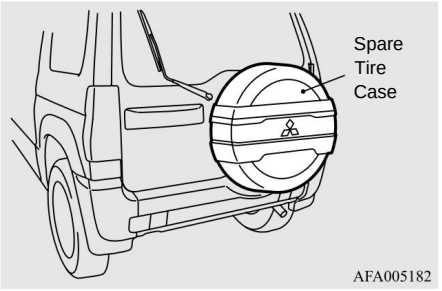

2. For vehicles with a spare tire cover, use a wheel nut wrench to loosen and remove the bolts, then remove the spare tire cover.

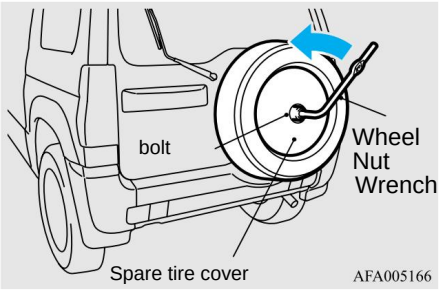

3. Loosen and remove the bolts with a wheel nut wrench and remove the spare tire.

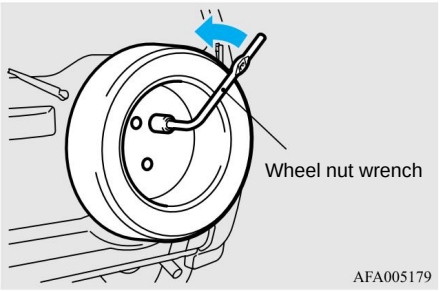

4. For vehicles with cover brackets, loosen and remove the nuts with a wheel nut wrench, then remove the cover bracket.

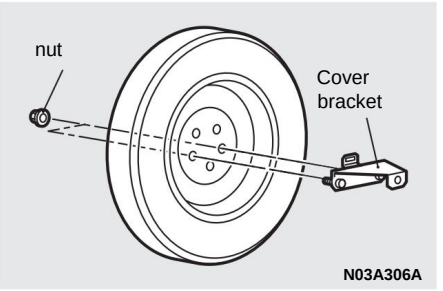

• When installing

1. For vehicles equipped with a cover bracket, place the cover bracket on the back of the spare tire and securely tighten the nuts from the front using a wheel nut wrench.

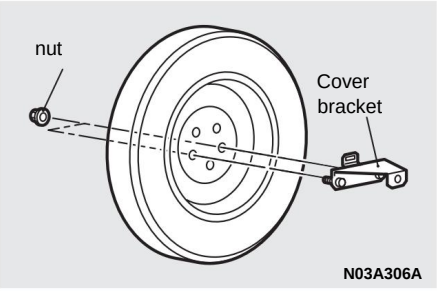

Advice : When installing the cover bracket, insert the tip first and then install it.

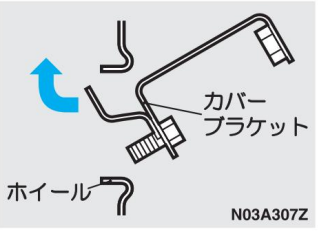

Machine Translated by Google

2. Place the spare tire upside down on the hook of the spare tire hanger.

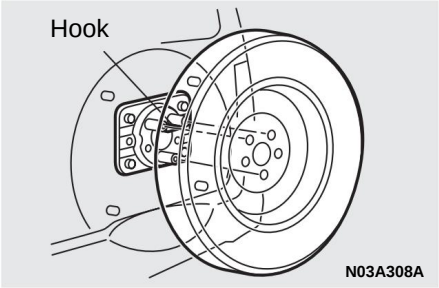

3. While lifting the spare tire, align the hole in the wheel with the spare tire hanger and securely tighten the bolts with the wheel nut wrench.

Tightening torque: 32 to 48N•m (3.3 to 4.9kgf•m)
(140 to 200N (14 to 20kgf) force with the tip of the wheel nut wrench installed in the vehicle)

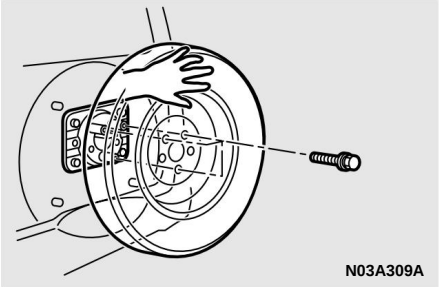

Caution :

When installing the tires, be careful not to drop them on your foot or other parts of your body.

4. Remove the spare tire cover if your vehicle has one
Install the unit in the reverse order of how it was installed. Be sure to tighten the bolts securely.

How to change tires JN24AZSa

CAUTION • When removing or installing a tire, hold the tire firmly. • If you put your hands in holes in the wheel, you
may be injured by the edges, so use gloves. • When loosening or tightening bolts or nuts, be careful not to get your fingers pinched
between the wheel nut wrench and the wheel.

• When removing the tire

1. Remove the tools, jack and spare tire.

ÿ P.13-8, 13-11

Advice : When
you remove the spare tire, place it under the vehicle near the jack in case the jack comes off.

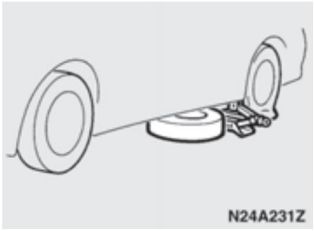

2. Remove the center cap. ÿ P.13-16 3. Place the jack
in the designated location near the tire you want to replace. ÿ "How to jack up the vehicle"

P.13-9

Machine Translated by Google

4. Use a wheel nut wrench to loosen the wheel nuts in numerical order until they can be turned by hand.

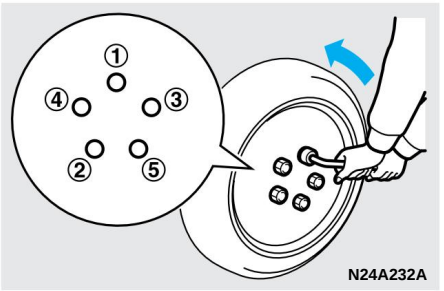

5. Gently jack up the vehicle until the tire is slightly off the ground. 6. Remove the wheel nuts and then remove the tire.

• When installing tires

1. Clean all dirt from the hub surface, hub bolts and wheel mounting holes.

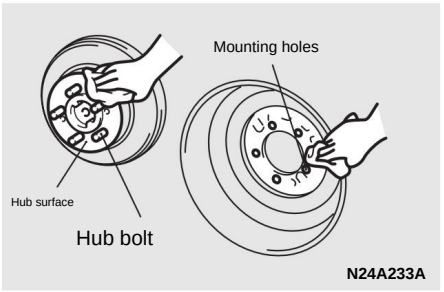

2. Install the tire.

⚠

WARNING : When installing a tire, pay attention to the front and back of the tire and make sure the valve is facing outward from the vehicle. If the valve is not visible after installation, the tire has been installed backwards. Installing a tire upside down may have adverse effects on the vehicle and may lead to an unexpected accident.

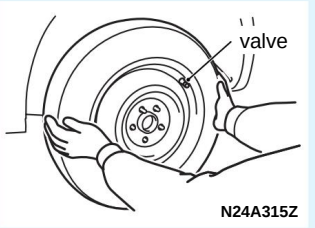

3. Turn the wheel nuts clockwise by hand to loosely tighten them.

Machine Translated by Google

Steel Wheels

Tighten the wheel nuts temporarily until the tapered part of the wheel nut lightly touches the seat part of the wheel hole and the tire does not rattle.

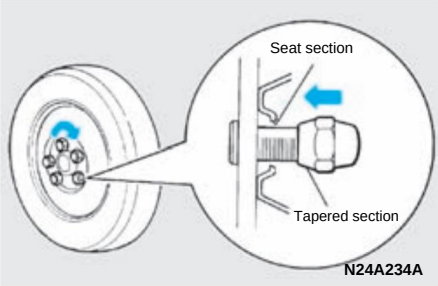

Aluminum wheels

Tighten the wheel nuts loosely until the tapered part of the wheel nut touches the wheel and the tire does not rattle.

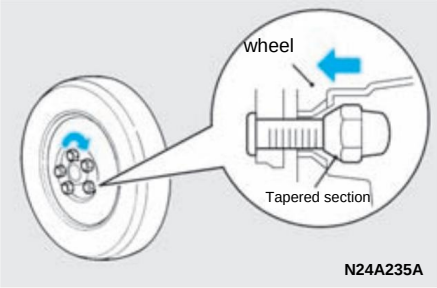

Note :

Apply oil to the hub bolts and wheel nuts.
Do not apply oil to the threads, disc wheels, etc. as this may cause damage.

4. Lower the jack until the tire touches the ground, then gradually tighten the wheel nuts in numerical order in two or three steps.
Be sure to tighten the final nuts securely.

Tightening torque: 88 to 108N•m (9 to 11kgf•m) (400 to 460N {40 to 46kgf} force with the tip of the wheel nut wrench on the vehicle)

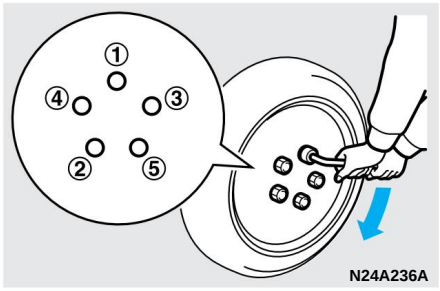

Note

• When tightening the wheel nuts, do not step on the wheel nut wrench with your foot or use a pipe or other object to tighten them more than necessary.

5. Install the center cap. ÿ P.13-16

6. Check the tire pressure.
ÿ "Tire Pressure" P.14-8

Machine Translated by Google

7. Place the replaced tire upside down and hang it on the hook of the spare tire hanger.

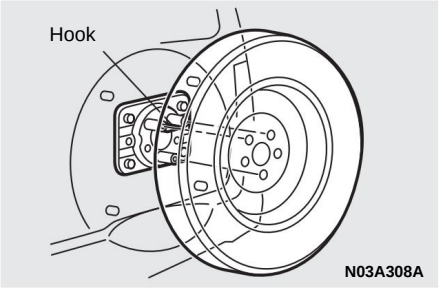

8. While lifting the replaced tire, align the hole in the wheel with the spare tire hanger, attach the washer (A) and bolt (B), and tighten securely with the wheel nut wrench.

Tightening torque: 32 to 48N•m (3.3 to 4.9kgf•m) (140 to 200N {14 to 20kgf} force with the tip of the wheel nut wrench on the vehicle)

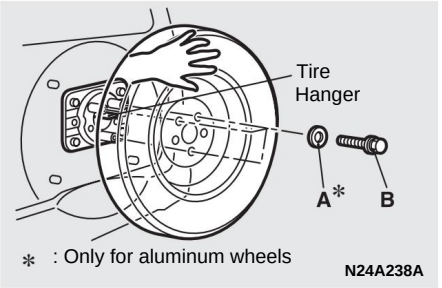

Caution :

When installing aluminum wheels, use the washers provided in the tool bag.

9. Return the tools and jack to their original positions.

Caution :

If you experience vibrations in the steering wheel or vehicle body while driving after changing tires, have your tires balanced at a Mitsubishi Motors dealer. Do not

mix different types of tires or use tires other than the specified size, as this may compromise the safety of your vehicle.

Advice : After

changing tires, after driving approximately 1,000 km, tighten the wheel nuts again and check that they are not loose.

Center cap JN23B-La

To remove it, cover the

end of a jack bar in your tool bag with a cloth, insert it between the wheel and the center cap, and pry it off to remove the center cap.

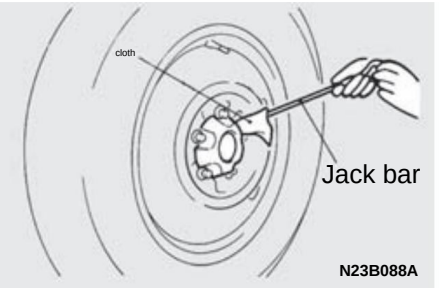

When installing, tap the

center cap into place with your hand.

Machine Translated by Google

When the battery runs out !

JN28AATc

The engine won't start

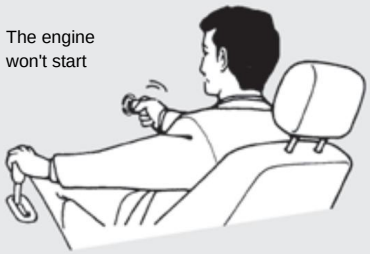

The following conditions are considered to be a dead battery.

- The scooter does not turn, or if it turns, it turns weakly and the engine will not start.
- The lights don't work, or the lights are dimmer than usual.
- The horn doesn't sound, or is smaller than usual.

N28A174E

By using a booster cable (sold separately), you can use another vehicle's battery as a power source to start the engine.

WARNING : When using a booster cable to start the engine of a rescue vehicle, follow the correct procedure as described in the instruction manual. Improper handling may result in a fire, explosion, or damage to the vehicle.

1. Park the rescue vehicle in a position where the booster cable can be connected but will not come into contact with your vehicle.

Caution :

The rescue vehicle must be a 12V vehicle equipped with a battery of the same capacity or greater than that of your vehicle.

2. Apply the parking brakes on your vehicle and the rescue vehicle, move the shift lever to " "Ⓝ your vehicle is manual, or move the selector lever to " " iⓅour vehicle is automatic, and turn the engine switch to "LOCK" to stop the engine.

WARNING : When connecting the booster cables, also turn off the engine of the rescue vehicle. Cables or clothing may get caught in the fan or drive belt, causing injury. After the engine is started, the cooling fan will repeatedly rotate and stop depending on the coolant temperature. Keep your hands away from the fan while the engine is running.

Advice : When switching on electrical equipment such as lights and air conditioners, Please turn it off as well.

3. Check the battery fluid level.

WARNING : Do not use the battery when the battery fluid level is below the LOWER LEVEL. This may accelerate battery deterioration and may cause the battery to overheat or explode.

Machine Translated by Google

advice

• For information on refilling battery fluid, please read the separate "Maintenance Notes."

4. Be sure to connect the booster cables in the order shown in the diagram.
   ① + terminal of your vehicle's battery +
   ② terminal of the rescue vehicle's battery
   ③ - terminal of the rescue vehicle's battery
   ④ Hanger of your vehicle's engine (to be grounded)

N28A182A

WARNING • Always connect in the following order: ① ② ③ ④ ÿ ÿ ÿ. • Always connect to the engine body. Connecting directly to the negative side of the battery may cause flammable gases generated by the battery to ignite and explode.

• When connecting the booster cables, do not allow the + and - terminals to come into contact with each other, as this may cause sparks and cause the battery to explode.

CAUTION : Make sure the booster cable clips are securely connected. If they come undone due to vibrations caused by starting the engine, the cable may become entangled in the fan or drive belt, which could lead to an unexpected accident.

advice

• Remove the cover from the battery's positive terminal before connecting the booster cable. • Use a booster cable that is appropriate for the battery capacity. Failure to do so may result in the cable burning out.

• Before using the booster cable, check that it is not damaged, corroded, or otherwise abnormal.

5. After connecting, slightly increase the engine speed of the donor vehicle to start the engine of the vehicle with the dead battery. 6. Once the engine is running, remove the booster cable in the reverse order of how you connected it.

Machine Translated by Google

7. Have your battery checked at a nearby gas station or Mitsubishi Motors dealer.

caveat

• Charging the battery while it is installed in the vehicle may cause a fire, explosion, or damage to the vehicle. If it is unavoidable to charge the battery while it is installed in the vehicle, remove the vehicle's - terminal connected to the battery. • Do not bring the battery near a fire while charging. The battery emits flammable gases and may explode. • When charging the battery in a small, enclosed space, ensure that there is adequate ventilation. • Remove all caps when charging. • Battery fluid is dilute sulfuric acid. Contact with skin or eyes can cause burns or blindness. Immediately wash with plenty of water and seek medical attention as soon as possible.

Caution :

Do not try to start the engine by pushing the vehicle. In particular, the engine of an automatic vehicle will not start if you push the vehicle because the structure is different from that of a manual vehicle.

Advice : If you start a vehicle equipped with ABS with insufficient battery charge, the engine may run unevenly and the ABS warning light may come on. ÿ

"Anti-lock Brake System" P.6-19

When it overheats !

JN26A-Sd

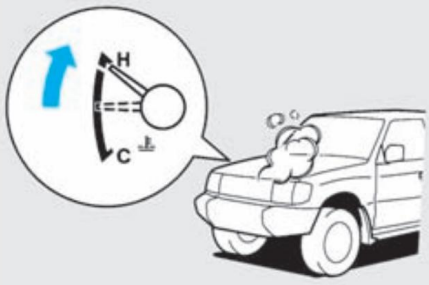

The following conditions are called overheating:

• The water temperature gauge needle approaches the “H” mark or there is a sudden drop in engine power. • Steam is coming from the engine compartment.

N26A223E

1. Park the vehicle in a safe place. 2. Check to see if there is steam coming from the engine compartment.

[When no steam is coming from the engine compartment] With the engine running, open the engine hood (bonnet) to improve ventilation.

[If steam is coming from the engine compartment]

Stop the engine and when steam has stopped, open the engine hood to improve ventilation, and then start the engine.

Machine Translated by Google

3. Make sure the cooling fan is working.

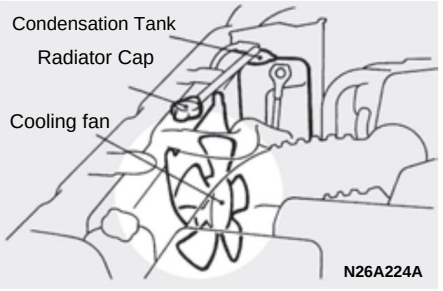

WARNING • Do not open the engine hood if steam is coming out of the engine compartment. Steam or hot water may spray out and cause burns. Even when steam is not coming out, hot water may spray out and some parts may be very hot, so be careful when opening the engine hood. • Be careful not to get your hands or clothes caught in the cooling fan.

Advice : If the fan is not working, stop the engine and allow it to cool naturally, then have it inspected immediately at a Mitsubishi Motors dealership.

4. When the water temperature gauge pointer drops, stop the engine.
5. After the engine has cooled down sufficiently, check the presence of coolant.

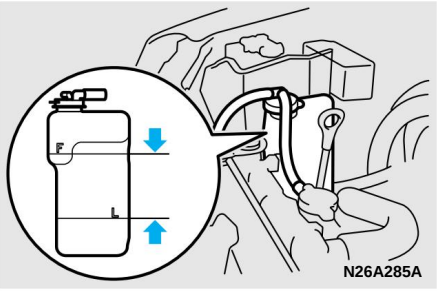

WARNING : Do not normally remove the radiator cap.
The coolant is under pressure, so if you remove the cap when the coolant is hot, steam or hot water may spray out and cause burns.

Advice : For information on refilling the coolant, please read the separate "Maintenance Notes" booklet.

Machine Translated by Google

Towing

JN25AZX

Whenever possible, please ask a professional to tow your vehicle. Contact your Mitsubishi Motors dealer in the following cases: • The engine is running but the vehicle does not move. Also, there is an abnormal noise. • Check the undercarriage and see if there are any oil leaks or other problems. There are.

Caution : • In automatic vehicles, if the transmission oil is insufficient, the transmission may be damaged, so please have the vehicle transported by tow truck if possible. • If you suspect that a drivetrain part has broken down (wheels will not move, there is an abnormal noise, etc.), be sure to lift all four wheels and tow the vehicle.

Advice : If you require transportation by tow truck, please refer to the separate "Maintenance Notes" booklet and contact your Mitsubishi Motors dealer.

If you have to ask another vehicle to tow your vehicle with a rope, please follow the steps below.

When having your vehicle towed by another vehicle

1. Always attach the towing rope to the towing hook.

• When being towed forward

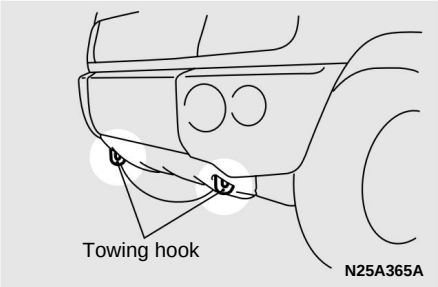

• Use this when being towed backwards for rescue purposes.

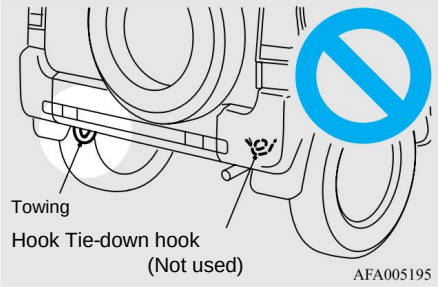

Machine Translated by Google

Advice : If you attach the rope to anything other than the towing hook, the vehicle may be damaged. Do not tie the rope to the tie-down hook. • What is a tie-down hook?
The hook used for transporting the car is not intended for towing. • Whenever possible, attach the towing rope to the hook on the same side to avoid towing diagonally.

• Avoid sudden acceleration or other driving behavior that subjects the towing hook or rope to a large shock. This may damage the towing hook or rope. • Keep the towing rope horizontal when towing. Attaching the rope in an unlevel position may damage the body. • If a wheel has fallen into a ditch or similar, do not attempt to tow the vehicle at an excessively diagonal angle.

2. Be sure to attach a piece of white cloth measuring at least 30cm square (30cm length x 30cm width) to the towing rope.

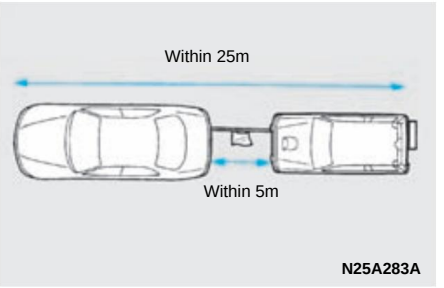

3. Keep the engine running as much as possible. If the engine does not start, turn the engine switch to ACC or ON.

Caution :
If the key is removed in the LOCK position, the steering wheel will be locked and will not be able to be operated, which may result in an accident.
• If the engine is stopped, the brakes will be less effective and steering will become very heavy.

Machine Translated by Google

4. Place the shift lever (selector lever) in the position.
Ⓝ
5. For 4WD vehicles, set the transfer shift lever to "2H." ÿ "Transfer Shift Lever" P.7-2 6. When towing a vehicle, pay attention to the brake lights of the towing vehicle and always make sure there is no slack in the rope.

Caution :

When driving down a long slope, the brakes may overheat and become less effective. Have the vehicle transported by a tow truck.

Advice : When towing an automatic vehicle, the speed must be no more than 30km/h and the distance must be no more than 30km. Exceeding these speeds and distances may damage the transmission. Be careful not to damage the body of the vehicle with the towing rope.

When towing another vehicle You may not tow another vehicle with this vehicle.

Advice : The rear towing hook is for use when being towed backwards, and cannot be used to tow other vehicles.

• Do not tow the vehicle by tying a rope to the tie-down hook.

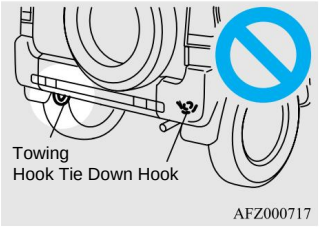

When you hear a metallic grinding noise coming from your brakes! JN08B-Hb

Disc brakes are equipped with a device that emits a metallic friction noise (squeak) while driving to warn you when the brake pads are nearing their limit of wear.

advice

• If you hear a metallic friction noise, have the brake pads checked at a Mitsubishi Motors dealership.

Machine Translated by Google

If the engine speed becomes unstable after replacing the battery If the engine speed becomes unstable, JN38B-A perform the initial engine adjustment using the following method.

1. Park your car in a safe place. 2. If you have an automatic transmission, put the gear selector lever in the P position, or if you have a manual transmission, put the gear shift lever in the N position, and then turn off the engine.
3. Start the engine again. 4. Shut off all air conditioning operations. 5. Warm up the engine until the water temperature gauge pointer stabilizes near the middle. 6. Stop the engine and then start it again. 7. Let the engine idle for approximately 10 minutes.
8. When the engine speed stabilizes, the initial adjustment operation is complete.

Advice : If the engine speed does not stabilize even after performing the initial engine adjustment operations, have the engine inspected at a Mitsubishi Motors dealership.

When the fuse blows!

JN09A-KA

If any of the lights do not light or the electrical equipment does not work, the fuse may be blown. Check the fuse and replace it if it is blown.

Fuse box location

• Driver's seat foot area

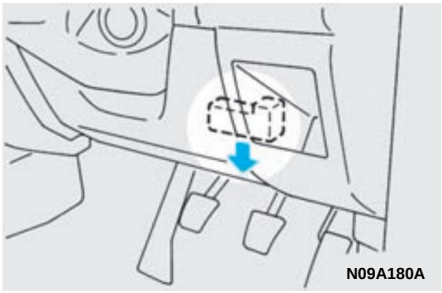

• Inside the engine room

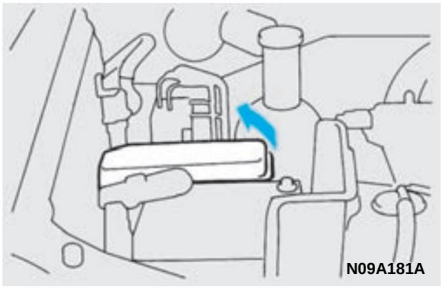

Machine Translated by Google

Equipment covered by each fuse and capacity

JN29BCUd

• Driver's seat foot area

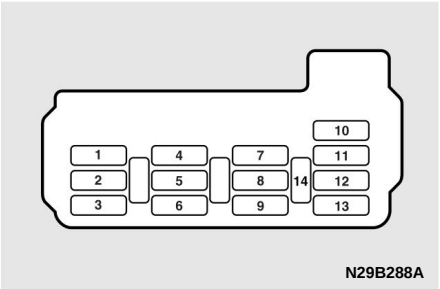

N29B288A

NO	Display	Equipment	capacity
1		Door Lock	15A
2		Interior light (room lamp) 10A	
3		Wipers	15A
4		Heater	20A
5		Accessory socket 15A	
6		Defogger 15A	
7		radio· Cigarette lighter	15A
8		Reverse light (Back-up lamp) Tail light	10A
9		(tail lamp) 10A	
10	———		
11		Control Unit relay	10A
12		radio	10A
13		Meter 14	10A
— Spare fuse 20A			

• Due to differences in equipment specifications, there are no fuses.
There may be cases like this.

• The above table shows the main equipment each fuse covers.
It represents preparation.

Machine Translated by Google

• Inside the engine room

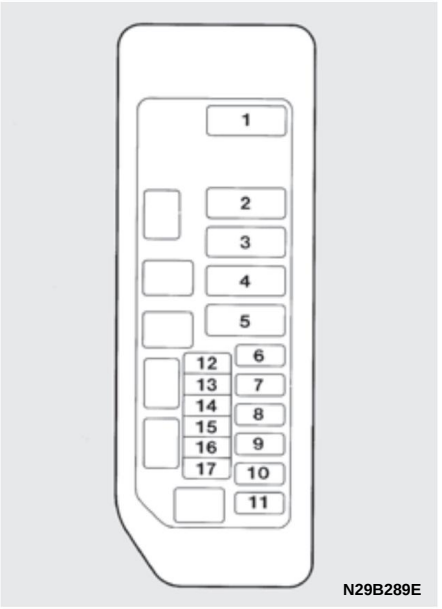

N29B289E

NO	Display	Equipment	capacity
1		ABS	60A
2		ignition switch	40A
3		battery	40A
4		radiator Fan motor	30A
5		Power window 30A	
6		front Fog lights	15A
7		Air conditioning Compressor	15A
8		Emergency flasher	10A
9		engine Controls Brake	20A
10	STOP	lights (Stop lamp) Room	10A
11		lamp 10A	
12		Horn	10A
13		Headlights (Downward)	10A
14		(Left) Headlight (Downward)	10A
15		(Right) Headlight (Upward) (Left)	10A
16		Headlight (Upward) (Right)	10A
17		Radio •	10A

Due to differences in equipment specifications, there is no fuse.
There may be cases like this.

• The above table shows the main equipment each fuse covers.
It represents preparation.

Machine Translated by Google

Replacing the fuse

JN29C-W

1. Turn the engine switch to LOCK. 2. Check the fuses and
Check the capacity.

ÿ P.13-26

Advice : The
equipment and capacity of each fuse are indicated on the lid of the fuse box.

3. Remove the fuse using a fuse remover (located in the fuse box
at the driver's feet).

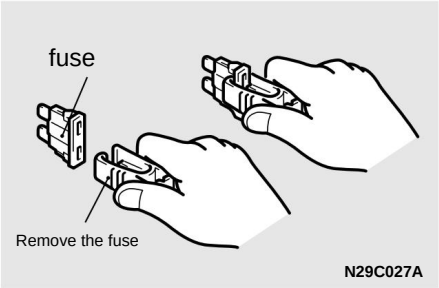

N29C027A

4. Check the fuse and replace it with a fuse of the same capacity if it is blown. In an emergency when a spare fuse is not available, use a fuse from a radio or cigarette lighter that will not affect operation. If you have used a substitute fuse, replace it with a new one as soon as possible.

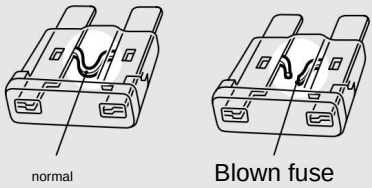

N29C028A

WARNING : Use a fuse with the same capacity as the fuse already installed. Using wire or silver paper instead of a fuse may cause the wires to overheat and result in a fire.

Advice : If the
fuse blows again after being replaced, have your vehicle inspected by a Mitsubishi Motors
dealer. If the fuse is normal but the relevant equipment does not work, there may be another cause, so have your vehicle inspected as soon as possible by a Mitsubishi Motors dea

Machine Translated by Google

MEMO

Machine Translated by Google

Service Data

• Details of daily and periodic inspections are described in the separate "Maintenance Notes" booklet.
It is posted here so please read it.

Vehicle dimensions (length, width, height), vehicle weight, engine type, and displacement are listed on the vehicle's
Please refer to the "Vehicle Inspection Certificate".

JQ11ACUi

Item	Capacity:	Brands used
fuel	Approx. 43 L	Regular unleaded gasoline

Machine Translated by Google

Service Data

<table>
<tr><th rowspan="2">Item</th><th colspan="2" rowspan="2">Capacity</th><th colspan="4">Brand used</th></tr>
<tr><th>Mitsubishi Motors genuine brand</th><th>API Classification</th><th>ILSAC</th><th>SAE Standard Viscosity Symbol</th></tr>
<tr><td rowspan="5">Engine oil</td><td rowspan="3">Excluding turbo cars</td><td rowspan="3">Approximately 3.5L (including approximately 0.2L in the oil filter)</td><td>Diamond Queen SL Super</td><td>SL equivalent</td><td>GF-3 equivalent</td><td>5W-20
— 10W-30</td></tr>
<tr><td>Diamond Queen SJ SJ equivalent —</td><td></td><td></td><td>5W-30
10W-30</td></tr>
<tr><td colspan="5">Dia Queen SH Equivalent to SH — 10W-30 Dia Queen</td></tr>
<tr><td rowspan="3">Turbo car</td><td rowspan="3">Approximately 3.6L (including</td><td>SL Super</td><td colspan="3">SL equivalent — 10W-30</td></tr>
<tr><td>Dia Queen SJ SJ equivalent — 10W-30</td><td colspan="3"></td></tr>
<tr><td>Dia Queen SH SH equivalent — 10W-30</td><td colspan="3"></td></tr>
<tr><td colspan="6">approximately 0.2L in the oil filter and approximately 0.1L in the oil cooler) • Use engine oil with a viscosity appropriate for the outsic
 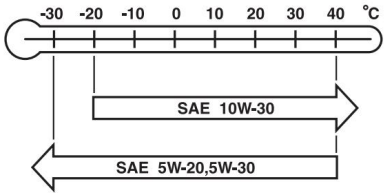
</td></tr>
</table>

⚠ Note

• Do not use 5W-20 or 5W-30 in turbocharged vehicles . 5W-20 and 5W-30 are low viscosity oils that can cause poor lubrication and engine seizure. Use 10W-30 instead.

advice

• All vehicles except turbocharged are fitted with 5W-20 at the factory.
5W-20 improves engine starting and fuel economy.
• When driving under severe conditions such as rough roads, mountain roads, uphill and downhill roads, or repeated short distance driving, engine oil will deteriorate more quickly than when driving under normal conditions. If the vehicle is used in this way, change the oil more quickly than
usual. • For information on when to change engine oil and other lubricants, please read the separate "Maintenance Notes" booklet.
So lame.

Machine Translated by Google

Item		Capacity	Brand used
manual transformer mission oil	Excluding turbocharged vehicles, approx. 0.8L		Mitsubishi Genuine Diamond Queen Multi Gear Oil 75W-85W (GL-4)
	Turbo car approx. 1.3L		
automatic Transmission oil		Approx. 4.5L	Mitsubishi Genuine Diamond Queen ATF SP III
Transfer Oil		0.9L	Mitsubishi Genuine Diamond Queen Multi Gear Oil 75W-85W (GL-4)
Diffa Renshall oil	front (4WD	Approx. 0.8L	Mitsubishi Genuine Diamond Queen Super hypoid gear oil SAE80 (GL-5)
	vehicles) Freewheel clutch	Approx. 0.065L	
	Rear	Approx. 1.14L	Mitsubishi Genuine Diamond Queen Super hypoid gear oil (GL-5) Temperature 10ÿ or higher SAE90 Below 10ÿ SAE80
Windshield washer fluid		Approx. 2.6L	Mitsubishi Genuine Diamond Queen Windshield washer fluid
Brake fluid		Required	Mitsubishi Genuine Diamond Queen Brake fluid Super 4 (DOT4)
Power steering oil Approx. 0.7L Mitsubishi genuine Diamond Queen power steering fluid			
Cooling water		Approx. 4.0L *	Mitsubishi Genuine Diamond Queen Super long life coolant

*: Includes approximately 0.5L in the condensation tank

Machine Translated by Google

Service Data

Item			Service Data
Spark plug	Brands used	except, Turbo car	NGK: NGK Spark Plug Co., Ltd. . . . . DCPR7E DENSO: Made by Denso XU22EPR-U
		Turbo car	NGK: NGK Spark Plug Co., Ltd. . . . . IKR7B DENSO: Denso SXU22PR-A9
	Electrode gap		0.8 to 0.9 mm

• Please contact your Mitsubishi Motors dealer to inspect or replace spark plugs.

Item		Format
battery	Excluding cold weather specification vehicles	34B19L
	Cold weather specification vehicles	42B19L

caveat

• Be careful not to mistake the positive and negative terminals when installing the battery.
• When installing the battery, connect the + terminal first.
If the + terminal comes into contact with other parts, a spark may occur and the battery may be damaged.
There is a risk of explosion.

advice

After the battery is replaced, the engine, automatic transmission, and other electronic controls will be
The system learning contents are erased, so the engine speed may become unstable or the shift shock may occur.
If the engine speed becomes unstable, perform the initial engine adjustment.

stomach.

ÿ "If the engine speed becomes unstable after replacing the battery!" P. 13-24

The shift shock will go away after you change gears a few times, and the gear changes will become smoother.

• After replacing the battery, the memory settings you have made may be erased.
If it is erased, please set it again following each procedure.

Machine Translated by Google

Item	Service Data		
Brake pedal	Play:		3 to 8 mm
	The clearance between the floor board and the pedal when the pedal is depressed (pressure: approx. 500N (approx. 50kgf))		125mm or more
Clutch pedal play			15 to 20 mm
	Gap between floorboard and board when broken		100mm or
Parking brake pull (operating force approx. 200N {approx. 20kgf})			more 5 to 7 notches
lamp	Exterior lighting	Headlights (Halogen bulbs) .....60/55W (H4) Parking lights .....5W (W5W) Fog lights Equipment by type .....51W (HB4) Brake lights/ Tail lights .....21/5W (W21/5W) Reversing lights ..... 21W (P21W) Direction indicator light Front . ... • The numbers in parentheses indicate the valve model.	
	Interior lighting Room lamp [interior light]. ...		
	Advice : When replacing light bulbs, always replace with bulbs of the same wattage and color. Use the one below.		

Machine Translated by Google

Service Data

Item	Service Data
Belt deflection	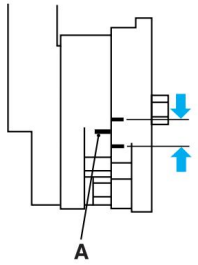 Indicator (A) is within range

Machine Translated by Google

Tyre and wheel sizes When replacing tyres JQ12ACUj

and wheels, observe the following: • Replace all four wheels at the same time. • Use tyres and wheels of the specified size.

⚠ Note

• Using tires of a size other than the specified size or mixing different types of tires. Please avoid this as it will adversely affect safe driving.

• Because driving force is applied to all four tires in a 4WD vehicle, always use tires of the same specified size, type, and brand, with the same degree of wear. Using tires of different sizes, types, brands, or degrees of wear may put strain on drivetrain components, leading to serious malfunctions such as oil leaks and seizure, and may result in an unexpected accident. Consult a Mitsubishi Motors dealer when replacing tires and wheels. •

Wheels may not be usable even if they have the same rim size and offset, as they may interfere with the vehicle body. If you are using your own tires, consult a Mitsubishi Motors dealer.

tire	Wheels			
175/80R15 90Q	15 × 5 1/2JJ (46mm) [114.3mm] 5 holes	Standard Tires	steel	ÿ
			aluminum	•
		Spare tire	steel	•

• indicates standard equipment ÿ

indicates usable sizes ( ) indicates offset amount (distance between the wheel mounting surface and the center of the rim) [ ] indicates PCD (pitch circle diameter of the wheel mounting hole) Please also use the sizes in the table for winter tires, etc.

Machine Translated by Google

Tire pressure

JM13BCPd

Unit: kPa {kgf/cm2}

Tire size	Air pressure
175/80R15 90Q	180{1.8}

Machine Translated by Google

Index

a

Aluminum wheels 11-10
Anti-lock Braking System
(ABS) 6-19
Antennas 10-13

comonant

Windshield care ..... 11-8 Washer
Washer
fluid ..... 14-3 Inspecting and
refilling washer fluid ..... 11-3 Washer
tank ..... 1-4 Front wiper/washer
Switches 5-12
Rear wiper/washer
switch 5-13

workman

Air conditioner..... 9-4
How to use air conditioners efficiently..... 9-9
Air Outlets 9-2
Manual Air Conditioner 9-4
AM/FM electronically tuned radio and CD player
(with clock) 10-2
SRS airbags 4-18
SRS Airbag/
Pretensioner Warning Light.... 4-13, 4-21 Engine
Oil 14-2
Adding engine oil 11-2
Checking and adding engine oil level... M
Engine warning light 5-6
Engine switch 6-2
How to start the engine.....6-4
Initial Engine Adjustment.....13-24
Engine hood 3-8
Engine Room 1-4
Before starting the engine 6-3

O

Oil..... 14-2
Maintenance
Aluminum wheels.....11-10
Hydrophilic mirror door mirrors .....
11-9 Paint repairs 11-10
Water-repellent glass on front door 11-8
Wax 11-7
Audio 10-1
Automatic
Transmission 6-7
Automatic transmission
How to drive 6-11
Automatic transmission
oil ..... 14-3 overdrive
switch 6-10
Selector lever 6-7
A/T oil temperature warning light..... 5-8
Odometer..... 5-3
Overheating 13-19
After off-road driving..... 7-8

mosquito

Card Holder ..... 8-2 Cup
Holder ..... 8-6 Cold Weather
Handling ..... 12-2 Exterior
Care ..... 11-6 Gasoline
(Fuel) 14-1

tree

Keys..... 3-2
Keyless Entry..... 3-4

M Please read the separate "Maintenance Notes" booklet.

Machine Translated by Google

nine

Trip meter ..... 5-3 Defog

Defogging the windows 9-7

Rear window defogger

switch ..... 5-15 Glove

box ..... 8-6 Clean air

filter 9-8

K

Warning Lights 5-5

ABS Warning Lights 6-20

SRS Airbags/Pretensioners

Warning lights 4-13,

4-21 Engine warning light .....

5-6 A/T Oil temperature warning light .....

5-8 Seat belt warning light 5-8

Charging warning light .....

5-6 Fuel level warning light 5-8

Door ajar warning light ..... 5-8 Brake

warning light ..... 5-7 Oil

pressure warning light 5-7

Towing 13-21

Ko

tool..... 13-8

sa

Side under mirrors 6-18

Service data ..... 14-1 Sun

visors 8-2

S

Cigarette lighter.....

8-4 Interior light (room lamp)..... 8-5

Sheet

Front seats..... 4-2

Front seat heaters 4-4

Head restraints .....

4-7 Rear seats .....

4-5 Seat belts

Seat belts 4-9

How to store the rear seat belts .....

4-13 Seat belt warning light .....

5-8 Shift lever 6-6

Contact information for repairs Hydrophilic M

mirror door mirrors 6-18

Jack 13-8

Jacking up the vehicle 13-9

Charging warning light 5-6

Cleaning plastic parts 11-10

vinegar

Water temperature gauge..... 5-4

Speedometer.....5-3

Spare tire 13-11

S

Odometer.....5-3

Selector lever.....6-7 Center

cap.....13-16 Center

door lock.....3-5

Headlights.....5-9

Ta

tire

Air pressure.....14-8

Spare Tires .....13-11 Tire

Replacement .....13-13 Tire

and Wheel Sizes 14-7

Tire Wear 11-3

Tire rotation.....11-4

Chain 12-4

Tachometer 5-3

Handling turbocharged vehicles 6-6

M Please read the separate "Maintenance Notes" booklet.

Machine Translated by Google

blood

Child seat ..... 4-14 Parking brake

Parking brake ..... 6-15 Brake

warning light 5-7

Te

Periodic Inspection ..... M

Spark Plug 14-4

Differential Oil 14-3

to

Clock 8-5

Transfer oil 14-3

Transfer shift lever..... 7-2 Trip

meter..... 5-3

door

Locking and Unlocking 3-2

Center Door Lock 3-5

Door mirrors 6-16

Na

Interior care 11-5

two

Daily Inspection ..... M

N

Fuel 14-1

Fuel gauge ..... 5-4 Fuel

level warning light ..... 5-8 Fuel injector

cleaning ..... 11-2 Fuel filler port (fuel

lid) 3-10

Ha

Ashtray 8-3

Hydroplaning 2-7

Flares 13-7

Door ajar warning light ..... 5-8 Bio

clear filter ..... 9-8 Back

door ..... 3-11 Dead

battery ..... 13-17 Checking

and refilling battery fluid level ..... M

Vanity mirrors 8-2

Power windows 3-6

Power steering fluid 14-3

H

Emergency flasher switch..... 5-15

Fuses..... 13-24

Indicators ..... 5-5 Overdrive

indicator light ..... 6-10 Headlight Up

indicator light ..... 5-6 Turn Signal/

Emergency Flashers indicator light . 5-6 Front Fog

Lamp indicator light ..... 5-6 4WD Operation

indicator light ..... 7-4 Sun

visor 8-2

centre

Fade phenomenon ..... 2-7 Fog lamp

switch ..... 5-16 Fuel lid (fuel

filler) ..... 3-10 Front seats .....

4-2 Front wiper

Washer switch ..... 5-12 Brakes

Anti-lock

Brake System (ABS) .....

6-19 Brake fluid .....

14-3 Brake warning light 5-7

Checking and refilling brake fluid level .....

M

fart

Headlights (Headlights) 5-9

Headlight Up Indicator Lights 5-6

Machine Translated by Google

Headrest 4-7

H

Directional indication

Indicator light 5- 6

Lever 5-12

Horn switch..... 5-16

Ma

Manual air conditioning ..... 9-4 Manual transmission ..... 6-6 Shift lever ..... 6-6 Gear positions and speed ranges ..... 6-7 Manual transmission oil 14-3

M

mirror

Side under mirror.....6-18

Door mirrors.....6-16

Rearview mirror 6-16

M

Meters 5-2

Odometer ..... 5-3 Water temperature gauge 5-4

Speedometer 5-3

Tachometer ..... 5-3 Trip meter ..... 5-3 Fuel gauge 5-4

Yu

Oil Pressure Warning Light.....5-7

La

Light switch .....5-9 Luggage hooks .....8-7 Luggage floor box .....8-7 Lights Fog

lamps .....5-16 Interior lamps .....8-5 Wattage (service data) 14-5

R

Rear window defogger switch ..... 5-15 Rear seat ..... 4-5 How to store the rear seat belts ..... 4-13 Rear wiper/washer switch 5-13

R

Room mirror .....6-16 Room lamp (interior light) 8-5

R

Cooling water 14-3

Checking and refilling the cooling water level ..... M

W

Wipers

Front wiper switch.....5-12

Rear wiper switch.....5-13

Wiper washer switch 5-12

Wax 11-7

M Please read the separate "Maintenance Notes" booklet.

Machine Translated by Google

For economical driving • Try JC19A-Qb

not to carry unnecessary luggage. • Avoid revving the engine. • Avoid sudden starts and acceleration. • Shift gears correctly according to your speed. • Drive at a constant speed as much as possible. • Turn off the engine when parking the car for a long period of time. • Adjust the tire pressure to the specified pressure. • Keep the air conditioner at the appropriate temperature, taking care not to cool it too much. • For 4WD vehicles, drive in 2H (rear-wheel drive) on regular roads and expressways.

Genuine Parts Recommendations JB05A-Ic

• Use genuine parts that are best suited to your vehicle. • Genuine parts are the same parts used in our new vehicles, have passed rigorous inspections, and their quality is guaranteed. They can also be purchased through your Mitsubishi Motors dealer. • To ensure that your vehicle always maintains the same performance and comfortable ride as when it was new, consult your Mitsubishi Motors dealer when inspecting or replacing parts. • Using any parts or oils other than those specified by Mitsubishi Motors may cause breakdowns. • Genuine parts have the mark shown on the right.

If an accident occurs, do not panic JB13A-Ab

and take the following steps:

1. Prevent further accidents.
2. Provide first aid to the injured. 3. File a police report.
4. Identify and take note of the other party (name, address, phone number).
5. Contact the dealer and insurance company where you purchased the vehicle.

To prepare for the unexpected,

you should also enroll in voluntary automobile insurance in addition to compulsory automobile liability insurance (mandatory insurance). For details, please consult your Mitsubishi Motors dealer.